



INSTRUMENT PROCESSING SHEET

Agency Hialeah Police Departments/N 80-002463Florida Department of
Law EnforcementDate In 01/05/2021DI Completion Date 01/06/2021 Ship P/U H/D CMI EE

Intake Performed By <u>DERR</u> <input checked="" type="checkbox"/> Annual <input type="checkbox"/> Registration <input type="checkbox"/> Return from CMI / EE Visual Inspection: <input checked="" type="checkbox"/> Case <input checked="" type="checkbox"/> Handle <input checked="" type="checkbox"/> Keyboard <input checked="" type="checkbox"/> Dry Gas Shelf <input checked="" type="checkbox"/> Feet <input checked="" type="checkbox"/> Breath Tube <input type="checkbox"/> Ports <input type="checkbox"/> Screws Tight Other Equipment/ Accessories: <input type="checkbox"/> Power cord <input type="checkbox"/> Printer Cable <input checked="" type="checkbox"/> Static Bag <input type="checkbox"/> 12V DC Cable Notes: <u>Printer connector lose</u> Final Release Date FDLE Alcohol Testing Program Digitally signed by FDLE Alcohol Testing Program Date: 2021.01.08 09:03:10 -05'00'	Quality Checks Performed By <u>DERR</u> <input checked="" type="checkbox"/> Breath Tube Screen <input checked="" type="checkbox"/> Replace External O-Rings <input checked="" type="checkbox"/> Instrument Set Up Verified <input checked="" type="checkbox"/> R-Value <u>132</u> <input checked="" type="checkbox"/> Flow Verification (L/s) Flow Column # <u>ATP 104</u> 32 mm <u>0.132</u> (.139 - .169) 36 mm <u>0.156</u> (.156 - .190) 53 mm <u>0.218</u> (.228 - .278) 103 mm <u>0.484</u> (.447 - .547) <input checked="" type="checkbox"/> Barometric Pressure Check Gauge ID # <u>28663</u> <input checked="" type="checkbox"/> Stability Checks <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #/Exp</th> </tr> </thead> <tbody> <tr> <td>0.050</td> <td>SD3967</td> <td>202010A 10/05/2022</td> </tr> <tr> <td>0.080</td> <td>SD3968</td> <td>202010B 10/05/2022</td> </tr> <tr> <td>0.200</td> <td>SD3969</td> <td>202010D 10/06/2022</td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td>AG003005 01/30/2022</td> </tr> </tbody> </table>	Simulator	Serial #	Lot #/Exp	0.050	SD3967	202010A 10/05/2022	0.080	SD3968	202010B 10/05/2022	0.200	SD3969	202010D 10/06/2022	0.080 DGS	N/A	AG003005 01/30/2022	Flow Calibration Performed By <u>DERR</u> Flow Column # <u>ATP101</u> <input checked="" type="checkbox"/> 5L/min - 17mm <input checked="" type="checkbox"/> 15L/min - 53mm <input checked="" type="checkbox"/> 30L/min - 103mm <input checked="" type="checkbox"/> R-Value <u>132/133</u> <input checked="" type="checkbox"/> Post Calibration Verification (L/s) Flow Column # <u>ATP106</u> 32 mm <u>0.125/0.140</u> (.139 - .169) 36 mm <u>0.156/0.160</u> (.156 - .190) 53 mm <u>0.222/0.242</u> (.228 - .278) 103 mm <u>0.496/0.503</u> (.447 - .547) Maintenance Performed By <u>DERR</u> <input type="checkbox"/> Battery Replacement <input type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input checked="" type="checkbox"/> Other <u>Printer port secured/screws</u> Temperature Checks Performed By <u>DERR</u> <input checked="" type="checkbox"/> Lab Temp °C <u>23.19C</u> External Digital Therm. ID#: <u>300918</u> <input checked="" type="checkbox"/> 34°C +/- .2 Serial #: <u>SD3967</u> <input checked="" type="checkbox"/> 34°C +/- .2 Serial #: <u>SD3968</u> <input checked="" type="checkbox"/> 34°C +/- .2 Serial #: <u>SD3969</u>																																												
Simulator	Serial #	Lot #/Exp																																																											
0.050	SD3967	202010A 10/05/2022																																																											
0.080	SD3968	202010B 10/05/2022																																																											
0.200	SD3969	202010D 10/06/2022																																																											
0.080 DGS	N/A	AG003005 01/30/2022																																																											
Calibration Adjustment Performed By _____ Barometric Pressure Gauge ID # _____ <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> <th>Lot Number</th> <th>Expiration</th> </tr> </thead> <tbody> <tr> <td>0.000</td> <td></td> <td>N/A</td> <td>N/A</td> </tr> <tr> <td>0.040</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.100</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.200</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.300</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td></td> <td></td> </tr> </tbody> </table> <input type="checkbox"/> Post Calibration Adjustment Stability Checks <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> <th>Lot Number</th> <th>Expiration</th> </tr> </thead> <tbody> <tr> <td>0.050</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.200</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td></td> <td></td> </tr> </tbody> </table>	Simulator	Serial Number	Lot Number	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Simulator	Serial Number	Lot Number	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Department Inspection Performed By <u>DERR</u> Barometric Pressure ID# <u>28199</u> Gauge <u>1009</u> Instrument <u>1017</u> Mouth Alcohol Solution Lot # <u>2020-A</u> Acetone Stock Solution Lot # <u>2020-A</u> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> </tr> </thead> <tbody> <tr> <td>0.000</td> <td>SD3965</td> </tr> <tr> <td>Interferent</td> <td>SD3966</td> </tr> <tr> <td>0.050</td> <td>SD3967</td> </tr> <tr> <td>0.080</td> <td>SD3968</td> </tr> <tr> <td>0.200</td> <td>SD3969</td> </tr> </tbody> </table> Attachments <input checked="" type="checkbox"/> Form 41 <input type="checkbox"/> Post-Stability Checks <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Flow Calibration <input checked="" type="checkbox"/> Calibration Certificate <input checked="" type="checkbox"/> Form 40 <input type="checkbox"/> Calibration Adjustment <input type="checkbox"/> Other _____	Simulator	Serial Number	0.000	SD3965	Interferent	SD3966	0.050	SD3967	0.080	SD3968	0.200	SD3969
Simulator	Serial Number	Lot Number	Expiration																																																										
0.000		N/A	N/A																																																										
0.040																																																													
0.100																																																													
0.200																																																													
0.300																																																													
0.080 DGS	N/A																																																												
Simulator	Serial Number	Lot Number	Expiration																																																										
0.050																																																													
0.080																																																													
0.200																																																													
0.080 DGS	N/A																																																												
Simulator	Serial Number																																																												
0.000	SD3965																																																												
Interferent	SD3966																																																												
0.050	SD3967																																																												
0.080	SD3968																																																												
0.200	SD3969																																																												
Notes/Suggested Service: <u>Printer port secured, tighten screws. Calibrated flow twice to bring values closer to nominal. DERR</u> 	<input checked="" type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Return to/Place into Evidentiary Use <input type="checkbox"/> Remain Out of Evidentiary Use <input checked="" type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use <table style="width:100%;"> <tr> <td style="width:50%; text-align: center;"> 2021.01.06 <i>Michael D. Haughey</i> 08:55:13 -05'00' </td> <td style="width:50%; text-align: center;"> 2021.01.08 <i>SR</i> 08:58:35 -05'00' </td> </tr> <tr> <td style="text-align: center;">Tech Review / Date</td> <td style="text-align: center;">Admin Review / Date</td> </tr> </table>	2021.01.06 <i>Michael D. Haughey</i> 08:55:13 -05'00'	2021.01.08 <i>SR</i> 08:58:35 -05'00'	Tech Review / Date	Admin Review / Date																																																								
2021.01.06 <i>Michael D. Haughey</i> 08:55:13 -05'00'	2021.01.08 <i>SR</i> 08:58:35 -05'00'																																																												
Tech Review / Date	Admin Review / Date																																																												



Florida Department of Law Enforcement
 Alcohol Testing Program
 4700 Terminal Drive, Suite 1
 Ft. Myers, FL 33907

Calibration Certificate

This is to certify the calibration of Intoxilyzer 8000 serial number 80-002463, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-002463</u>	UNCERTAINTY* ±	
Owning Agency:	<u>HIALEAH PD</u>	0.050 g/ 210 L	0.004
Calibration Date:	<u>01/06/2021</u>	0.080 g/ 210 L	0.005
Calibration Time:	<u>01:34</u>	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence (k=3).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Thermometer temperatures are checked with NIST traceable Eutechnics 4400 digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the uses of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

01/06/2021

Date

DAVID E REYES-RIVERA,

Department Inspector

FDLE/ATP Form 69 April 2020

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality

Page 1 of 1

2021.01.
08
08:59:01
-05'00"

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: HIALEAH PD
Time of Inspection: 01:34

Date of Inspection: 01/06/2021

Serial Number: 80-002463
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202010A Exp: 10/05/2022	0.08g/210L Test (g/210L) Lot#:202010B Exp: 10/05/2022	0.20g/210L Test (g/210L) Lot#:202010D Exp: 10/06/2022	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG003005 Exp: 01/30/2022
0.000	0.050	0.079	0.199	0.080
0.000	0.050	0.080	0.199	0.080
0.000	0.050	0.080	0.199	0.080
0.000	0.050	0.080	0.199	0.080
0.000	0.050	0.080	0.200	0.080
0.000	0.050	0.081	0.200	0.080
0.000	0.050	0.081	0.200	0.080
0.000	0.051	0.080	0.200	0.080
0.000	0.050	0.081	0.200	0.080
0.000	0.050	0.080	0.200	0.080

Standard Deviations	0.0003	0.0006	0.0005	0.0000
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0003 Number of Simulators Used: 5

Remarks:

MX

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

David E Reyes-Rivera

DAVID E REYES-RIVERA

Signature and Printed Name

01/06/2021
Date

SR
2021.01.08 08:59:27 -05'00'

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-002463	Hialeah Police Department	01/06/2021	DERR

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L																																																																																																																																																
<p>0.047 to 0.053 <input checked="" type="checkbox"/></p> <p>HIACLEAH PD Intoxilyzer - Alconox Analyzer Model: 8000 01/05/2021 Software: 8100.27</p> <p>SN 80-002463</p>	<p>0.077 to 0.083 <input checked="" type="checkbox"/></p> <p>HIACLEAH PD Intoxilyzer - Alconox Analyzer Model: 8000 01/05/2021 Software: 8100.27</p> <p>SN 80-002463</p>	<p>0.194 to 0.206 <input checked="" type="checkbox"/></p> <p>HIACLEAH PD Intoxilyzer - Alconox Analyzer Model: 8000 01/06/2021 Software: 8100.27</p> <p>SN 80-002463</p>	<p>0.077 to 0.083 <input checked="" type="checkbox"/></p> <p>HIACLEAH PD Intoxilyzer - Alconox Analyzer Model: 8000 01/06/2021 Software: 8100.27</p> <p>SN 80-002463</p>																																																																																																																																																
<table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>23:51</td></tr> <tr><td>Control Test</td><td>0.049</td><td>23:52</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>23:52</td></tr> <tr><td>Control Test</td><td>0.050</td><td>23:53</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>23:53</td></tr> <tr><td>Control Test</td><td>0.050</td><td>23:54</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>23:55</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0497</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>1.1625</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	23:51	Control Test	0.049	23:52	Air Blank	0.000	23:52	Control Test	0.050	23:53	Air Blank	0.000	23:53	Control Test	0.050	23:54	Air Blank	0.000	23:55	Control Test Stats			Average	0.0497		Std Dev	0.0006		Rel Std Dev(%)	1.1625		<table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>23:55</td></tr> <tr><td>Control Test</td><td>0.081</td><td>23:56</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>23:57</td></tr> <tr><td>Control Test</td><td>0.080</td><td>23:58</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>23:59</td></tr> <tr><td>Control Test</td><td>0.080</td><td>23:59</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>23:59</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0803</td><td></td></tr> <tr><td>Std Dev</td><td>0.0005</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7187</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	23:55	Control Test	0.081	23:56	Air Blank	0.000	23:57	Control Test	0.080	23:58	Air Blank	0.000	23:59	Control Test	0.080	23:59	Air Blank	0.000	23:59	Control Test Stats			Average	0.0803		Std Dev	0.0005		Rel Std Dev(%)	0.7187		<table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>00:00</td></tr> <tr><td>Control Test</td><td>0.199</td><td>00:01</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>00:01</td></tr> <tr><td>Control Test</td><td>0.198</td><td>00:02</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>00:03</td></tr> <tr><td>Control Test</td><td>0.198</td><td>00:03</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>00:04</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.1983</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.2911</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	00:00	Control Test	0.199	00:01	Air Blank	0.000	00:01	Control Test	0.198	00:02	Air Blank	0.000	00:03	Control Test	0.198	00:03	Air Blank	0.000	00:04	Control Test Stats			Average	0.1983		Std Dev	0.0006		Rel Std Dev(%)	0.2911		<table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>00:05</td></tr> <tr><td>Control Test</td><td>0.081</td><td>00:06</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>00:06</td></tr> <tr><td>Control Test</td><td>0.080</td><td>00:06</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>00:07</td></tr> <tr><td>Control Test</td><td>0.081</td><td>00:07</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>00:08</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0807</td><td></td></tr> <tr><td>Std Dev</td><td>0.0005</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7157</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	00:05	Control Test	0.081	00:06	Air Blank	0.000	00:06	Control Test	0.080	00:06	Air Blank	0.000	00:07	Control Test	0.081	00:07	Air Blank	0.000	00:08	Control Test Stats			Average	0.0807		Std Dev	0.0005		Rel Std Dev(%)	0.7157	
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	23:51																																																																																																																																																	
Control Test	0.049	23:52																																																																																																																																																	
Air Blank	0.000	23:52																																																																																																																																																	
Control Test	0.050	23:53																																																																																																																																																	
Air Blank	0.000	23:53																																																																																																																																																	
Control Test	0.050	23:54																																																																																																																																																	
Air Blank	0.000	23:55																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0497																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	1.1625																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	23:55																																																																																																																																																	
Control Test	0.081	23:56																																																																																																																																																	
Air Blank	0.000	23:57																																																																																																																																																	
Control Test	0.080	23:58																																																																																																																																																	
Air Blank	0.000	23:59																																																																																																																																																	
Control Test	0.080	23:59																																																																																																																																																	
Air Blank	0.000	23:59																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0803																																																																																																																																																		
Std Dev	0.0005																																																																																																																																																		
Rel Std Dev(%)	0.7187																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	00:00																																																																																																																																																	
Control Test	0.199	00:01																																																																																																																																																	
Air Blank	0.000	00:01																																																																																																																																																	
Control Test	0.198	00:02																																																																																																																																																	
Air Blank	0.000	00:03																																																																																																																																																	
Control Test	0.198	00:03																																																																																																																																																	
Air Blank	0.000	00:04																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.1983																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.2911																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	00:05																																																																																																																																																	
Control Test	0.081	00:06																																																																																																																																																	
Air Blank	0.000	00:06																																																																																																																																																	
Control Test	0.080	00:06																																																																																																																																																	
Air Blank	0.000	00:07																																																																																																																																																	
Control Test	0.081	00:07																																																																																																																																																	
Air Blank	0.000	00:08																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0807																																																																																																																																																		
Std Dev	0.0005																																																																																																																																																		
Rel Std Dev(%)	0.7157																																																																																																																																																		
Operator's Signature	Operator's Signature	Operator's Signature	Operator's Signature																																																																																																																																																

2021.01.08
08:59:56
-05'00"
MAX

HIALEAH PD
Intoxilyzer - Alcomol Analyzer SN 86-002463
Model 8000
01/05/2021
Software: 8100.27

Flow Rate Calibration*****

1: Rate (Liters/min) = 5
SORT(Diff)) = 7.141
2: Rate (Liters/min) = 15
SORT(Diff)) = 11.783
3: Rate (Liters/min) = 30
SORT(Diff)) = 21.094
Dependent Data Scale Factor = 10000 L/min
Independent Data Scale Factor = 256
Rounded Slope = 698
Rounded Intercept = -569404
Correlation = 0.99716

Calibration 1

HIALEAH PD
Intoxilyzer - Alcomol Analyzer SN 86-002463
Model 8000
01/05/2021
Software: 8100.27

Flow Rate Calibration*****

1: Rate (Liters/min) = 5
SORT(Diff)) = 6.480
2: Rate (Liters/min) = 15
SORT(Diff)) = 11.574
3: Rate (Liters/min) = 30
SORT(Diff)) = 20.734
Dependent Data Scale Factor = 10000 L/min
Independent Data Scale Factor = 256
Rounded Slope = 660
Rounded Intercept = -563171
Correlation = 0.99883

Flow Calibration

SN:	80-002463
Agency:	Hialeah PD
Date:	1/5/2021
By:	DERR <i>NDR</i>

Calibration 2

NDR

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: HIALEAH PD
Time of Inspection: 23:02

Date of Inspection: 01/05/2021

Serial Number: 80-002463
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08g/210L Test (g/210L) Lot#: _____ Exp: _____	0.20g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: _____ Exp: _____

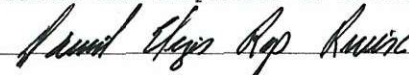
Number of Simulators Used: _____

Remarks:
COMPLIANCE NOT DETERMINED, AI NOT CONDUCTED.

MX
2021.0
1.08
09:01:54
-05'00"

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.


DAVID E REYES-RIVERA

 Signature and Printed Name

01/05/2021
 Date