



INSTRUMENT PROCESSING SHEET

Agency Hendry CSO

S/N 80-001207

Florida Department of Law Enforcement

Date In 3/15/2022

DI Completion Date 3/17/2022

Ship P/U H/D CMI EE

Intake	By TDG	Quality Checks	By TDG	Date <u>3/17/2022</u>	Flow Calibration	By	Date																																																																																
<input checked="" type="checkbox"/> Annual <input type="checkbox"/> Registration <input type="checkbox"/> Return from CMI / EE Visual Inspection: <input checked="" type="checkbox"/> Case <input checked="" type="checkbox"/> Handle <input checked="" type="checkbox"/> Keyboard <input checked="" type="checkbox"/> Dry Gas Shelf <input checked="" type="checkbox"/> Feet <input checked="" type="checkbox"/> Breath Tube <input checked="" type="checkbox"/> Ports <input checked="" type="checkbox"/> Screws Tight Other Equipment/ Accessories: <input type="checkbox"/> Power cord <input type="checkbox"/> Printer Cable <input type="checkbox"/> Static Bag <input type="checkbox"/> 12V DC Cable Notes: _____ _____ _____ _____ _____ _____ _____		<input checked="" type="checkbox"/> Breath Tube Screen <input checked="" type="checkbox"/> Replace External O-Rings <input checked="" type="checkbox"/> Instrument Set Up Verified <input checked="" type="checkbox"/> R-Value <u>176</u> <input checked="" type="checkbox"/> Flow Verification (L/s) Flow Column # <u>ATP104</u> 32 mm <u>0.152</u> (.139 - .169) 36 mm <u>0.171</u> (.156 - .190) 53 mm <u>0.234</u> (.228 - .278) 103 mm <u>0.492</u> (.447 - .547) <input checked="" type="checkbox"/> Barometric Pressure Check Gauge ID # <u>68639</u> <input checked="" type="checkbox"/> Stability Checks																																																																																					
				<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #/Exp</th> </tr> </thead> <tbody> <tr> <td>0.050</td> <td rowspan="2">MP6286</td> <td>202201C 01/11/2024</td> </tr> <tr> <td>0.080</td> <td>202201D 01/18/2024</td> </tr> <tr> <td>0.200</td> <td rowspan="2">MP6288</td> <td>202201E 01/18/2024</td> </tr> <tr> <td>0.080 DGS</td> <td>N/A AG115904 06/08/2023</td> </tr> </tbody> </table>				Simulator	Serial #	Lot #/Exp	0.050	MP6286	202201C 01/11/2024	0.080	202201D 01/18/2024	0.200	MP6288	202201E 01/18/2024	0.080 DGS	N/A AG115904 06/08/2023																																																																			
Simulator	Serial #	Lot #/Exp																																																																																					
0.050	MP6286	202201C 01/11/2024																																																																																					
0.080		202201D 01/18/2024																																																																																					
0.200	MP6288	202201E 01/18/2024																																																																																					
0.080 DGS		N/A AG115904 06/08/2023																																																																																					
				<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Maintenance</th> <th>By</th> </tr> </thead> <tbody> <tr> <td> <input type="checkbox"/> Battery Replacement <input type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other _____ </td> <td>_____</td> </tr> </tbody> </table>				Maintenance	By	<input type="checkbox"/> Battery Replacement <input type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other _____	_____																																																																												
Maintenance	By																																																																																						
<input type="checkbox"/> Battery Replacement <input type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other _____	_____																																																																																						
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">Calibration Adjustment</th> <th colspan="2">By</th> </tr> </thead> <tbody> <tr> <td colspan="4">Barometric Pressure Gauge _____ ID # _____</td> </tr> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> <tr> <td>0.000</td> <td></td> <td>N/A</td> <td>N/A</td> </tr> <tr> <td>0.040</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.100</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.200</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.300</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td></td> <td></td> </tr> </tbody> </table>				Calibration Adjustment		By		Barometric Pressure Gauge _____ ID # _____				Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">Department Inspection</th> <th colspan="2">By TDG</th> </tr> </thead> <tbody> <tr> <td colspan="4">Barometric Pressure ID# <u>28199</u></td> </tr> <tr> <td colspan="2">Gauge <u>1017</u></td> <td colspan="2">Instrument <u>1016</u></td> </tr> <tr> <td colspan="4">Mouth Alcohol Solution Lot # <u>2021-B</u></td> </tr> <tr> <td colspan="4">Acetone Stock Solution Lot # <u>2021-C</u></td> </tr> <tr> <th>Simulator</th> <th colspan="3">Serial Number</th> </tr> <tr> <td>0.000</td> <td colspan="3">MP6284</td> </tr> <tr> <td>Interferent</td> <td colspan="3">MP6285</td> </tr> <tr> <td>0.050</td> <td colspan="3">MP6286</td> </tr> <tr> <td>0.080</td> <td colspan="3">MP6287</td> </tr> <tr> <td>0.200</td> <td colspan="3">MP6288</td> </tr> </tbody> </table>				Department Inspection		By TDG		Barometric Pressure ID# <u>28199</u>				Gauge <u>1017</u>		Instrument <u>1016</u>		Mouth Alcohol Solution Lot # <u>2021-B</u>				Acetone Stock Solution Lot # <u>2021-C</u>				Simulator	Serial Number			0.000	MP6284			Interferent	MP6285			0.050	MP6286			0.080	MP6287			0.200	MP6288		
Calibration Adjustment		By																																																																																					
Barometric Pressure Gauge _____ ID # _____																																																																																							
Simulator	Serial #	Lot #	Expiration																																																																																				
0.000		N/A	N/A																																																																																				
0.040																																																																																							
0.100																																																																																							
0.200																																																																																							
0.300																																																																																							
0.080 DGS	N/A																																																																																						
Department Inspection		By TDG																																																																																					
Barometric Pressure ID# <u>28199</u>																																																																																							
Gauge <u>1017</u>		Instrument <u>1016</u>																																																																																					
Mouth Alcohol Solution Lot # <u>2021-B</u>																																																																																							
Acetone Stock Solution Lot # <u>2021-C</u>																																																																																							
Simulator	Serial Number																																																																																						
0.000	MP6284																																																																																						
Interferent	MP6285																																																																																						
0.050	MP6286																																																																																						
0.080	MP6287																																																																																						
0.200	MP6288																																																																																						
<input type="checkbox"/> Post Calibration Adjustment Stability Checks				<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Attachments</th> </tr> </thead> <tbody> <tr> <td> <input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment </td> <td> <input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input type="checkbox"/> Form 40 <input type="checkbox"/> Other _____ </td> </tr> </tbody> </table>				Attachments	<input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input type="checkbox"/> Form 40 <input type="checkbox"/> Other _____																																																																													
Attachments																																																																																							
<input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input type="checkbox"/> Form 40 <input type="checkbox"/> Other _____																																																																																						
Notes/Suggested Service: _____ _____ _____ _____ _____ _____				<input checked="" type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Return to/Place into Evidentiary Use <input type="checkbox"/> Remain Out of Evidentiary Use <input checked="" type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use																																																																																			
				<table style="width:100%;"> <tr> <td style="width:50%;"> David Eliezer Reyes-Rivera <small>Digitally signed by David Eliezer Reyes-Rivera Date: 2022.03.23 14:46:41 -0400</small> </td> <td style="width:50%; text-align: right;"> 2022 3.24 15:54:09 </td> </tr> <tr> <td>Tech Review / Date</td> <td>Admin. Review / Date</td> </tr> </table>				David Eliezer Reyes-Rivera <small>Digitally signed by David Eliezer Reyes-Rivera Date: 2022.03.23 14:46:41 -0400</small>	 2022 3.24 15:54:09	Tech Review / Date	Admin. Review / Date																																																																												
David Eliezer Reyes-Rivera <small>Digitally signed by David Eliezer Reyes-Rivera Date: 2022.03.23 14:46:41 -0400</small>	 2022 3.24 15:54:09																																																																																						
Tech Review / Date	Admin. Review / Date																																																																																						

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-001207	Hendry CSO	03/17/2022	TDG MK

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L																																																																																																																																																
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083																																																																																																																																																
✓	✓	✓	✓																																																																																																																																																
✓	✓	✓	✓																																																																																																																																																
<p>HENDRY COUNTY S.O. Intoxilyzer - Alcohol Analyzer Model 8000 03/17/2022 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>11:00</td></tr> <tr><td>Control Test</td><td>0.049</td><td>11:00</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:01</td></tr> <tr><td>Control Test</td><td>0.049</td><td>11:02</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:02</td></tr> <tr><td>Control Test</td><td>0.050</td><td>11:03</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:03</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0493</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>1.1703</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	11:00	Control Test	0.049	11:00	Air Blank	0.000	11:01	Control Test	0.049	11:02	Air Blank	0.000	11:02	Control Test	0.050	11:03	Air Blank	0.000	11:03	Control Test Stats			Average	0.0493		Std Dev	0.0006		Rel. Std Dev(%)	1.1703		<p>HENDRY COUNTY S.O. Intoxilyzer - Alcohol Analyzer Model 8000 03/17/2022 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>10:50</td></tr> <tr><td>Control Test</td><td>0.079</td><td>10:51</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:51</td></tr> <tr><td>Control Test</td><td>0.079</td><td>10:52</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:53</td></tr> <tr><td>Control Test</td><td>0.079</td><td>10:53</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:54</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0790</td><td></td></tr> <tr><td>Std Dev</td><td>0.0000</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>0.0000</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	10:50	Control Test	0.079	10:51	Air Blank	0.000	10:51	Control Test	0.079	10:52	Air Blank	0.000	10:53	Control Test	0.079	10:53	Air Blank	0.000	10:54	Control Test Stats			Average	0.0790		Std Dev	0.0000		Rel. Std Dev(%)	0.0000		<p>HENDRY COUNTY S.O. Intoxilyzer - Alcohol Analyzer Model 8000 03/17/2022 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>11:17</td></tr> <tr><td>Control Test</td><td>0.199</td><td>11:18</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:19</td></tr> <tr><td>Control Test</td><td>0.197</td><td>11:19</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:20</td></tr> <tr><td>Control Test</td><td>0.196</td><td>11:21</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:21</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.1973</td><td></td></tr> <tr><td>Std Dev</td><td>0.0015</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>0.7741</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	11:17	Control Test	0.199	11:18	Air Blank	0.000	11:19	Control Test	0.197	11:19	Air Blank	0.000	11:20	Control Test	0.196	11:21	Air Blank	0.000	11:21	Control Test Stats			Average	0.1973		Std Dev	0.0015		Rel. Std Dev(%)	0.7741		<p>HENDRY COUNTY S.O. Intoxilyzer - Alcohol Analyzer Model 8000 03/17/2022 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>11:06</td></tr> <tr><td>Control Test</td><td>0.080</td><td>11:06</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:07</td></tr> <tr><td>Control Test</td><td>0.080</td><td>11:07</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:08</td></tr> <tr><td>Control Test</td><td>0.080</td><td>11:08</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>11:09</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0800</td><td></td></tr> <tr><td>Std Dev</td><td>0.0000</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>0.0000</td><td></td></tr> </tbody> </table>	Test	g/210L	Time	Air Blank	0.000	11:06	Control Test	0.080	11:06	Air Blank	0.000	11:07	Control Test	0.080	11:07	Air Blank	0.000	11:08	Control Test	0.080	11:08	Air Blank	0.000	11:09	Control Test Stats			Average	0.0800		Std Dev	0.0000		Rel. Std Dev(%)	0.0000	
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	11:00																																																																																																																																																	
Control Test	0.049	11:00																																																																																																																																																	
Air Blank	0.000	11:01																																																																																																																																																	
Control Test	0.049	11:02																																																																																																																																																	
Air Blank	0.000	11:02																																																																																																																																																	
Control Test	0.050	11:03																																																																																																																																																	
Air Blank	0.000	11:03																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0493																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel. Std Dev(%)	1.1703																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	10:50																																																																																																																																																	
Control Test	0.079	10:51																																																																																																																																																	
Air Blank	0.000	10:51																																																																																																																																																	
Control Test	0.079	10:52																																																																																																																																																	
Air Blank	0.000	10:53																																																																																																																																																	
Control Test	0.079	10:53																																																																																																																																																	
Air Blank	0.000	10:54																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0790																																																																																																																																																		
Std Dev	0.0000																																																																																																																																																		
Rel. Std Dev(%)	0.0000																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	11:17																																																																																																																																																	
Control Test	0.199	11:18																																																																																																																																																	
Air Blank	0.000	11:19																																																																																																																																																	
Control Test	0.197	11:19																																																																																																																																																	
Air Blank	0.000	11:20																																																																																																																																																	
Control Test	0.196	11:21																																																																																																																																																	
Air Blank	0.000	11:21																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.1973																																																																																																																																																		
Std Dev	0.0015																																																																																																																																																		
Rel. Std Dev(%)	0.7741																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	11:06																																																																																																																																																	
Control Test	0.080	11:06																																																																																																																																																	
Air Blank	0.000	11:07																																																																																																																																																	
Control Test	0.080	11:07																																																																																																																																																	
Air Blank	0.000	11:08																																																																																																																																																	
Control Test	0.080	11:08																																																																																																																																																	
Air Blank	0.000	11:09																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0800																																																																																																																																																		
Std Dev	0.0000																																																																																																																																																		
Rel. Std Dev(%)	0.0000																																																																																																																																																		
<p>Operator's Signature</p> <p><i>MK</i></p>	<p>Operator's Signature</p> <p><i>MK</i></p>	<p>Operator's Signature</p> <p><i>MK</i></p>	<p>Operator's Signature</p> <p><i>MK</i></p>																																																																																																																																																

Comments:

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: HENDRY COUNTY S.O.
Time of Inspection: 15:18

Date of Inspection: 03/17/2022

Serial Number: 80-001207
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202201C Exp: 01/11/2024	0.08g/210L Test (g/210L) Lot#:202201D Exp: 01/18/2024	0.20g/210L Test (g/210L) Lot#:202201E Exp: 01/18/2024	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG115904 Exp: 06/08/2023
0.000	0.049	0.079	0.197	0.078
0.000	0.049	0.079	0.197	0.079
0.000	0.049	0.079	0.198	0.079
0.000	0.050	0.079	0.198	0.079
0.000	0.049	0.080	0.197	0.079
0.000	0.049	0.079	0.198	0.079
0.000	0.049	0.079	0.197	0.080
0.000	0.049	0.079	0.198	0.079
0.000	0.049	0.079	0.197	0.079
0.000	0.048	0.079	0.197	0.079


Standard Deviations	0.0004	0.0003	0.0005	0.0004
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5

Remarks:

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



TAYLOR D GUTSCHOW

Signature and Printed Name

03/17/2022
Date



Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

Calibration Certificate

This is to certify the calibration of Intoxilyzer 8000 serial number 80-001207, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-001207</u>	UNCERTAINTY* ±	
Owning Agency:	<u>HENDRY COUNTY S.O.</u>	0.050 g/ 210 L	0.004
Calibration Date:	<u>03/17/2022</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>15:18</u>	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005


All results are reported in g/ 210 L.
Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.
*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence (k=3).
The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.
This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

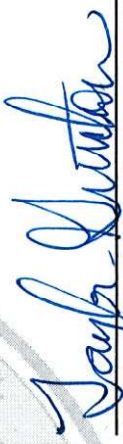

03/17/2022

Date

TAYLOR D GUTSCHOW,

Department Inspector

FDLE/ATP Form 69 December 2021
Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality