

Return Material Authorization

Ship to: ☒ CMI, Inc.

☐ Enforcement Electronics

Shipment to repair facility authorized by: Samuel Shelley on 11/6/2019

Items Returned: Instrument ☒ Supplies ☐ Other ☐ Describe: _____

Instrument Model: 8000 Serial Number: 80-000744

Bill To Address:

Samuel Shelley

Escambia County S.O.

1600 W. Leonard St.

Pensacola, FL 32501

Ship to Address:

FDLE Off-Site Mail Facility

c/o Florida Department of Law Enforcement

Alcohol Testing Program

813B Lake Bradford Road

Tallahassee FL 32304

Reason for Return:

Instrument was sent to CMI for repair for erratic alcohol readings. We received it back
and performed an inspection which demonstrated erratic alcohol readings. The owner
assumes that this will be a warranty repair, as the problem does not seem to have been
fixed.

Please choose one of the following options:

☐ 1. I _____, authorize all repairs.

☐ 2. I _____, authorize repairs up to \$_____.

☒ 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Samuel Shelley

Phone #: 850-384-2906

Email: slshelley@escambiaso.com

ATP Contact Name: Patrick Murphy

ATP Email: patrickmurphy@fdle.state.fl.us



INSTRUMENT PROCESSING SHEET

Florida Department of
Law EnforcementAgency Escambia CountyS/N 80-000744Date In 10/24/2019 DI Completion Date 11/5/19☒ Ship ☐ P/U ☐ H/D ☒ CMI ☐ EE

Intake	Performed By <u>DP</u>	Quality Checks	Performed By <u>gdm</u>	Flow Calibration	Performed By																																																												
☒ Annual ☐ Registration ☒ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: 		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>226</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP102</u> 32 mm <u>.148</u> (.139 - .169) 36 mm <u>.175</u> (.156 - .190) 53 mm <u>.256</u> (.228 - .278) 103 mm <u>.511</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>28421</u> ☒ Stability Checks		Flow Column # ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value ☐ Post Calibration Verification (L/s) Flow Column # 32 mm (.139 - .169) 36 mm (.156 - .190) 53 mm (.228 - .278) 103 mm (.447 - .547)																																																													
Final Release Date		<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td><u>501018</u></td><td><u>201905A</u> <u>5/14/21</u></td></tr><tr><td>0.080</td><td><u>503962</u></td><td><u>201905B</u> <u>5/14/21</u></td></tr><tr><td>0.200</td><td><u>G2078</u></td><td><u>201904D</u> <u>4/30/21</u></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td><u>AG916501</u> <u>6/14/21</u></td></tr></tbody></table>		Simulator	Serial #	Lot #/Exp	0.050	<u>501018</u>	<u>201905A</u> <u>5/14/21</u>	0.080	<u>503962</u>	<u>201905B</u> <u>5/14/21</u>	0.200	<u>G2078</u>	<u>201904D</u> <u>4/30/21</u>	0.080 DGS	N/A	<u>AG916501</u> <u>6/14/21</u>	Maintenance Performed By ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☐ Other Temperature Checks Performed By <u>gdm</u> ☒ Lab Temp °C <u>21.0</u> External Digital Therm. ID#: <u>300505</u> ☒ 34°C +/- .2 Serial #: <u>501018</u> ☒ 34°C +/- .2 Serial #: <u>503962</u> ☒ 34°C +/- .2 Serial #: <u>G2078</u>																																														
Simulator	Serial #	Lot #/Exp																																																															
0.050	<u>501018</u>	<u>201905A</u> <u>5/14/21</u>																																																															
0.080	<u>503962</u>	<u>201905B</u> <u>5/14/21</u>																																																															
0.200	<u>G2078</u>	<u>201904D</u> <u>4/30/21</u>																																																															
0.080 DGS	N/A	<u>AG916501</u> <u>6/14/21</u>																																																															
Calibration Adjustment Performed By		Department Inspection Performed By <u>gdm</u>																																																															
Barometric Pressure Gauge ID # <table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th><th>Lot Number</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table> ☐ Post Calibration Adjustment Stability Checks <table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th><th>Lot Number</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial Number	Lot Number	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Simulator	Serial Number	Lot Number	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Barometric Pressure ID# <u>28421</u> Gauge <u>1020</u> Instrument <u>1016</u> Mouth Alcohol Solution Lot # <u>2018-B</u> Acetone Stock Solution Lot # <u>2019-A</u> <table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td><u>G4444</u></td></tr><tr><td>Interferent</td><td><u>G6621</u></td></tr><tr><td>0.050</td><td><u>501018</u></td></tr><tr><td>0.080</td><td><u>503962</u></td></tr><tr><td>0.200</td><td><u>G2078</u></td></tr></tbody></table>				Simulator	Serial Number	0.000	<u>G4444</u>	Interferent	<u>G6621</u>	0.050	<u>501018</u>	0.080	<u>503962</u>	0.200	<u>G2078</u>
Simulator	Serial Number	Lot Number	Expiration																																																														
0.000		N/A	N/A																																																														
0.040																																																																	
0.100																																																																	
0.200																																																																	
0.300																																																																	
0.080 DGS	N/A																																																																
Simulator	Serial Number	Lot Number	Expiration																																																														
0.050																																																																	
0.080																																																																	
0.200																																																																	
0.080 DGS	N/A																																																																
Simulator	Serial Number																																																																
0.000	<u>G4444</u>																																																																
Interferent	<u>G6621</u>																																																																
0.050	<u>501018</u>																																																																
0.080	<u>503962</u>																																																																
0.200	<u>G2078</u>																																																																
Notes/Suggested Service: <u>ERRATIC READINGS</u> <u>SUGGEST REPAIR</u>		Attachments ☒ Form 41 ☐ Post-Stability Checks ☒ Stability Checks ☐ Flow Calibration ☒ Calibration Certificate ☒ Form 40 ☐ Calibration Adjustment ☐ Other ☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☐ Return to/Place into Evidentiary Use ☒ Remain Out of Evidentiary Use ☐ Conduct an Agency Inspection Before Evidentiary Use <u>SP 11/7/19</u> <u>1300/K.../11/7/19</u> Tech Review / Date Admin Review / Date																																																															

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: ESCAMBIA COUNTY SO
Time of Inspection: 12:07

Date of Inspection: 11/05/2019

Serial Number: 80-000744
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:201905A Exp: 05/14/2021	0.08g/210L Test (g/210L) Lot#:201905B Exp: 05/14/2021	0.20g/210L Test (g/210L) Lot#:201904D Exp: 04/30/2021	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG916501 Exp: 06/14/2021
0.000	0.048	0.078	0.199	0.073 / 0.079
0.000	0.049	0.078	0.201	0.076 / 0.078
0.000	0.049	0.079	0.201	0.078 / 0.078
0.000	0.049	0.079	0.201	0.079 / 0.079
0.000	0.049	0.079	0.201	0.081 / 0.080
0.000	0.049	0.079	0.201	0.081 / 0.081
0.000	0.050	0.079	0.201	0.082 / 0.080
0.000	0.049	0.078	0.201	0.082 / 0.080
0.000	0.050	0.079	0.202	0.083 / 0.081
0.000	0.049	0.079	0.201	0.082 / 0.081

Standard Deviations	0.0005	0.0004	0.0007	0.0031 / 0.0011
---------------------	--------	--------	--------	-----------------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0006 Number of Simulators Used: 5

Remarks:

08: Control Outside Tolerance SUSPECT REGULATOR.

SP
BK
11/1/19

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

Patrick J Murphy

PATRICK J MURPHY

Signature and Printed Name

11/05/2019
Date

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: ESCAMBIA COUNTY SO

Time of Inspection: 11:49

Date of Inspection: 11/04/2019

Serial Number: 80-000744

Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:_____ Exp:_____	0.08g/210L Test (g/210L) Lot#:_____ Exp:_____	0.20g/210L Test (g/210L) Lot#:_____ Exp:_____	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:_____ Exp:_____

Number of Simulators Used: _____

Remarks:

SKIPPED AI TO OPERATE INSTRUMENT

Not A Compliance check PGM

*SP
TSK
11/7/19*

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

Patrick J Murphy

PATRICK J MURPHY

Signature and Printed Name

11/04/2019
Date

ESCAMBIA COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000744
11/05/2019
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	08:47
Control Test	0.047	08:48
Air Blank	0.000	08:49
Control Test	0.048	08:49
Air Blank	0.000	08:50
Control Test	0.047	08:51
Air Blank	0.000	08:51
Control Test Stats		
Average	0.0473	
Std Dev	0.0006	
Rel Std Dev(%)	1.2198	

P Murphy
Operator's Signature

ESCAMBIA COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000744
11/05/2019
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	08:52
Control Test	0.077	08:53
Air Blank	0.000	08:54
Control Test	0.078	08:54
Air Blank	0.000	08:55
Control Test	0.078	08:56
Air Blank	0.000	08:56
Control Test Stats		
Average	0.0777	
Std Dev	0.0006	
Rel Std Dev(%)	0.7434	

P Murphy
Operator's Signature

ESCAMBIA COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000744
11/05/2019
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	08:57
Control Test	0.201	08:58
Air Blank	0.000	08:59
Control Test	0.199	08:59
Air Blank	0.000	09:00
Control Test	0.198	09:01
Air Blank	0.000	09:01
Control Test Stats		
Average	0.1993	
Std Dev	0.0015	
Rel Std Dev(%)	0.7663	

P Murphy
Operator's Signature

ESCAMBIA COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000744
11/05/2019
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	09:07
Control Test	0.079	09:07
Air Blank	0.000	09:08
Control Test	0.079	09:08
Air Blank	0.000	09:08
Control Test	0.079	09:09
Air Blank	0.000	09:09
Control Test Stats		
Average	0.0790	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

DGS

P Murphy
Operator's Signature

SP
BK
11/7/19



ANAB
ACCREDITED
ISO/IEC 17025
FORENSIC CALIBRATION
LABORATORY

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2729 Fort Knox Blvd.
Bldg. 2, Suite 1300
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000744, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000744</u>	UNCERTAINTY* $\pm$
Owning Agency:	<u>ESCAMBIA COUNTY SO</u>	0.050 g/ 210 L 0.004
Calibration Date:	<u>11/05/2019</u>	0.080 g/ 210 L 0.004
Calibration Time:	<u>12:07</u>	0.200 g/ 210 L 0.007
		0.080 g/ 210 L Dry Gas Control 0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.
*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Thermometer temperatures are checked with NIST traceable Eutechnics 4400 digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the uses of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

11/05/2019

Date

Patrick J Murphy

PATRICK J MURPHY,

Department Inspector

FDLE/ATP Form 69 July 2018

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality

SP BK 11/7/19

Return Material Authorization

Ship to:

☒ CMI, Inc.

☐ Enforcement Electronics

Shipment to repair facility authorized by: Samuel Shelley on 8/5/2019

Items Returned: Instrument ☒ Supplies ☐ Other ☐ Describe: _____

Instrument Model: 8000 Serial Number: 80-000744

Bill To Address:

Samuel Shelley

Escambia County Sheriff's Office

711 North Hayne St.

Pensacola, FL 32501

Ship to Address:

FDLE Off-Site Mail Facility

c/o Florida Department of Law Enforcement

Alcohol Testing Program

813B Lake Bradford Road

Tallahassee FL 32304

Reason for Return:

Erratic high readings in both simulator readings and dry gas (see attached).

Please choose one of the following options:

☐ 1. I _____, authorize all repairs.

☐ 2. I _____, authorize repairs up to \$_____.

☒ 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Samuel Shelley

Phone #: 850-384-2906

Email: slshelley@escambiaso.com

ATP Contact Name: Patrick Murphy

ATP Email: patrickmurphy@fdle.state.fl.us

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: ESCAMBIA COUNTY SO
Time of Inspection: 22:48

Date of Inspection: 07/19/2019

Serial Number: 80-000744
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK	Yes	
Alcohol Free Subject Test: 0.000	Yes	
Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes	
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:201802B Exp: 02/06/2020	0.08g/210L Test (g/210L) Lot#:201808E Exp: 08/22/2020	0.20g/210L Test (g/210L) Lot#:201802G Exp: 02/22/2020	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:792976 Exp: 06/06/2020
0.000	0.048	0.077	0.210	0.100 / 0.091
0.000	0.048	0.078	0.199	0.095 / 0.089
0.000	0.047	0.080	0.197	0.092 / 0.088

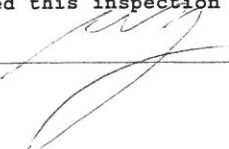
Number of Simulators Used: 5

Remarks:

08: Control Outside Tolerance, Control Outside Tolerance. Non-compliance: .

The above instrument complies () does not comply (X) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

 192 ECSC

 Signature and Printed Name
 Date



INSTRUMENT PROCESSING SHEET

Agency Escambia CountyS/N 80-000744Florida Department of
Law EnforcementDate In 7/26/2019 DI Completion Date _____☐ Ship ☐ P/U ☐ H/D ☐ CMI ☐ EE

Intake	Performed By <u>DP</u>	Quality Checks	Performed By _____	Flow Calibration	Performed By _____																																								
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: _____ _____ _____		☐ Breath Tube Screen ☐ Replace External O-Rings ☐ Instrument Set Up Verified ☐ R-Value _____ ☐ Flow Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547) ☐ Barometric Pressure Check Gauge ID # _____ ☐ Stability Checks		Flow Column # _____ ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																																									
Final Release Date		<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td></tr></tbody></table>	Simulator	Serial #	Lot #/Exp	0.050			0.080			0.200			0.080 DGS	N/A			Maintenance Performed By _____ ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☐ Other _____																										
Simulator	Serial #	Lot #/Exp																																											
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
				Temperature Checks Performed By _____ ☐ Lab Temp °C _____ External Digital Therm. ID#: _____ ☐ 34°C +/- .2 Serial #: _____ ☐ 34°C +/- .2 Serial #: _____ ☐ 34°C +/- .2 Serial #: _____																																									
Calibration Adjustment	Performed By _____	Department Inspection Performed By _____																																											
Barometric Pressure Gauge _____ ID # _____		Barometric Pressure ID# _____ Gauge _____ Instrument _____ Mouth Alcohol Solution Lot # _____ Acetone Stock Solution Lot # _____																																											
<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th><th>Lot Number</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>	Simulator	Serial Number	Lot Number	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A				<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td></td></tr><tr><td>Interferent</td><td></td></tr><tr><td>0.050</td><td></td></tr><tr><td>0.080</td><td></td></tr><tr><td>0.200</td><td></td></tr></tbody></table>				Simulator	Serial Number	0.000		Interferent		0.050		0.080		0.200	
Simulator	Serial Number	Lot Number	Expiration																																										
0.000		N/A	N/A																																										
0.040																																													
0.100																																													
0.200																																													
0.300																																													
0.080 DGS	N/A																																												
Simulator	Serial Number																																												
0.000																																													
Interferent																																													
0.050																																													
0.080																																													
0.200																																													
☐ Post Calibration Adjustment Stability Checks		Attachments ☐ Form 41 ☐ Post-Stability Checks ☐ Stability Checks ☐ Flow Calibration ☐ Calibration Certificate ☐ Form 40 ☐ Calibration Adjustment ☐ Other _____																																											
<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th><th>Lot Number</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>	Simulator	Serial Number	Lot Number	Expiration	0.050				0.080				0.200				0.080 DGS	N/A				☐ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☐ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☐ Conduct an Agency Inspection Before Evidentiary Use																							
Simulator	Serial Number	Lot Number	Expiration																																										
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
Notes/Suggested Service: _____ _____ _____ _____ _____		Tech Review / Date _____ Admin Review / Date _____																																											

ESCAMBIA COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000744
07/19/2019
Software: 8100.27

DRY CONTROL TEST

Test	g/210L	Time
Air Blank	0.000	22:54
Control Test	0.090	22:54
Air Blank	0.000	22:55

Operator's Signature

79Z976
CYL 7

ESCAMBIA COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-006435
07/19/2019
Software: 8100.27

DRY CONTROL TEST

Test	g/210L	Time
Air Blank	0.000	23:01
Control Test	0.081	23:01
Air Blank	0.000	23:02

Operator's Signature

792976
Cyl 7