

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-000812	Hernando CSO	04/23/2021	TDG <i>MS</i>

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

Test	9/21.0	9/21.0	9/21.0	9/21.0	Time
Air Blank	0.000	0.000	0.000	0.000	10:22
Control Test	0.052	0.082	0.201	0.080	10:23
Air Blank	0.000	0.000	0.000	0.000	10:23
Control Test	0.051	0.082	0.201	0.080	10:24
Air Blank	0.000	0.000	0.000	0.000	10:24
Control Test	0.051	0.081	0.201	0.080	10:25
Air Blank	0.000	0.000	0.000	0.000	10:25
Control Test Stats					10:26
Average	0.0513	0.0817	0.2010	0.0800	
Std Dev	0.0056	0.0006	0.0000	0.0000	
Rel Std Dev(%)	1.1247	0.7070	0.0000	0.0000	

Test	9/21.0	9/21.0	9/21.0	9/21.0	Time
Air Blank	0.000	0.000	0.000	0.000	10:40
Control Test	0.082	0.201	0.201	0.080	10:40
Air Blank	0.000	0.000	0.000	0.000	10:41
Control Test	0.082	0.201	0.201	0.080	10:42
Air Blank	0.000	0.000	0.000	0.000	10:42
Control Test	0.081	0.201	0.201	0.080	10:43
Air Blank	0.000	0.000	0.000	0.000	10:43
Control Test Stats					10:43
Average	0.0813	0.2010	0.2010	0.0800	
Std Dev	0.0056	0.0000	0.0000	0.0000	
Rel Std Dev(%)	1.1247	0.0000	0.0000	0.0000	

Test	9/21.0	9/21.0	9/21.0	9/21.0	Time
Air Blank	0.000	0.000	0.000	0.000	10:46
Control Test	0.080	0.201	0.201	0.080	10:46
Air Blank	0.000	0.000	0.000	0.000	10:47
Control Test	0.080	0.201	0.201	0.080	10:47
Air Blank	0.000	0.000	0.000	0.000	10:47
Control Test	0.080	0.201	0.201	0.080	10:48
Air Blank	0.000	0.000	0.000	0.000	10:48
Control Test Stats					10:48
Average	0.0800	0.2010	0.2010	0.0800	
Std Dev	0.0000	0.0000	0.0000	0.0000	
Rel Std Dev(%)	0.0000	0.0000	0.0000	0.0000	

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

-HERNANDO COUNTY S.O.
 Intoxilyzer - Alcohol Analyzer
 Model 8000 SN 60-000812
 04/23/2021
 Software: 8100.27

Comments:

 OPERATOR'S SIGNATURE

Flow Calibration

80-000812

TMG 4/23/2021

HERNANDO CO NTY S.O.
Intoxilyzer - Alcohol Analyzer
Model 800 SN 80-000812
04/23/2021
Software: 8100.27

Flow Rate Calibration*****
1: Rate (Liters/min) = 5
SOR (Diff) = 7.000
2: Rate (Liters/min) = 15
SOR (Diff) = 11.531
3: Rate (Liters/min) = 30
SOR (Diff) = 20.688
Dependent Data Scale Factor = 10000 L/min
Independent Data Scale Factor = 256
Rounded Slope = 703
Rounded Intercept = -685353
Correlation = 0.95698

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: HERNANDO COUNTY S.O.
Time of Inspection: 13:19

Date of Inspection: 04/23/2021

Serial Number: 80-000812
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202010A Exp: 10/05/2022	0.08g/210L Test (g/210L) Lot#:202010B Exp: 10/05/2022	0.20g/210L Test (g/210L) Lot#:202010D Exp: 10/05/2022	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG026705 Exp: 09/23/2022
0.000	0.050	0.082	0.201	0.080
0.000	0.052	0.082	0.201	0.079
0.000	0.051	0.081	0.201	0.080
0.000	0.051	0.080	0.201	0.079
0.000	0.051	0.079	0.199	0.079
0.000	0.051	0.079	0.198	0.080
0.000	0.051	0.080	0.198	0.080
0.000	0.051	0.079	0.200	0.079
0.000	0.051	0.080	0.201	0.080
0.000	0.051	0.079	0.202	0.080

Standard Deviations	0.0004	0.0011	0.0013	0.0005
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0008 Number of Simulators Used: 5

Remarks:

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

Taylor D Gutschow TAYLOR D GUTSCHOW
Signature and Printed Name

04/23/2021
Date



Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000812, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000812</u>	UNCERTAINTY* ±	
Owning Agency:	<u>HERNANDO COUNTY S.O.</u>	0.050 g/ 210 L	0.005
Calibration Date:	<u>04/23/2021</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>13:19</u>	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/210 L.
Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.
*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence (k=3).
The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Thermometer temperatures are checked with NIST traceable Eutechnics 4400 digital thermometers calibrated by Precision Metrology in accordance with ISO/IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the uses of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.
This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

04/23/2021 _____ Date
Jayb Guttschow _____
TAYLOR D GUTSCHOW,
Department Inspector

FDLE/ATP Form 69 January 2021
Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality



Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000812, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000812</u>	UNCERTAINTY* ±	
Owning Agency:	<u>HERNANDO COUNTY S.O.</u>	0.050 g/ 210 L	0.005
Calibration Date:	<u>02/01/2021</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>14:03</u>	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence (k=3).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Thermometer temperatures are checked with NIST traceable Eutechnics 4400 digital thermometers calibrated by Precision Metrology in accordance with ISO/IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the uses of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

02/01/2021

Date

DAVID E REYES-RIVERA,

Department Inspector

FDLE/ATP Form 69 January 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: HERNANDO COUNTY S.O.
Time of Inspection: 14:03

Date of Inspection: 02/01/2021

Serial Number: 80-000812
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202010A Exp: 10/05/2022	0.08g/210L Test (g/210L) Lot#:202010B Exp: 10/05/2022	0.20g/210L Test (g/210L) Lot#:202010D Exp: 10/06/2022	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG003005 Exp: 01/30/2022
0.000	0.048	0.079	0.198	0.080
0.000	0.050	0.081	0.201	0.081
0.000	0.050	0.081	0.202	0.080
0.000	0.050	0.080	0.201	0.081
0.000	0.051	0.080	0.203	0.081
0.000	0.050	0.081	0.201	0.080
0.000	0.050	0.080	0.201	0.081
0.000	0.050	0.081	0.201	0.080
0.000	0.051	0.082	0.201	0.081
0.000	0.051	0.081	0.201	0.081

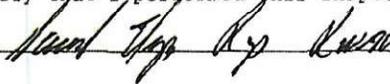
Standard Deviations	0.0008	0.0008	0.0012	0.0005
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0008 Number of Simulators Used: 5

Remarks:

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

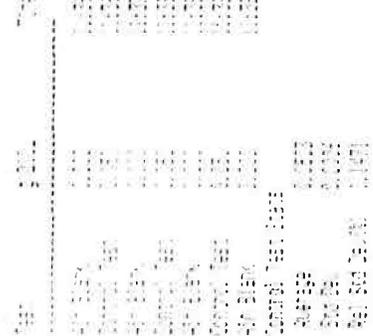
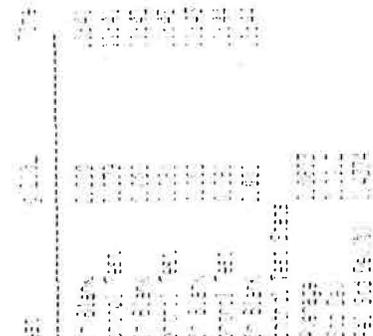
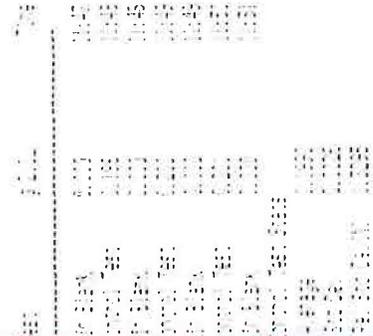
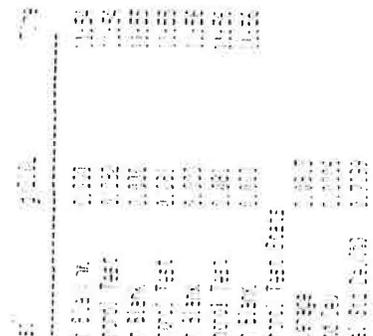
I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.


DAVID E REYES-RIVERA

 Signature and Printed Name

02/01/2021
 Date

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-000812	Hernando County Sheriff's Office	2/1/2021	DERR

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L
<input checked="" type="checkbox"/> 0.047 to 0.053 	<input checked="" type="checkbox"/> 0.077 to 0.083 	<input checked="" type="checkbox"/> 0.194 to 0.206 	<input checked="" type="checkbox"/> 0.077 to 0.083 
			
			

HERNANDO COUNTY S.C.
IncoX Analyzer - R. COND. ANALYZER
Model 8000 SN 80-000812
02/01/2021
Software: 8100.27

Flow Rate Calibration*****
1: Rate (Liters/min) = 5
SORT(DIFF) = 7.414
2: Rate (Liters/min) = 15
SORT(DIFF) = 11.871
3: Rate (Liters/min) = 30
SORT(DIFF) = 21.516
Dependent Data Scale Factor = 100000 L/min
Independent Data Scale Factor = 256
Rounded Slope = 736
Rounded Intercept = -833687
Correlation = 1.99772

HERNANDO COUNTY S.C.
IncoX Analyzer - R. COND. ANALYZER
Model 8000 SN 80-000812
02/01/2021
Software: 8100.27

Flow Rate Calibration*****
1: Rate (Liters/min) = 5
SORT(DIFF) = 3.635
2: Rate (Liters/min) = 15
SORT(DIFF) = 9.349
3: Rate (Liters/min) = 30
SORT(DIFF) = 19.665
Dependent Data Scale Factor = 100000 L/min
Independent Data Scale Factor = 256
Rounded Slope = 608
Rounded Intercept = -57186
Correlation = 0.99999

Flow Calibration	
SN:	80-000812
Agency: Hernando County Sheriff's Office	
Date:	2/1/2021
By:	DERR

Return Material Authorization

Ship to: CMI, Inc.
 Enforcement Electronics

Shipment to repair facility authorized by: Brad Collito on 11/04/2021

Items Returned: Instrument Supplies Other Describe: _____

Instrument Model: Intoxilyzer 8000 Serial Number: 80-000812

Bill To Address:
Hernando County Sheriff's Office
Attn: Brad Collito
16425 Springhill Drive
Brooksville, FL 34601

Ship to Address:
Florida Department of Law Enforcement
Fort Myers Regional Operations Center
Attn: Taylor Gutschow (Alcohol Testing)
4700 Terminal Drive, Suite 1
Fort Myers, FL 33907

Reason for Return:

Instrument will not power on. Was unable to evaluate if there are records remaining on the instrument and was also unable to attempt uploading due to power issues.

Please choose one of the following options:

- 1. I _____, authorize all repairs.
- 2. I _____, authorize repairs up to \$_____.
- 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Brad Collito
Phone #: 352-544-2334 Email: bcollito@hernandosheriff.org

ATP Contact Name: Taylor Gutschow ATP Email: TaylorGutschow@fdle.state.fl.us



INSTRUMENT PROCESSING SHEET

Agency Hernando CSOS/N 80-000812

Florida Department of Law Enforcement

Date In 10/20/2021 DI Completion Date _____ Ship P/U H/D CMI EE

Intake	By TDG	Quality Checks	By	Date	Flow Calibration	By	Date																																																																																																			
<input checked="" type="checkbox"/> Annual <input type="checkbox"/> Registration <input type="checkbox"/> Return from CMI / EE Visual Inspection: <input checked="" type="checkbox"/> Case <input checked="" type="checkbox"/> Handle <input checked="" type="checkbox"/> Keyboard <input checked="" type="checkbox"/> Dry Gas Shelf <input checked="" type="checkbox"/> Feet <input checked="" type="checkbox"/> Breath Tube <input checked="" type="checkbox"/> Ports <input checked="" type="checkbox"/> Screws Tight Other Equipment/ Accessories: <input checked="" type="checkbox"/> Power cord <input type="checkbox"/> Printer Cable <input checked="" type="checkbox"/> Static Bag <input type="checkbox"/> 12V DC Cable Notes: AI Collito reports that the instrument will not power on and he cannot conduct the monthly inspection. AI filled out a blank Form 40 and submitted with the instrument.		<input type="checkbox"/> Breath Tube Screen <input type="checkbox"/> Replace External O-Rings <input type="checkbox"/> Instrument Set Up Verified <input type="checkbox"/> R-Value _____ <input type="checkbox"/> Flow Verification (L/s) Flow Column # _____ 32 mm <u>0.</u> _____ (.139 - .169) 36 mm <u>0.</u> _____ (.156 - .190) 53 mm <u>0.</u> _____ (.228 - .278) 103 mm <u>0.</u> _____ (.447 - .547) <input type="checkbox"/> Barometric Pressure Check Gauge ID # _____ <input type="checkbox"/> Stability Checks			Flow Column # _____ <input type="checkbox"/> 5L/min – 17mm <input type="checkbox"/> 15L/min – 53mm <input type="checkbox"/> 30L/min – 103mm <input type="checkbox"/> R-Value _____ <input type="checkbox"/> Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																																																																																																					
			<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #/Exp</th> </tr> </thead> <tbody> <tr><td>0.050</td><td></td><td></td></tr> <tr><td>0.080</td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td></tr> </tbody> </table>		Simulator	Serial #	Lot #/Exp	0.050			0.080			0.200			0.080 DGS	N/A		<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Maintenance</th> <th>By</th> </tr> </thead> <tbody> <tr><td><input type="checkbox"/> Battery Replacement</td><td></td></tr> <tr><td><input type="checkbox"/> Dry Gas Regulator Replacement</td><td></td></tr> <tr><td><input type="checkbox"/> Breath Tube Replacement</td><td></td></tr> <tr><td><input type="checkbox"/> Other _____</td><td></td></tr> </tbody> </table>				Maintenance	By	<input type="checkbox"/> Battery Replacement		<input type="checkbox"/> Dry Gas Regulator Replacement		<input type="checkbox"/> Breath Tube Replacement		<input type="checkbox"/> Other _____																																																																										
Simulator	Serial #	Lot #/Exp																																																																																																								
0.050																																																																																																										
0.080																																																																																																										
0.200																																																																																																										
0.080 DGS	N/A																																																																																																									
Maintenance	By																																																																																																									
<input type="checkbox"/> Battery Replacement																																																																																																										
<input type="checkbox"/> Dry Gas Regulator Replacement																																																																																																										
<input type="checkbox"/> Breath Tube Replacement																																																																																																										
<input type="checkbox"/> Other _____																																																																																																										
			<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>DI Temp. Checks</th> <th>By</th> </tr> </thead> <tbody> <tr><td><input type="checkbox"/> Lab Temp °C _____</td><td></td></tr> <tr><td>External Digital Therm. ID#: _____</td><td></td></tr> <tr><td><input type="checkbox"/> 34°C +/- .2 Serial #: _____</td><td></td></tr> <tr><td><input type="checkbox"/> 34°C +/- .2 Serial #: _____</td><td></td></tr> <tr><td><input type="checkbox"/> 34°C +/- .2 Serial #: _____</td><td></td></tr> </tbody> </table>		DI Temp. Checks	By	<input type="checkbox"/> Lab Temp °C _____		External Digital Therm. ID#: _____		<input type="checkbox"/> 34°C +/- .2 Serial #: _____		<input type="checkbox"/> 34°C +/- .2 Serial #: _____		<input type="checkbox"/> 34°C +/- .2 Serial #: _____																																																																																											
DI Temp. Checks	By																																																																																																									
<input type="checkbox"/> Lab Temp °C _____																																																																																																										
External Digital Therm. ID#: _____																																																																																																										
<input type="checkbox"/> 34°C +/- .2 Serial #: _____																																																																																																										
<input type="checkbox"/> 34°C +/- .2 Serial #: _____																																																																																																										
<input type="checkbox"/> 34°C +/- .2 Serial #: _____																																																																																																										
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Callibration Adjustment</th> <th>By</th> </tr> </thead> <tbody> <tr><td>Barometric Pressure Gauge _____ ID # _____</td><td></td></tr> <tr> <td> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr> <tr><td>0.040</td><td></td><td></td><td></td></tr> <tr><td>0.100</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.300</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table> </td> <td></td> </tr> <tr> <td colspan="2"><input type="checkbox"/> Post Calibration Adjustment Stability Checks</td> <td></td> <td></td> </tr> <tr> <td> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.050</td><td></td><td></td><td></td></tr> <tr><td>0.080</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table> </td> <td></td> </tr> </tbody> </table>				Callibration Adjustment	By	Barometric Pressure Gauge _____ ID # _____		<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr> <tr><td>0.040</td><td></td><td></td><td></td></tr> <tr><td>0.100</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.300</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table>	Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A				<input type="checkbox"/> Post Calibration Adjustment Stability Checks				<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.050</td><td></td><td></td><td></td></tr> <tr><td>0.080</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table>	Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A				<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Department Inspection</th> <th>By</th> </tr> </thead> <tbody> <tr><td>Barometric Pressure ID# _____</td><td></td></tr> <tr><td>Gauge _____ Instrument _____</td><td></td></tr> <tr><td>Mouth Alcohol Solution Lot # _____</td><td></td></tr> <tr><td>Acetone Stock Solution Lot # _____</td><td></td></tr> <tr> <td> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td></tr> <tr><td>Interferent</td><td></td></tr> <tr><td>0.050</td><td></td></tr> <tr><td>0.080</td><td></td></tr> <tr><td>0.200</td><td></td></tr> </tbody> </table> </td> <td></td> </tr> <tr> <td colspan="2"> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Attachments</th> </tr> </thead> <tbody> <tr><td><input type="checkbox"/> Form 41</td><td><input type="checkbox"/> Post-Stability Checks</td></tr> <tr><td><input type="checkbox"/> Stability Checks</td><td><input type="checkbox"/> Flow Calibration</td></tr> <tr><td><input type="checkbox"/> Calibration Certificate</td><td><input checked="" type="checkbox"/> Form 40</td></tr> <tr><td><input type="checkbox"/> Calibration Adjustment</td><td><input type="checkbox"/> Other _____</td></tr> </tbody> </table> </td> </tr> <tr> <td colspan="2"> <input type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input type="checkbox"/> Return to/Place into Evidentiary Use <input checked="" type="checkbox"/> Remain Out of Evidentiary Use <input type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use </td> </tr> <tr> <td colspan="2"> Tech Review / Date _____ Admin Review / Date _____ </td> </tr> </tbody> </table>				Department Inspection	By	Barometric Pressure ID# _____		Gauge _____ Instrument _____		Mouth Alcohol Solution Lot # _____		Acetone Stock Solution Lot # _____		<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td></tr> <tr><td>Interferent</td><td></td></tr> <tr><td>0.050</td><td></td></tr> <tr><td>0.080</td><td></td></tr> <tr><td>0.200</td><td></td></tr> </tbody> </table>	Simulator	Serial Number	0.000		Interferent		0.050		0.080		0.200			<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Attachments</th> </tr> </thead> <tbody> <tr><td><input type="checkbox"/> Form 41</td><td><input type="checkbox"/> Post-Stability Checks</td></tr> <tr><td><input type="checkbox"/> Stability Checks</td><td><input type="checkbox"/> Flow Calibration</td></tr> <tr><td><input type="checkbox"/> Calibration Certificate</td><td><input checked="" type="checkbox"/> Form 40</td></tr> <tr><td><input type="checkbox"/> Calibration Adjustment</td><td><input type="checkbox"/> Other _____</td></tr> </tbody> </table>		Attachments	<input type="checkbox"/> Form 41	<input type="checkbox"/> Post-Stability Checks	<input type="checkbox"/> Stability Checks	<input type="checkbox"/> Flow Calibration	<input type="checkbox"/> Calibration Certificate	<input checked="" type="checkbox"/> Form 40	<input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Other _____	<input type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input type="checkbox"/> Return to/Place into Evidentiary Use <input checked="" type="checkbox"/> Remain Out of Evidentiary Use <input type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use		Tech Review / Date _____ Admin Review / Date _____	
Callibration Adjustment	By																																																																																																									
Barometric Pressure Gauge _____ ID # _____																																																																																																										
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr> <tr><td>0.040</td><td></td><td></td><td></td></tr> <tr><td>0.100</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.300</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table>	Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A																																																																																
Simulator	Serial #	Lot #	Expiration																																																																																																							
0.000		N/A	N/A																																																																																																							
0.040																																																																																																										
0.100																																																																																																										
0.200																																																																																																										
0.300																																																																																																										
0.080 DGS	N/A																																																																																																									
<input type="checkbox"/> Post Calibration Adjustment Stability Checks																																																																																																										
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.050</td><td></td><td></td><td></td></tr> <tr><td>0.080</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table>	Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A																																																																																								
Simulator	Serial #	Lot #	Expiration																																																																																																							
0.050																																																																																																										
0.080																																																																																																										
0.200																																																																																																										
0.080 DGS	N/A																																																																																																									
Department Inspection	By																																																																																																									
Barometric Pressure ID# _____																																																																																																										
Gauge _____ Instrument _____																																																																																																										
Mouth Alcohol Solution Lot # _____																																																																																																										
Acetone Stock Solution Lot # _____																																																																																																										
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td></tr> <tr><td>Interferent</td><td></td></tr> <tr><td>0.050</td><td></td></tr> <tr><td>0.080</td><td></td></tr> <tr><td>0.200</td><td></td></tr> </tbody> </table>	Simulator	Serial Number	0.000		Interferent		0.050		0.080		0.200																																																																																															
Simulator	Serial Number																																																																																																									
0.000																																																																																																										
Interferent																																																																																																										
0.050																																																																																																										
0.080																																																																																																										
0.200																																																																																																										
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Attachments</th> </tr> </thead> <tbody> <tr><td><input type="checkbox"/> Form 41</td><td><input type="checkbox"/> Post-Stability Checks</td></tr> <tr><td><input type="checkbox"/> Stability Checks</td><td><input type="checkbox"/> Flow Calibration</td></tr> <tr><td><input type="checkbox"/> Calibration Certificate</td><td><input checked="" type="checkbox"/> Form 40</td></tr> <tr><td><input type="checkbox"/> Calibration Adjustment</td><td><input type="checkbox"/> Other _____</td></tr> </tbody> </table>		Attachments	<input type="checkbox"/> Form 41	<input type="checkbox"/> Post-Stability Checks	<input type="checkbox"/> Stability Checks	<input type="checkbox"/> Flow Calibration	<input type="checkbox"/> Calibration Certificate	<input checked="" type="checkbox"/> Form 40	<input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Other _____																																																																																																
Attachments																																																																																																										
<input type="checkbox"/> Form 41	<input type="checkbox"/> Post-Stability Checks																																																																																																									
<input type="checkbox"/> Stability Checks	<input type="checkbox"/> Flow Calibration																																																																																																									
<input type="checkbox"/> Calibration Certificate	<input checked="" type="checkbox"/> Form 40																																																																																																									
<input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Other _____																																																																																																									
<input type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input type="checkbox"/> Return to/Place into Evidentiary Use <input checked="" type="checkbox"/> Remain Out of Evidentiary Use <input type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use																																																																																																										
Tech Review / Date _____ Admin Review / Date _____																																																																																																										
Notes/Suggested Service: <u>Cannot get instrument to power on. Will send to repair (TDG)</u>																																																																																																										

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: HERNANDO COUNTY S.O.

Serial Number: 80-000812

Time of Inspection: 12:45 Date of Inspection: 10/18/2021

Software: 8100.27

CHECK OR TEST	YES	NO
Date and/or Time Adjusted		X
Diagnostic Check (Pre-Inspection): OK		X
Alcohol Free Subject Test: 0.000		X
Mouth Alcohol Test: Slope Not Met		X
Interferent Detect Test: Interferent Detect		X
Diagnostic Check (Post-Inspection): OK		X

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08g/210L Test (g/210L) Lot#: _____ Exp: _____	0.20g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: _____ Exp: _____

Number of Simulators Used: 0

Remarks: Instrument will not power on. Agency Inspection was not able to be completed due to being unable to power on. Instrument will be shipped to FDLE and then on to CMI, Inc. for diagnosis/ repair.

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

BC-1193

Deputy Brad Collito #1193

Signature and Printed Name

10/18/2021
Date