



INSTRUMENT PROCESSING SHEET

Agency Manatee CSOS/N 80-000907Florida Department of
Law EnforcementDate In 1/13/2022 DI Completion Date 1/13/2022 ☐ Ship ☒ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By TDG	Quality Checks	By TDG	Date <u>1/13/2022</u>	Flow Calibration	By	Date
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☐ Static Bag ☐ 12V DC Cable Notes: AI Coleman reports the 0.05 ARS read below nominal range at last AI. (TDG)		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>214</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP104</u> 32 mm <u>0.167</u> (.139 - .169) 36 mm <u>0.183</u> (.156 - .190) 53 mm <u>0.250</u> (.228 - .278) 103 mm <u>0.511</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>28663</u> ☒ Stability Checks			Flow Column # _____ ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)		
					Maintenance By _____ ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☐ Other _____		

Simulator	Serial #	Lot #/Exp
0.050	MP5092	202010A 10/05/2022
0.080	MP4864	202010B 10/05/2022
0.200	MP5094	202010D 10/06/2022
0.080 DGS	N/A	AG115904 06/08/2023

Calibration Adjustment				By
Barometric Pressure Gauge _____ ID # _____				
Simulator	Serial #	Lot #	Expiration	
0.000		N/A	N/A	
0.040				
0.100				
0.200				
0.300				
0.080 DGS	N/A			
☐ Post Calibration Adjustment Stability Checks				
Simulator	Serial #	Lot #	Expiration	
0.050				
0.080				
0.200				
0.080 DGS	N/A			

Department Inspection		By	TDG
Barometric Pressure ID# <u>28663</u>			
Gauge <u>1017</u> Instrument <u>1016</u>			
Mouth Alcohol Solution Lot # <u>2021-B</u>			
Acetone Stock Solution Lot # <u>2020-A</u>			
Simulator	Serial Number		
0.000	SD3963		
Interferent	SD1017		
0.050	MP5092		
0.080	MP4864		
0.200	MP5094		

Attachments	
☒ Form 41 ☒ Stability Checks ☒ Calibration Certificate ☐ Calibration Adjustment	☐ Post-Stability Checks ☐ Flow Calibration ☒ Form 40 ☐ Other _____

☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use

Notes/Suggested Service: Spoke to AI Coleman. Could not duplicate the low 0.05 ARS readings he described. May be due to condensation buildup in his sims since they sat for a while between batches. Will conduct a field visit and observe his AI if it occurs again. (TDG)	David Eliezer Reyes-Rivera Digitally signed by David Eliezer Reyes-Rivera Date: 2022.01.13 14:31:47 -05'00'	2022.01.14 09:10:13
--	---	----------------------------

Tech Review / Date	Admin Review / Date
--------------------	---------------------

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: MANATEE COUNTY SO

Time of Inspection: 11:08

Date of Inspection: 01/13/2022

Serial Number: 80-000907

Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: _____

Remarks:

BYPASSED AI TO OPERATE INSTRUMENT

Not determined 26
1/13/2022

The above instrument complies (☒) does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

Taylor D Gutschow

TAYLOR D GUTSCHOW

Signature and Printed Name

01/13/2022
Date

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-000907	Manatee CSO	01/13/2022	TDG MG

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083
✓	✓	✓	✓
Inadvertently printed to external printer. Results within the acceptable range and will be attached. MG 11/13/2022	MANATEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 01/13/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:29 Control Test 0.079 11:30 Air Blank 0.000 11:31 Control Test 0.079 11:32 Air Blank 0.000 11:33 Control Test 0.080 11:33 Control Test Stats Average 0.0793 Std Dev 0.0006 Rel Std Dev(%) 0.7277	MANATEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 01/13/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:38 Control Test 0.198 11:39 Air Blank 0.000 11:39 Control Test 0.198 11:40 Air Blank 0.000 11:41 Control Test 0.199 11:41 Air Blank 0.000 11:42 Control Test Stats Average 0.1983 Std Dev 0.0006 Rel Std Dev(%) 0.2911	MANATEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 01/13/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:34 Control Test 0.078 11:34 Air Blank 0.000 11:35 Control Test 0.078 11:35 Air Blank 0.000 11:35 Control Test 0.079 11:36 Air Blank 0.000 11:36 Control Test Stats Average 0.0783 Std Dev 0.0006 Rel Std Dev(%) 0.7370
	Operator's Signature MG	Operator's Signature MG	Operator's Signature MG

Comments:

MANATEE COUNTY SO
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000907
01/13/2022
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	11:23
Control Test	0.050	11:23
Air Blank	0.000	11:24
Control Test	0.049	11:24
Air Blank	0.000	11:25
Control Test	0.050	11:26
Air Blank	0.000	11:26
Control Test Stats		
Average	0.0497	
Std Dev	0.0006	
Rel Std Dev(%)	1.1625	



Operator's Signature

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: MANATEE COUNTY SO
Time of Inspection: 14:02

Date of Inspection: 01/13/2022

Serial Number: 80-000907
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202010A Exp: 10/05/2022	0.08g/210L Test (g/210L) Lot#:202010B Exp: 10/05/2022	0.20g/210L Test (g/210L) Lot#:202010D Exp: 10/06/2022	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG115904 Exp: 06/08/2023
0.000	0.049	0.078	0.196	0.078
0.000	0.049	0.079	0.196	0.078
0.000	0.049	0.079	0.197	0.078
0.000	0.049	0.079	0.197	0.078
0.000	0.049	0.078	0.196	0.078
0.000	0.049	0.079	0.196	0.077
0.000	0.050	0.079	0.197	0.078
0.000	0.050	0.079	0.197	0.077
0.000	0.049	0.079	0.197	0.078
0.000	0.050	0.079	0.197	0.077


Standard Deviations	0.0004	0.0004	0.0005	0.0004
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5

Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.


I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



TAYLOR D GUTSCHOW

Signature and Printed Name

01/13/2022
Date

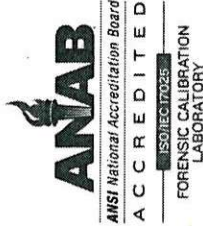

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000907, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000907</u>	UNCERTAINTY* $\pm$
Owning Agency:	<u>MANATEE COUNTY SO</u>	0.050 g/ 210 L 0.004
Calibration Date:	<u>01/13/2022</u>	0.080 g/ 210 L 0.004
Calibration Time:	<u>14:02</u>	0.200 g/ 210 L 0.007
		0.080 g/ 210 L Dry Gas Control 0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.



01/13/2022

Date

TAYLOR D GUTSCHOW,

Department Inspector

FDLE/ATP Form 69 December 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality



INSTRUMENT PROCESSING SHEET

Agency Manatee CSOS/N 80-000907Florida Department of
Law EnforcementDate In 3/15/2022DI Completion Date 3/17/2022☒ Ship ☐ P/U ☐ H/D ☐ CMI ☒ EE

Intake	By TDG	Quality Checks	By TDG	Date 3/17/2022	Flow Calibration	By	Date																																																												
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: AI Coleman reported a Temp Verification Fail during the post-diagnostics of two of his recent AIs. He also reported the exterior clip of the analog jack had broken off.		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>215</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP104</u> 32 mm <u>0.164</u> (.139 - .169) 36 mm <u>0.179</u> (.156 - .190) 53 mm <u>0.253</u> (.228 - .278) 103 mm <u>0.511</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>68639</u> ☒ Stability Checks			Flow Column # _____ ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																																																														
<table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #/Exp</th> </tr> </thead> <tbody> <tr> <td>0.050</td> <td>MP6286</td> <td>202201C 01/11/2024</td> </tr> <tr> <td>0.080</td> <td>MP6287</td> <td>202201D 01/18/2024</td> </tr> <tr> <td>0.200</td> <td>MP6288</td> <td>202201E 01/18/2024</td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td>AG115904 06/08/2023</td> </tr> </tbody> </table>					Simulator	Serial #	Lot #/Exp	0.050	MP6286	202201C 01/11/2024	0.080	MP6287	202201D 01/18/2024	0.200	MP6288	202201E 01/18/2024	0.080 DGS	N/A	AG115904 06/08/2023	Maintenance By _____ ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☐ Other _____																																															
Simulator	Serial #	Lot #/Exp																																																																	
0.050	MP6286	202201C 01/11/2024																																																																	
0.080	MP6287	202201D 01/18/2024																																																																	
0.200	MP6288	202201E 01/18/2024																																																																	
0.080 DGS	N/A	AG115904 06/08/2023																																																																	
Calibration Adjustment By _____ Barometric Pressure Gauge _____ ID # _____ <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr> <tr><td>0.040</td><td></td><td></td><td></td></tr> <tr><td>0.100</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.300</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table> ☐ Post Calibration Adjustment Stability Checks <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> </thead> <tbody> <tr><td>0.050</td><td></td><td></td><td></td></tr> <tr><td>0.080</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </tbody> </table>				Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Department Inspection By TDG _____ Barometric Pressure ID# <u>28199</u> Gauge <u>1017</u> Instrument <u>1018</u> Mouth Alcohol Solution Lot # <u>2021-B</u> Acetone Stock Solution Lot # <u>2021-C</u> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial Number</th> </tr> </thead> <tbody> <tr><td>0.000</td><td>MP6284</td></tr> <tr><td>Interferent</td><td>MP6285</td></tr> <tr><td>0.050</td><td>MP6286</td></tr> <tr><td>0.080</td><td>MP6287</td></tr> <tr><td>0.200</td><td>MP6288</td></tr> </tbody> </table>				Simulator	Serial Number	0.000	MP6284	Interferent	MP6285	0.050	MP6286	0.080	MP6287	0.200	MP6288
Simulator	Serial #	Lot #	Expiration																																																																
0.000		N/A	N/A																																																																
0.040																																																																			
0.100																																																																			
0.200																																																																			
0.300																																																																			
0.080 DGS	N/A																																																																		
Simulator	Serial #	Lot #	Expiration																																																																
0.050																																																																			
0.080																																																																			
0.200																																																																			
0.080 DGS	N/A																																																																		
Simulator	Serial Number																																																																		
0.000	MP6284																																																																		
Interferent	MP6285																																																																		
0.050	MP6286																																																																		
0.080	MP6287																																																																		
0.200	MP6288																																																																		
Notes/Suggested Service: <u>Monitored the breath hose temp in the DVM screen while flexing and coiling the breath hose. The temperature remained constant. Uploaded via direct-connect. Will send to EE to repair the analog jack (TDG).</u>				Attachments ☒ Form 41 ☐ Post-Stability Checks ☒ Stability Checks ☐ Flow Calibration ☒ Calibration Certificate ☐ Form 40 ☐ Calibration Adjustment ☒ Other <u>Form 51</u>																																																															
☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☐ Return to/Place into Evidentiary Use ☒ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use				Israel Soto Digitally signed by Israel Soto Date: 2022.03.18 07:11:33 +0400 Tech Review / Date <u>2022.03.21 22:07:10</u> Admin Review / Date <u>04:00</u>																																																															

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-000907	Manatee CSO	03/17/2022	TDG MK

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083
✓	✓	✓	✓
MANATEE COUNTY SO Intoxilyzer - Alcolon Analyzer Model: 8000 03/17/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:05 Control Test 0.050 11:05 Air Blank 0.000 11:06 Control Test 0.049 11:07 Air Blank 0.000 11:07 Control Test 0.049 11:08 Air Blank 0.000 11:08 Control Test Stats Average 0.0493 Std Dev 0.0006 Rel Std Dev(%) 1.1703 Operator's Signature 	MANATEE COUNTY SO Intoxilyzer - Alcolon Analyzer Model: 8000 03/17/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:11 Control Test 0.009 11:12 Air Blank 0.000 11:12 Control Test 0.079 11:13 Air Blank 0.000 11:13 Control Test 0.078 11:14 Air Blank 0.000 11:15 Control Test Stats Average 0.0787 Std Dev 0.0006 Rel Std Dev(%) 0.7339 Operator's Signature 	MANATEE COUNTY SO Intoxilyzer - Alcolon Analyzer Model: 8000 03/17/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:23 Control Test 0.198 11:23 Air Blank 0.000 11:24 Control Test 0.197 11:25 Air Blank 0.000 11:25 Control Test 0.197 11:26 Air Blank 0.000 11:26 Control Test Stats Average 0.1973 Std Dev 0.0006 Rel Std Dev(%) 0.2926 Operator's Signature 	MANATEE COUNTY SO Intoxilyzer - Alcolon Analyzer Model: 8000 03/17/2022 Software: 8100.27 Test g/210L Time Air Blank 0.000 10:54 Control Test 0.077 10:54 Air Blank 0.000 10:55 Control Test 0.078 10:55 Air Blank 0.000 10:55 Control Test 0.078 10:56 Air Blank 0.000 10:56 Control Test Stats Average 0.0777 Std Dev 0.0006 Rel Std Dev(%) 0.7434 Operator's Signature 

Comments:

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: MANATEE COUNTY SO
Time of Inspection: 14:09

Date of Inspection: 03/17/2022

Serial Number: 80-000907
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202201C Exp: 01/11/2024	0.08g/210L Test (g/210L) Lot#:202201D Exp: 01/18/2024	0.20g/210L Test (g/210L) Lot#:202201E Exp: 01/18/2024	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG115904 Exp: 06/08/2023
0.000	0.049	0.079	0.197	0.079
0.000	0.049	0.079	0.197	0.079
0.000	0.050	0.079	0.198	0.078
0.000	0.049	0.079	0.197	0.078
0.000	0.049	0.079	0.197	0.078
0.000	0.049	0.079	0.197	0.078
0.000	0.049	0.079	0.197	0.079
0.000	0.049	0.079	0.198	0.078
0.000	0.049	0.079	0.197	0.079
0.000	0.048	0.079	0.197	0.079


Standard Deviations	0.0004	0.0000	0.0004	0.0005
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0003 Number of Simulators Used: 5

Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



TAYLOR D GUTSCHOW

Signature and Printed Name

03/17/2022
Date



Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000907, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000907</u>	UNCERTAINTY* $\pm$	
Owning Agency:	<u>MANATEE COUNTY SO</u>	0.050 g/ 210 L	0.004
Calibration Date:	<u>03/17/2022</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>14:09</u>	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

03/17/2022

Date

TAYLOR D GUTSCHOW,

Department Inspector

FDLE/ATP Form 69 December 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality

Page 1 of 1

Return Material Authorization

Ship to: ☐ CMI, Inc.

☒ Enforcement Electronics

Shipment to repair facility authorized by: Sgt. Coleman on 03/15/2022

Items Returned: Instrument ☒ Supplies ☐ Other ☐ Describe: _____

Instrument Model: Intoxilyzer 8000 Serial Number: 80-000907

Bill To Address:

Manatee County Sheriff's Office

Ship to Address:

Florida Department of Law Enforcement

Fort Myers Regional Operations Center

Attn: Alcohol Testing Program

4700 Terminal Drive, Suite 1

Fort Myers, FL 33907

Reason for Return:

The metal clip on the analog jack broke off. The Agency Inspector reports Temp Verification
Fails during recent inspections, but the breath tube temperature remains constant on the DVM
screen when the breath hose is flexed and moved around.

Please choose one of the following options:

☐ 1. I _____, authorize all repairs.

☐ 2. I _____, authorize repairs up to \$ _____.

☒ 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Sgt. Coleman

Phone #: 941-725-2362

Email: William.Coleman@manateesherriff.com

ATP Contact Name: Taylor Gutschow

ATP Email: TaylorGutschow@fdle.state.fl.us

TMC
03/17/2022