



INSTRUMENT PROCESSING SHEET

Agency FHP Troop FS/N 80-006767Florida Department of
Law EnforcementDate In 1/4/2022 DI Completion Date 1/12/2022☒ Ship ☐ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By TGG	Quality Checks	By TGG	Date 1/12/2022	Flow Calibration	By	Date																												
☒ Annual ☐ Registration ☒ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: <u>Missing back right foot on DGS shelf.</u>		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>240</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP104</u> 32 mm <u>0.156</u> (.139 - .169) 36 mm <u>0.171</u> (.156 - .190) 53 mm <u>0.242</u> (.228 - .278) 103 mm <u>0.500</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>68639</u> ☒ Stability Checks			Flow Column # _____ ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																														
		<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td>MP6286</td><td>202010A 10/05/2022</td></tr><tr><td>0.080</td><td>MP6287</td><td>202010B 10/05/2022</td></tr><tr><td>0.200</td><td>MP6288</td><td>202010D 10/06/2022</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG026705 09/23/2022</td></tr></tbody></table>	Simulator	Serial #	Lot #/Exp	0.050	MP6286	202010A 10/05/2022	0.080	MP6287	202010B 10/05/2022	0.200	MP6288	202010D 10/06/2022	0.080 DGS	N/A	AG026705 09/23/2022					<table border="1"><thead><tr><th>Maintenance</th><th>By</th></tr></thead><tbody><tr><td>☐ Battery Replacement</td><td></td></tr><tr><td>☐ Dry Gas Regulator Replacement</td><td></td></tr><tr><td>☐ Breath Tube Replacement</td><td></td></tr><tr><td>☐ Other _____</td><td></td></tr></tbody></table>	Maintenance	By	☐ Battery Replacement		☐ Dry Gas Regulator Replacement		☐ Breath Tube Replacement		☐ Other _____				
Simulator	Serial #	Lot #/Exp																																	
0.050	MP6286	202010A 10/05/2022																																	
0.080	MP6287	202010B 10/05/2022																																	
0.200	MP6288	202010D 10/06/2022																																	
0.080 DGS	N/A	AG026705 09/23/2022																																	
Maintenance	By																																		
☐ Battery Replacement																																			
☐ Dry Gas Regulator Replacement																																			
☐ Breath Tube Replacement																																			
☐ Other _____																																			
Calibration Adjustment		By _____		Department Inspection By TGG _____																															
Barometric Pressure Gauge _____ ID # _____				Barometric Pressure ID# <u>28663</u>																															
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A					Gauge <u>1020</u> Instrument <u>1018</u> Mouth Alcohol Solution Lot # <u>2021-B</u> Acetone Stock Solution Lot # <u>2020-A</u>			
Simulator	Serial #	Lot #	Expiration																																
0.000		N/A	N/A																																
0.040																																			
0.100																																			
0.200																																			
0.300																																			
0.080 DGS	N/A																																		
☐ Post Calibration Adjustment Stability Checks				<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td>MP6284</td></tr><tr><td>Interferent</td><td>MP6285</td></tr><tr><td>0.050</td><td>MP6286</td></tr><tr><td>0.080</td><td>MP6287</td></tr><tr><td>0.200</td><td>MP6288</td></tr></tbody></table>				Simulator	Serial Number	0.000	MP6284	Interferent	MP6285	0.050	MP6286	0.080	MP6287	0.200	MP6288																
Simulator	Serial Number																																		
0.000	MP6284																																		
Interferent	MP6285																																		
0.050	MP6286																																		
0.080	MP6287																																		
0.200	MP6288																																		
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A					Attachments ☒ Form 41 ☐ Post-Stability Checks ☒ Stability Checks ☐ Flow Calibration ☒ Calibration Certificate ☒ Form 40 ☐ Calibration Adjustment ☒ Other <u>Form 51, IPS, Stabilities</u>											
Simulator	Serial #	Lot #	Expiration																																
0.050																																			
0.080																																			
0.200																																			
0.080 DGS	N/A																																		
Notes/Suggested Service: _____ _____ _____ _____ _____ _____				☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use																															
		Richard A Williams		Digitally signed by Richard A Williams Date: 2022.01.14 15:26:00 -05'00'		2022.01.14 7 23:04:52 05'00'																													
		Tech Review / Date		Admin Review / Date																															

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: FL HIGHWAY PATROL

Time of Inspection: 11:40

Date of Inspection: 01/12/2022

Serial Number: 80-006767

Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: _____

Remarks:

BYPASSED AI TO OPERATE INSTRUMENT

Not determined *mg*
1/12/2022

The above instrument complies (☒) does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

Taylor D Gutschow

TAYLOR D GUTSCHOW

Signature and Printed Name

01/12/2022
Date

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-006767	FHP Troop F	01/12/2022	TDG MG

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L																																																																																																			
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083																																																																																																			
Inadvertently printed to external printer. Results within range. Will attach. MG 1/12/2022	FL HIGHWAY PATROL Intoxilyzer - Alcohol Analyzer Model 8000 01/12/2022 Software: 8100.27 SN 80-006767 Test g/210L Time <table><tr><td>Air Blank</td><td>0.000</td><td>12:13</td></tr><tr><td>Control Test</td><td>0.079</td><td>12:14</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:15</td></tr><tr><td>Control Test</td><td>0.080</td><td>12:15</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:16</td></tr><tr><td>Control Test</td><td>0.079</td><td>12:16</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:17</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0793</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.7277</td><td></td></tr></table>	Air Blank	0.000	12:13	Control Test	0.079	12:14	Air Blank	0.000	12:15	Control Test	0.080	12:15	Air Blank	0.000	12:16	Control Test	0.079	12:16	Air Blank	0.000	12:17	Control Test Stats			Average	0.0793		Std Dev	0.0006		Rel Std Dev(%)	0.7277		FL HIGHWAY PATROL Intoxilyzer - Alcohol Analyzer Model 8000 01/12/2022 Software: 8100.27 SN 80-006767 Test g/210L Time <table><tr><td>Air Blank</td><td>0.000</td><td>12:20</td></tr><tr><td>Control Test</td><td>0.198</td><td>12:21</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:21</td></tr><tr><td>Control Test</td><td>0.198</td><td>12:22</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:23</td></tr><tr><td>Control Test</td><td>0.197</td><td>12:23</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:24</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.1977</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.2921</td><td></td></tr></table>	Air Blank	0.000	12:20	Control Test	0.198	12:21	Air Blank	0.000	12:21	Control Test	0.198	12:22	Air Blank	0.000	12:23	Control Test	0.197	12:23	Air Blank	0.000	12:24	Control Test Stats			Average	0.1977		Std Dev	0.0006		Rel Std Dev(%)	0.2921		FL HIGHWAY PATROL Intoxilyzer - Alcohol Analyzer Model 8000 01/12/2022 Software: 8100.27 SN 80-006767 Test g/210L Time <table><tr><td>Air Blank</td><td>0.000</td><td>12:25</td></tr><tr><td>Control Test</td><td>0.079</td><td>12:26</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:26</td></tr><tr><td>Control Test</td><td>0.080</td><td>12:26</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:27</td></tr><tr><td>Control Test</td><td>0.079</td><td>12:27</td></tr><tr><td>Air Blank</td><td>0.000</td><td>12:28</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0793</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.7277</td><td></td></tr></table>	Air Blank	0.000	12:25	Control Test	0.079	12:26	Air Blank	0.000	12:26	Control Test	0.080	12:26	Air Blank	0.000	12:27	Control Test	0.079	12:27	Air Blank	0.000	12:28	Control Test Stats			Average	0.0793		Std Dev	0.0006		Rel Std Dev(%)	0.7277	
Air Blank	0.000	12:13																																																																																																				
Control Test	0.079	12:14																																																																																																				
Air Blank	0.000	12:15																																																																																																				
Control Test	0.080	12:15																																																																																																				
Air Blank	0.000	12:16																																																																																																				
Control Test	0.079	12:16																																																																																																				
Air Blank	0.000	12:17																																																																																																				
Control Test Stats																																																																																																						
Average	0.0793																																																																																																					
Std Dev	0.0006																																																																																																					
Rel Std Dev(%)	0.7277																																																																																																					
Air Blank	0.000	12:20																																																																																																				
Control Test	0.198	12:21																																																																																																				
Air Blank	0.000	12:21																																																																																																				
Control Test	0.198	12:22																																																																																																				
Air Blank	0.000	12:23																																																																																																				
Control Test	0.197	12:23																																																																																																				
Air Blank	0.000	12:24																																																																																																				
Control Test Stats																																																																																																						
Average	0.1977																																																																																																					
Std Dev	0.0006																																																																																																					
Rel Std Dev(%)	0.2921																																																																																																					
Air Blank	0.000	12:25																																																																																																				
Control Test	0.079	12:26																																																																																																				
Air Blank	0.000	12:26																																																																																																				
Control Test	0.080	12:26																																																																																																				
Air Blank	0.000	12:27																																																																																																				
Control Test	0.079	12:27																																																																																																				
Air Blank	0.000	12:28																																																																																																				
Control Test Stats																																																																																																						
Average	0.0793																																																																																																					
Std Dev	0.0006																																																																																																					
Rel Std Dev(%)	0.7277																																																																																																					
	MG Operator's Signature	MG Operator's Signature	MG Operator's Signature																																																																																																			

Comments:

FL HIGHWAY PATROL
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-006767
01/12/2022
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	12:05
Control Test	0.050	12:06
Air Blank	0.000	12:07
Control Test	0.049	12:07
Air Blank	0.000	12:08
Control Test	0.049	12:09
Air Blank	0.000	12:09
Control Test Stats		
Average	0.0493	
Std Dev	0.0006	
Rel Std Dev(%)	1.1703	



Operator's Signature

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: FL HIGHWAY PATROL
Time of Inspection: 15:20

Date of Inspection: 01/12/2022

Serial Number: 80-006767
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202010A Exp: 10/05/2022	0.08g/210L Test (g/210L) Lot#:202010B Exp: 10/05/2022	0.20g/210L Test (g/210L) Lot#:202010D Exp: 10/06/2022	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG026705 Exp: 09/23/2022
0.000	0.049	0.080	0.198	0.078
0.000	0.049	0.080	0.199	0.078
0.000	0.049	0.079	0.199	0.078
0.000	0.049	0.080	0.198	0.078
0.000	0.050	0.080	0.198	0.078
0.000	0.049	0.080	0.199	0.078
0.000	0.049	0.080	0.198	0.078
0.000	0.049	0.080	0.199	0.078
0.000	0.049	0.081	0.199	0.078
0.000	0.049	0.080	0.198	0.078

Standard Deviations	0.0003	0.0004	0.0005	0.0000
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0003 Number of Simulators Used: 5

Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



Signature and Printed Name

TAYLOR D GUTSCHOW

01/12/2022
Date



Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-006767, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-006767</u>	UNCERTAINTY* $\pm$
Owning Agency:	<u>FL HIGHWAY PATROL</u>	0.050 g/210 L 0.004
Calibration Date:	<u>01/12/2022</u>	0.080 g/210 L 0.004
Calibration Time:	<u>15:20</u>	0.200 g/210 L 0.007
		0.080 g/210 L Dry Gas Control 0.005

All results are reported in g/210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.



01/12/2022

Date

TAYLOR D GUTSCHOW,

Department Inspector

FDLE/ATP Form 69 December 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality

INSTRUMENT PROCESSING SHEET

Agency FHP

S/N 80-006767

Florida Department of
Law Enforcement

Date In 5/10/2021 DI Completion Date

☒ Ship ☐ P/U ☐ H/D ☒ CMI ☐ EE

TOL
11/12/2022

11/21^{Tue} 2022

Intake	By MH	Quality Checks	By MH	Date	Flow Calibration	By	Date																			
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Keyboard ☒ Feet ☒ Ports ☒ Handle ☒ Dry Gas Shelf ☒ Breath Tube ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: _____ _____ _____ _____ _____ _____ _____ _____ _____ _____		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>243</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP 104</u> 32 mm <u>0.164</u> (.139 - .169) 36 mm <u>0.179</u> (.156 - .190) 53 mm <u>0.250</u> (.228 - .278) 103 mm <u>0.515</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>28199</u> ☒ Stability Checks																								
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #/Exp</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0.050</td> <td rowspan="2">MP4863</td> <td>202010A</td> </tr> <tr> <td>10/05/2022</td> </tr> <tr> <td rowspan="2">0.080</td> <td rowspan="2">MP4864</td> <td>202010B</td> </tr> <tr> <td>10/05/2022</td> </tr> <tr> <td rowspan="2">0.200</td> <td rowspan="2">MP5097</td> <td>202010D</td> </tr> <tr> <td>10/06/2022</td> </tr> <tr> <td rowspan="2">0.080 DGS</td> <td rowspan="2">N/A</td> <td>AG026705</td> </tr> <tr> <td>09/23/2022</td> </tr> </tbody> </table>	Simulator	Serial #	Lot #/Exp	0.050	MP4863	202010A	10/05/2022	0.080	MP4864	202010B	10/05/2022	0.200	MP5097	202010D	10/06/2022	0.080 DGS	N/A	AG026705	09/23/2022					
Simulator	Serial #	Lot #/Exp																								
0.050	MP4863	202010A																								
		10/05/2022																								
0.080	MP4864	202010B																								
		10/05/2022																								
0.200	MP5097	202010D																								
		10/06/2022																								
0.080 DGS	N/A	AG026705																								
		09/23/2022																								
					Flow Column # _____ ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																					
					Maintenance By _____ ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☐ Other _____																					
					DI Temp. Checks By _____ ☐ Lab Temp °C _____ External Digital Therm. ID#: _____ ☐ 34°C +/- .2 Serial #: _____ ☐ 34°C +/- .2 Serial #: _____ ☐ 34°C +/- .2 Serial #: _____																					

Calibration Adjustment				Department Inspection	
By _____				By _____	
Barometric Pressure Gauge _____ ID # _____				Barometric Pressure ID# _____	
				Gauge _____ Instrument _____	
				Mouth Alcohol Solution Lot # _____	
				Acetone Stock Solution Lot # _____	
Simulator		Serial #	Lot #	Expiration	
0.000			N/A	N/A	
0.040					
0.100					
0.200					
0.300					
0.080 DGS		N/A			
☐ Post Calibration Adjustment Stability Checks					
Simulator		Serial #	Lot #	Expiration	
0.050					
0.080					
0.200					
0.080 DGS		N/A			
Attachments					
☐ Form 41 ☒ Stability Checks ☐ Calibration Certificate ☐ Calibration Adjustment				☐ Post-Stability Checks ☐ Flow Calibration ☒ Form 40 <i>51</i> ☐ Other <i>ML 11/21/2022</i>	

Notes/Suggested Service: _____
Flags EtOH as Int. Repair Required.

Original author (MH) no longer employed by FDLE. Corrections on IPS made by TIG on 11/12/2022. Missing original author's initials on Stability Checks. (TIG 11/12/2022)

☐ Instrument Complies with Chapter 11D-8, FAC
☒ Instrument Does Not Comply with Chapter 11D-8, FAC
☐ Return to/Place into Evidentiary Use
☒ Remain Out of Evidentiary Use
☐ Conduct an Agency Inspection Before Evidentiary Use

Tech Review / Date

Admin Review / Date

TYPE OF TEST	SERIAL NUMBER	AGENCY	DATE	PERFORMED BY
Stabilities	80-006767	FHP	05/11/21	MLK

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L
0.047 to 0.053 ☒	0.077 to 0.083 ☒	0.194 to 0.206 ☒	0.077 to 0.083 ☐

FL HIGHWAY PATROL
Intoxilyzer - Alcohol Analyzer
Model 8000
05/11/2021
Software: 8100.27

FL HIGHWAY PATROL
Intoxilyzer - Alcohol Analyzer
Model 8000
05/11/2021
Software: 8100.27

FL HIGHWAY PATROL
Intoxilyzer - Alcohol Analyzer
Model 8000
05/11/2021
Software: 8100.27

FL HIGHWAY PATROL
Intoxilyzer - Alcohol Analyzer
Model 8000
05/11/2021
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	10:11
Control Test	INT*	10:12
Air Blank	0.000	10:12
Control Test	0.049	10:13
Air Blank	0.000	10:13
Control Test	INT*	10:14
Air Blank	0.000	10:15
Control Test Stats		
Average	0.0530	
Std Dev	0.0036	
Rel Std Dev(%)	6.8029	

*Interferent Detect

Test	g/210L	Time
Air Blank	0.000	10:16
Control Test	0.081	10:17
Air Blank	0.000	10:17
Control Test	0.081	10:18
Air Blank	0.000	10:19
Control Test	0.078	10:19
Air Blank	0.000	10:20
Control Test Stats		
Average	0.0800	
Std Dev	0.0017	
Rel Std Dev(%)	2.1651	

*Interferent Detect

Test	g/210L	Time
Air Blank	0.000	10:21
Control Test	0.192	10:22
Air Blank	0.000	10:23
Control Test	0.194	10:23
Air Blank	0.000	10:24
Control Test	INT*	10:25
Air Blank	0.000	10:25
Control Test Stats		
Average	0.1927	
Std Dev	0.0012	
Rel Std Dev(%)	0.5993	

Test	g/210L	Time
Air Blank	0.000	10:27
Control Test	0.080	10:27
Air Blank	AMB*	10:28
Air Blank	0.000	10:28

*Ambient Fail

Operator's Signature

MLK
Operator's Signature

MLK
Operator's Signature

MLK
Operator's Signature

Return Material Authorization

Ship to: ☒ CMI, Inc.

☐ Enforcement Electronics

Shipment to repair facility authorized by: Tpr. Taylor Ledford on 05/11/2021

Items Returned: Instrument ☒ Supplies ☐ Other ☐ Describe: _____

Instrument Model: Intoxilyzer 8000 Serial Number: 80-006767

Bill To Address:

FHP

Florida Highway Patrol

Ship to Address:

FDLE ATP FMROC

Attn: Michael Haughey

4700 Terminal Dr. Suite 1

Fort Myers, FL 33907

Reason for Return:

Flags alcohol reference solutions as interferenant. DVM signals jump around erratically.

Please choose one of the following options:

☐ 1. I _____, authorize all repairs.

☐ 2. I _____, authorize repairs up to \$ _____.

☒ 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Tpr. Taylor Ledford

Phone #: 941-962-7782

Email: TaylorLedford@flhsmv.gov

ATP Contact Name: Michael Haughey

ATP Email: michaelhaughey@fdle.state.fl.us



INSTRUMENT PROCESSING SHEET

Agency FHP Troop FS/N 80-006767Florida Department of
Law EnforcementDate In 5/9/2022DI Completion Date 5/10/2022☒ Ship ☐ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By TDG	Quality Checks	By TDG	Date 5/10/2022	Flow Calibration	By	Date																																						
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☐ Static Bag ☐ 12V DC Cable Notes: <u>Missing right DGS foot</u>		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>241</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP104</u> 32 mm <u>0.152</u> (.139 - .169) 36 mm <u>0.164</u> (.156 - .190) 53 mm <u>0.230</u> (.228 - .278) 103 mm <u>0.496</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>68639</u> ☒ Stability Checks			Flow Column # _____ ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																																								
		<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td>MP6286</td><td>202201C 01/11/2024</td></tr><tr><td>0.080</td><td>MP6287</td><td>202201D 01/18/2024</td></tr><tr><td>0.200</td><td>MP6288</td><td>202201E 01/18/2024</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG115904 06/08/2023</td></tr></tbody></table>	Simulator	Serial #	Lot #/Exp	0.050	MP6286	202201C 01/11/2024	0.080	MP6287	202201D 01/18/2024	0.200	MP6288	202201E 01/18/2024	0.080 DGS	N/A	AG115904 06/08/2023																												
Simulator	Serial #	Lot #/Exp																																											
0.050	MP6286	202201C 01/11/2024																																											
0.080	MP6287	202201D 01/18/2024																																											
0.200	MP6288	202201E 01/18/2024																																											
0.080 DGS	N/A	AG115904 06/08/2023																																											
Calibration Adjustment		By		Department Inspection			By TDG																																						
Barometric Pressure Gauge ID # _____				Barometric Pressure ID# <u>28199</u> Gauge <u>1018</u> Instrument <u>1017</u> Mouth Alcohol Solution Lot # <u>2021-B</u> Acetone Stock Solution Lot # <u>2021-C</u>																																									
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>	Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A					<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td>MP6284</td></tr><tr><td>Interferent</td><td>MP6285</td></tr><tr><td>0.050</td><td>MP6286</td></tr><tr><td>0.080</td><td>MP6287</td></tr><tr><td>0.200</td><td>MP6288</td></tr></tbody></table>	Simulator	Serial Number	0.000	MP6284	Interferent	MP6285	0.050	MP6286	0.080	MP6287	0.200	MP6288		
Simulator	Serial #	Lot #	Expiration																																										
0.000		N/A	N/A																																										
0.040																																													
0.100																																													
0.200																																													
0.300																																													
0.080 DGS	N/A																																												
Simulator	Serial Number																																												
0.000	MP6284																																												
Interferent	MP6285																																												
0.050	MP6286																																												
0.080	MP6287																																												
0.200	MP6288																																												
☐ Post Calibration Adjustment Stability Checks				Attachments																																									
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>	Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A					☒ Form 41 ☒ Stability Checks ☒ Calibration Certificate ☐ Calibration Adjustment			☐ Post-Stability Checks ☐ Flow Calibration ☒ Form 40 ☐ Other _____																			
Simulator	Serial #	Lot #	Expiration																																										
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
Notes/Suggested Service: _____ _____ _____ _____ _____ _____				☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use																																									
		David Eliezer Reyes-Rivera		2022.05.12 13:29:15																																									
		Tech Review / Date		Admin Review / Date																																									

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: FL HIGHWAY PATROL
Time of Inspection: 10:07

Date of Inspection: 05/10/2022

Serial Number: 80-006767
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: _____

Remarks:

AI NOT CONDUCTED. BYPASSED TO OPERATE INSTRUMENT

Not determined ^{ML} 05/10/2022

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



TAYLOR D GUTSCHOW
Signature and Printed Name

05/10/2022
Date

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-00 6767	FHP	05/10/2022	TDG MK

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L																																																																																																												
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083																																																																																																												
✓	✓	✓	✓																																																																																																												
0.077 to 0.083	≤0.003 of Wet		✓																																																																																																												
Indubtently printed to external printer. Results within the acceptable range. Will attach. MK 5/10/2022																																																																																																															
FL HIGHWAY PATROL Intoxilyzer - Alcohol Analyzer Model 8000 05/10/2022 Software: 8100.27 SN 80-006767 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>11:07</td></tr><tr><td>Control Test</td><td>0.050</td><td>11:07</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:08</td></tr><tr><td>Control Test</td><td>0.050</td><td>11:09</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:09</td></tr><tr><td>Control Test</td><td>0.049</td><td>11:10</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:10</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0497</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>1.1625</td><td></td></tr></tbody></table>	Test	g/210L	Time	Air Blank	0.000	11:07	Control Test	0.050	11:07	Air Blank	0.000	11:08	Control Test	0.050	11:09	Air Blank	0.000	11:09	Control Test	0.049	11:10	Air Blank	0.000	11:10	Control Test Stats			Average	0.0497		Std Dev	0.0006		Rel Std Dev(%)	1.1625		FL HIGHWAY PATROL Intoxilyzer - Alcohol Analyzer Model 8000 05/10/2022 Software: 8100.27 SN 80-006767 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>11:14</td></tr><tr><td>Control Test</td><td>0.079</td><td>11:14</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:15</td></tr><tr><td>Control Test</td><td>0.079</td><td>11:15</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:16</td></tr><tr><td>Control Test</td><td>0.078</td><td>11:17</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:17</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0787</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.7339</td><td></td></tr></tbody></table>	Test	g/210L	Time	Air Blank	0.000	11:14	Control Test	0.079	11:14	Air Blank	0.000	11:15	Control Test	0.079	11:15	Air Blank	0.000	11:16	Control Test	0.078	11:17	Air Blank	0.000	11:17	Control Test Stats			Average	0.0787		Std Dev	0.0006		Rel Std Dev(%)	0.7339		FL HIGHWAY PATROL Intoxilyzer - Alcohol Analyzer Model 8000 05/10/2022 Software: 8100.27 SN 80-006767 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>11:20</td></tr><tr><td>Control Test</td><td>0.201</td><td>11:21</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:21</td></tr><tr><td>Control Test</td><td>0.200</td><td>11:22</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:23</td></tr><tr><td>Control Test</td><td>0.198</td><td>11:23</td></tr><tr><td>Air Blank</td><td>0.000</td><td>11:24</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.1997</td><td></td></tr><tr><td>Std Dev</td><td>0.0015</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.7650</td><td></td></tr></tbody></table>	Test	g/210L	Time	Air Blank	0.000	11:20	Control Test	0.201	11:21	Air Blank	0.000	11:21	Control Test	0.200	11:22	Air Blank	0.000	11:23	Control Test	0.198	11:23	Air Blank	0.000	11:24	Control Test Stats			Average	0.1997		Std Dev	0.0015		Rel Std Dev(%)	0.7650		Operator's Signature MK
Test	g/210L	Time																																																																																																													
Air Blank	0.000	11:07																																																																																																													
Control Test	0.050	11:07																																																																																																													
Air Blank	0.000	11:08																																																																																																													
Control Test	0.050	11:09																																																																																																													
Air Blank	0.000	11:09																																																																																																													
Control Test	0.049	11:10																																																																																																													
Air Blank	0.000	11:10																																																																																																													
Control Test Stats																																																																																																															
Average	0.0497																																																																																																														
Std Dev	0.0006																																																																																																														
Rel Std Dev(%)	1.1625																																																																																																														
Test	g/210L	Time																																																																																																													
Air Blank	0.000	11:14																																																																																																													
Control Test	0.079	11:14																																																																																																													
Air Blank	0.000	11:15																																																																																																													
Control Test	0.079	11:15																																																																																																													
Air Blank	0.000	11:16																																																																																																													
Control Test	0.078	11:17																																																																																																													
Air Blank	0.000	11:17																																																																																																													
Control Test Stats																																																																																																															
Average	0.0787																																																																																																														
Std Dev	0.0006																																																																																																														
Rel Std Dev(%)	0.7339																																																																																																														
Test	g/210L	Time																																																																																																													
Air Blank	0.000	11:20																																																																																																													
Control Test	0.201	11:21																																																																																																													
Air Blank	0.000	11:21																																																																																																													
Control Test	0.200	11:22																																																																																																													
Air Blank	0.000	11:23																																																																																																													
Control Test	0.198	11:23																																																																																																													
Air Blank	0.000	11:24																																																																																																													
Control Test Stats																																																																																																															
Average	0.1997																																																																																																														
Std Dev	0.0015																																																																																																														
Rel Std Dev(%)	0.7650																																																																																																														
Operator's Signature MK	Operator's Signature MK	Operator's Signature MK																																																																																																													

Comments:

FL HIGHWAY PATROL

Intoxilyzer - Alcohol Analyzer

Model 8000

SN 80-006767

05/10/2022

Software: 8100.27

OKS

Test	g/210L	Time
Air Blank	0.000	10:56
Control Test	0.079	10:56
Air Blank	0.000	10:57
Control Test	0.079	10:57
Air Blank	0.000	10:58
Control Test	0.079	10:58
Air Blank	0.000	10:59
Control Test Stats		
Average	0.0790	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

ML

Operator's Signature

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: FL HIGHWAY PATROL
Time of Inspection: 13:27

Date of Inspection: 05/10/2022

Serial Number: 80-006767
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202201C Exp: 01/11/2024	0.08g/210L Test (g/210L) Lot#:202201D Exp: 01/18/2024	0.20g/210L Test (g/210L) Lot#:202201E Exp: 01/18/2024	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG115904 Exp: 06/08/2023
0.000	0.049	0.079	0.199	0.078
0.000	0.049	0.078	0.199	0.077
0.000	0.049	0.079	0.199	0.077
0.000	0.050	0.079	0.200	0.077
0.000	0.050	0.079	0.200	0.077
0.000	0.049	0.078	0.200	0.077
0.000	0.050	0.079	0.200	0.077
0.000	0.049	0.079	0.200	0.076
0.000	0.050	0.079	0.200	0.077
0.000	0.050	0.079	0.200	0.077


Standard Deviations	0.0005	0.0004	0.0004	0.0004
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5

Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.


I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



TAYLOR D GUTSCHOW

Signature and Printed Name

05/10/2022
Date

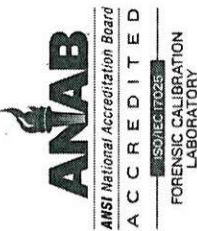

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-006767, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	80-006767	UNCERTAINTY* $\pm$
Owning Agency:	FL HIGHWAY PATROL	0.050 g/ 210 L 0.004
Calibration Date:	05/10/2022	0.080 g/ 210 L 0.004
Calibration Time:	13:27	0.200 g/ 210 L 0.007
		0.080 g/ 210 L Dry Gas Control 0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

05/10/2022

Date

TAYLOR D GUTSCHOW,
Department Inspector

FDLE/ATP Form 69 December 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality