




INSTRUMENT PROCESSING SHEET

Agency Miami Police DepartmentS/N 80-007517Florida Department of
Law EnforcementDate In 3/17/2022 DI Completion Date 3/21/2022☒ Ship ☐ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By DERR	Quality Checks	By DERR	Date 3/21/2022	Flow Calibration	By	Date																											
☒ Annual ☒ Registration ☒ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☒ Power cord ☐ Printer Cable ☒ Static Bag ☒ 12V DC Cable Notes: Missing pink shipping bumpers. Dry gas power line was disconnected. No factory Seal DERR		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>198</u> ☒ Flow Verification (L/s) Flow Column # ATP106 32 mm <u>0.156</u> (.139 - .169) 36 mm <u>0.171</u> (.156 - .190) 53 mm <u>0.234</u> (.228 - .278) 103 mm <u>0.492</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # 28663 ☒ Stability Checks			Flow Column # ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value ☐ Post Calibration Verification (L/s) Flow Column # 32 mm (.139 - .169) 36 mm (.156 - .190) 53 mm (.228 - .278) 103 mm (.447 - .547)																													
		<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td>MP6286</td><td>202201C 01/11/2024</td></tr><tr><td>0.080</td><td>MP6287</td><td>202201D 01/18/2024</td></tr><tr><td>0.200</td><td>MP6288</td><td>202201E 01/18/2024</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG115904 06/08/2023</td></tr></tbody></table>			Simulator	Serial #	Lot #/Exp	0.050	MP6286	202201C 01/11/2024	0.080	MP6287	202201D 01/18/2024	0.200	MP6288	202201E 01/18/2024	0.080 DGS	N/A	AG115904 06/08/2023	Maintenance By DERR ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☒ Other <u>Connected dry gas power,</u> <u>Attached a CMI Authorized Service</u> <u>Agency seal.</u>														
Simulator	Serial #	Lot #/Exp																																
0.050	MP6286	202201C 01/11/2024																																
0.080	MP6287	202201D 01/18/2024																																
0.200	MP6288	202201E 01/18/2024																																
0.080 DGS	N/A	AG115904 06/08/2023																																
Calibration Adjustment By		Department Inspection By DERR																																
Barometric Pressure Gauge ID #		Barometric Pressure ID# <u>28199</u>																																
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Gauge <u>1022</u> Instrument <u>1020</u> Mouth Alcohol Solution Lot # <u>2021-D</u> Acetone Stock Solution Lot # <u>2021-C</u>				
Simulator	Serial #	Lot #	Expiration																															
0.000		N/A	N/A																															
0.040																																		
0.100																																		
0.200																																		
0.300																																		
0.080 DGS	N/A																																	
☐ Post Calibration Adjustment Stability Checks		<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td>MP6284</td></tr><tr><td>Interferent</td><td>MP6285</td></tr><tr><td>0.050</td><td>MP6286</td></tr><tr><td>0.080</td><td>MP6287</td></tr><tr><td>0.200</td><td>MP6288</td></tr></tbody></table>					Simulator	Serial Number	0.000	MP6284	Interferent	MP6285	0.050	MP6286	0.080	MP6287	0.200	MP6288																
Simulator	Serial Number																																	
0.000	MP6284																																	
Interferent	MP6285																																	
0.050	MP6286																																	
0.080	MP6287																																	
0.200	MP6288																																	
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Attachments ☒ Form 41 ☒ Stability Checks ☒ Calibration Certificate ☐ Calibration Adjustment ☐ Post-Stability Checks ☐ Flow Calibration ☐ Form 40 ☒ Other <u>Form 47</u>												
Simulator	Serial #	Lot #	Expiration																															
0.050																																		
0.080																																		
0.200																																		
0.080 DGS	N/A																																	
Notes/Suggested Service:		☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use 2022.03.29																																
		Israel Soto Digitally signed by Israel Soto Date: 2022.03.28 07:28:15 -0400 13:56:31 04:00																																
		Tech Review / Date Admin Review / Date																																

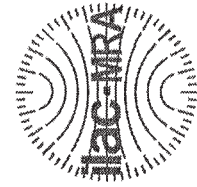

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-007517, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	80-007517	UNCERTAINTY* $\pm$
Owning Agency:	MIAMI PD	0.050 g/ 210 L 0.004
Calibration Date:	03/21/2022	0.080 g/ 210 L 0.004
Calibration Time:	10:41	0.200 g/ 210 L 0.007
		0.080 g/ 210 L Dry Gas Control 0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

FDLE/ATP Form 69 December 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality

03/21/2022

Date

DAVID E REYES-RIVERA,

Department Inspector

Page 1 of 1

Florida Department of Law Enforcement

Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: MIAMI PD

Time of Inspection: 10:41

Date of Inspection: 03/21/2022

Serial Number: 80-007517

Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202201C Exp: 01/11/2024	0.08g/210L Test (g/210L) Lot#:202201D Exp: 01/18/2024	0.20g/210L Test (g/210L) Lot#:202201E Exp: 01/18/2024	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG115904 Exp: 06/08/2023
0.000	0.048	0.079	0.200	0.078
0.000	0.048	0.079	0.200	0.077
0.000	0.048	0.079	0.200	0.077
0.000	0.048	0.079	0.199	0.078
0.000	0.048	0.079	0.199	0.078
0.000	0.048	0.079	0.199	0.077
0.000	0.048	0.079	0.199	0.078
0.000	0.048	0.079	0.199	0.077
0.000	0.049	0.079	0.199	0.077
0.000	0.048	0.079	0.200	0.078


Standard Deviations	0.0003	0.0000	0.0005	0.0005
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0003 Number of Simulators Used: 5

Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.


DAVID E REYES-RIVERA

 Signature and Printed Name

03/21/2022
 Date

Type of Test	Serial Number	Agency	Date	Performed By
Stabilities	80-007517	Miami Police Department	3/21/2022	DERR <i>[Signature]</i>

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L																																																																																																																																																
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083																																																																																																																																																
MIAMI PD Intoxilyzer - Alcohol Analyzer Model 8000 03/21/2022 Software: 8100.27 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>08:46</td></tr><tr><td>Control Test</td><td>0.048</td><td>08:46</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:47</td></tr><tr><td>Control Test</td><td>0.048</td><td>08:48</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:48</td></tr><tr><td>Control Test</td><td>0.048</td><td>08:49</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:49</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0480</td><td></td></tr><tr><td>Std Dev</td><td>0.0000</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.0000</td><td></td></tr></tbody></table> <i>[Signature]</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	08:46	Control Test	0.048	08:46	Air Blank	0.000	08:47	Control Test	0.048	08:48	Air Blank	0.000	08:48	Control Test	0.048	08:49	Air Blank	0.000	08:49	Control Test Stats			Average	0.0480		Std Dev	0.0000		Rel Std Dev(%)	0.0000		MIAMI PD Intoxilyzer - Alcohol Analyzer Model 8000 03/21/2022 Software: 8100.27 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>08:51</td></tr><tr><td>Control Test</td><td>0.078</td><td>08:51</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:52</td></tr><tr><td>Control Test</td><td>0.079</td><td>08:52</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:53</td></tr><tr><td>Control Test</td><td>0.079</td><td>08:54</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:54</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0787</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.7339</td><td></td></tr></tbody></table> <i>[Signature]</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	08:51	Control Test	0.078	08:51	Air Blank	0.000	08:52	Control Test	0.079	08:52	Air Blank	0.000	08:53	Control Test	0.079	08:54	Air Blank	0.000	08:54	Control Test Stats			Average	0.0787		Std Dev	0.0006		Rel Std Dev(%)	0.7339		MIAMI PD Intoxilyzer - Alcohol Analyzer Model 8000 03/21/2022 Software: 8100.27 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>08:55</td></tr><tr><td>Control Test</td><td>0.200</td><td>08:56</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:57</td></tr><tr><td>Control Test</td><td>0.199</td><td>08:57</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:58</td></tr><tr><td>Control Test</td><td>0.199</td><td>08:59</td></tr><tr><td>Air Blank</td><td>0.000</td><td>08:59</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.1993</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.2896</td><td></td></tr></tbody></table> <i>[Signature]</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	08:55	Control Test	0.200	08:56	Air Blank	0.000	08:57	Control Test	0.199	08:57	Air Blank	0.000	08:58	Control Test	0.199	08:59	Air Blank	0.000	08:59	Control Test Stats			Average	0.1993		Std Dev	0.0006		Rel Std Dev(%)	0.2896		MIAMI PD Intoxilyzer - Alcohol Analyzer Model 8000 03/21/2022 Software: 8100.27 <table><thead><tr><th>Test</th><th>g/210L</th><th>Time</th></tr></thead><tbody><tr><td>Air Blank</td><td>0.000</td><td>09:00</td></tr><tr><td>Control Test</td><td>0.079</td><td>09:01</td></tr><tr><td>Air Blank</td><td>0.000</td><td>09:01</td></tr><tr><td>Control Test</td><td>0.078</td><td>09:02</td></tr><tr><td>Air Blank</td><td>0.000</td><td>09:02</td></tr><tr><td>Control Test</td><td>0.078</td><td>09:02</td></tr><tr><td>Air Blank</td><td>0.000</td><td>09:03</td></tr><tr><td>Control Test Stats</td><td></td><td></td></tr><tr><td>Average</td><td>0.0783</td><td></td></tr><tr><td>Std Dev</td><td>0.0006</td><td></td></tr><tr><td>Rel Std Dev(%)</td><td>0.7370</td><td></td></tr></tbody></table> <i>[Signature]</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	09:00	Control Test	0.079	09:01	Air Blank	0.000	09:01	Control Test	0.078	09:02	Air Blank	0.000	09:02	Control Test	0.078	09:02	Air Blank	0.000	09:03	Control Test Stats			Average	0.0783		Std Dev	0.0006		Rel Std Dev(%)	0.7370	
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	08:46																																																																																																																																																	
Control Test	0.048	08:46																																																																																																																																																	
Air Blank	0.000	08:47																																																																																																																																																	
Control Test	0.048	08:48																																																																																																																																																	
Air Blank	0.000	08:48																																																																																																																																																	
Control Test	0.048	08:49																																																																																																																																																	
Air Blank	0.000	08:49																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0480																																																																																																																																																		
Std Dev	0.0000																																																																																																																																																		
Rel Std Dev(%)	0.0000																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	08:51																																																																																																																																																	
Control Test	0.078	08:51																																																																																																																																																	
Air Blank	0.000	08:52																																																																																																																																																	
Control Test	0.079	08:52																																																																																																																																																	
Air Blank	0.000	08:53																																																																																																																																																	
Control Test	0.079	08:54																																																																																																																																																	
Air Blank	0.000	08:54																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0787																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.7339																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	08:55																																																																																																																																																	
Control Test	0.200	08:56																																																																																																																																																	
Air Blank	0.000	08:57																																																																																																																																																	
Control Test	0.199	08:57																																																																																																																																																	
Air Blank	0.000	08:58																																																																																																																																																	
Control Test	0.199	08:59																																																																																																																																																	
Air Blank	0.000	08:59																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.1993																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.2896																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	09:00																																																																																																																																																	
Control Test	0.079	09:01																																																																																																																																																	
Air Blank	0.000	09:01																																																																																																																																																	
Control Test	0.078	09:02																																																																																																																																																	
Air Blank	0.000	09:02																																																																																																																																																	
Control Test	0.078	09:02																																																																																																																																																	
Air Blank	0.000	09:03																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0783																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.7370																																																																																																																																																		



Florida Department of
Law Enforcement

REQUEST FOR REGISTRATION

MAKE AND MODEL OF INSTRUMENT: Intoxilyzer 8000

SERIAL NUMBER: 80-007517

OWNING AGENCY: Miami Police Department

DATE OF DEPARTMENT INSPECTION: 3/21/2022

AGENCY INSPECTOR: Officer Jose Pastor

ADDRESS: 2200 Flagler At

CITY, STATE, ZIP: Miami, FL 33135

TELEPHONE NUMBER: (305) 603-6537

FAX NUMBER: _____

EMAIL ADDRESS (if available): 5533@miami-police.org

For Program Office Use Only:

Date:
3/21/2022
14:53:44
4050

Registration Issued

☒

Instrument Added to Evidentiary Instrument Database

DERR

Requires valid license
Date: 3/21/2022 14:53:44
User: 4050

☒

Instrument Added to Monthly Statistics Database

☒

Contact Information Added to Instrument Database

DERR

Requires valid license
Date: 3/21/2022 14:53:44
User: 4050