



# INSTRUMENT PROCESSING SHEET

Agency Miccosukee PD

S/N 80-001657

Florida Department of  
Law Enforcement

Date In 11/03/2023 DI Completion Date \_\_\_\_\_

☐ Ship ☒ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By TDG	Quality Checks	By TDG	Date <u>11/08/2023</u>	Flow Calibration	By	Date	
<input type="checkbox"/> Annual <input checked="" type="checkbox"/> Deregistration <input type="checkbox"/> Return from CMI / EE  Visual Inspection: <input checked="" type="checkbox"/> Case <input checked="" type="checkbox"/> Handle <input checked="" type="checkbox"/> Keyboard <input checked="" type="checkbox"/> Dry Gas Shelf <input checked="" type="checkbox"/> Feet <input checked="" type="checkbox"/> Breath Tube <input checked="" type="checkbox"/> Ports <input checked="" type="checkbox"/> Screws Tight  Other Equipment/ Accessories: <input checked="" type="checkbox"/> Power cord <input type="checkbox"/> Printer Cable <input type="checkbox"/> Static Bag <input type="checkbox"/> 12V DC Cable  Notes: <u>Hand-delivered</u>		<input checked="" type="checkbox"/> Breath Tube Screen <input checked="" type="checkbox"/> Replace External O-Rings <input checked="" type="checkbox"/> Instrument Set Up Verified <input checked="" type="checkbox"/> R-Value <u>178</u> <input checked="" type="checkbox"/> Flow Verification (L/s) Flow Column # <u>ATP104</u> 32 mm <u>0.160</u> (.139 - .169) 36 mm <u>0.175</u> (.156 - .190) 53 mm <u>0.242</u> (.228 - .278) 103 mm <u>0.511</u> (.447 - .547) <input checked="" type="checkbox"/> Barometric Pressure Check Gauge ID # <u>26932</u> <input checked="" type="checkbox"/> Stability Checks			Flow Column # _____ <input type="checkbox"/> 5L/min – 17mm <input type="checkbox"/> 15L/min – 53mm <input type="checkbox"/> 30L/min – 103mm <input type="checkbox"/> R-Value _____ <input type="checkbox"/> Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)			
					<b>Maintenance</b> By <u>TDG</u> <input checked="" type="checkbox"/> Battery Replacement on 11/7 <input type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other _____			

Simulator	Serial #	Lot #/Exp
0.050	MP5094	202303K 03/29/2025
0.080	MP5095	202303L 03/29/2025
0.200	MP5096	202304C 04/05/2025
0.080 DGS	N/A	AG223802 08/26/2024

Calibration Adjustment	By	Department Inspection	By																																																												
Barometric Pressure Gauge _____ ID # _____ <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> <tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr> <tr><td>0.040</td><td></td><td></td><td></td></tr> <tr><td>0.100</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.300</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </table> <input type="checkbox"/> Post Calibration Adjustment Stability Checks <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th>Simulator</th> <th>Serial #</th> <th>Lot #</th> <th>Expiration</th> </tr> <tr><td>0.050</td><td></td><td></td><td></td></tr> <tr><td>0.080</td><td></td><td></td><td></td></tr> <tr><td>0.200</td><td></td><td></td><td></td></tr> <tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr> </table>	Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A				Barometric Pressure ID# _____ Gauge _____ Instrument _____ Mouth Alcohol Solution Lot # _____ Acetone Stock Solution Lot # _____ <table border="1" style="width:100%; border-collapse: collapse;"> <tr> <th>Simulator</th> <th>Serial Number</th> </tr> <tr><td>0.000</td><td></td></tr> <tr><td>Interferent</td><td></td></tr> <tr><td>0.050</td><td></td></tr> <tr><td>0.080</td><td></td></tr> <tr><td>0.200</td><td></td></tr> </table>	Simulator	Serial Number	0.000		Interferent		0.050		0.080		0.200		
Simulator	Serial #	Lot #	Expiration																																																												
0.000		N/A	N/A																																																												
0.040																																																															
0.100																																																															
0.200																																																															
0.300																																																															
0.080 DGS	N/A																																																														
Simulator	Serial #	Lot #	Expiration																																																												
0.050																																																															
0.080																																																															
0.200																																																															
0.080 DGS	N/A																																																														
Simulator	Serial Number																																																														
0.000																																																															
Interferent																																																															
0.050																																																															
0.080																																																															
0.200																																																															

Attachments	Notes/Suggested Service
<input type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment <input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input checked="" type="checkbox"/> Form 40 <input checked="" type="checkbox"/> Other <u>Form 12</u>	Notes/Suggested Service: <u>Checked breath tube screen on 11/3. Replaced o-rings and verified instrument setup on 11/7 during battery change. Completed Quality Checks on 11/8. There is a delay between the start of a DGS stability check and the flow of dry gas; the result is still rising when the stability check ends. The agency elects to deregister at this time. Records uploaded on 12/19.</u> (TDG)

<input type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input type="checkbox"/> Return to/Place into Evidentiary Use <input checked="" type="checkbox"/> Remain Out of Evidentiary Use <input type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use	
Tech Review / Date _____	Admin Review / Date _____

# Florida Department of Law Enforcement Alcohol Testing Program

## AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: MICCOSUKEE PD  
Time of Inspection: 09:32

Date of Inspection: 11/08/2023

Serial Number: 80-001657  
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: \_\_\_\_\_

Remarks:

AI NOT CONDUCTED. BYPASSED TO BRING OUT OF DISABLED MODE.

*Not determined*

*mg  
11/08/2023*

The above instrument complies ( ☒ ) does not comply ( ) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

*Taylor D Gutschow*





TAYLOR D GUTSCHOW

Signature and Printed Name

11/08/2023  
Date



# Stability Checks

0.05g/210L 0.047 to 0.053 ✓	0.08g/210L 0.077 to 0.083 ✓	0.20g/210L 0.194 to 0.206 ✓	DGS 0.08g/210L 0.077 to 0.083 ✗ ≤0.003 of Wet ✗																																																																																																																																																
<p>MICCOSUKEE PD Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-001657 11/08/2023 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>10:03</td></tr> <tr><td>Control Test</td><td>0.049</td><td>10:03</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:04</td></tr> <tr><td>Control Test</td><td>0.049</td><td>10:05</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:05</td></tr> <tr><td>Control Test</td><td>0.050</td><td>10:06</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:06</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0493</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>1.1703</td><td></td></tr> </tbody> </table> <p>Operator's Signature </p>	Test	g/210L	Time	Air Blank	0.000	10:03	Control Test	0.049	10:03	Air Blank	0.000	10:04	Control Test	0.049	10:05	Air Blank	0.000	10:05	Control Test	0.050	10:06	Air Blank	0.000	10:06	Control Test Stats			Average	0.0493		Std Dev	0.0006		Rel Std Dev(%)	1.1703		<p>MICCOSUKEE PD Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-001657 11/08/2023 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>10:10</td></tr> <tr><td>Control Test</td><td>0.078</td><td>10:10</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:11</td></tr> <tr><td>Control Test</td><td>0.078</td><td>10:12</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:12</td></tr> <tr><td>Control Test</td><td>0.079</td><td>10:13</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:13</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0783</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7370</td><td></td></tr> </tbody> </table> <p>Operator's Signature </p>	Test	g/210L	Time	Air Blank	0.000	10:10	Control Test	0.078	10:10	Air Blank	0.000	10:11	Control Test	0.078	10:12	Air Blank	0.000	10:12	Control Test	0.079	10:13	Air Blank	0.000	10:13	Control Test Stats			Average	0.0783		Std Dev	0.0006		Rel Std Dev(%)	0.7370		<p>MICCOSUKEE PD Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-001657 11/08/2023 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>10:19</td></tr> <tr><td>Control Test</td><td>0.197</td><td>10:20</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:20</td></tr> <tr><td>Control Test</td><td>0.196</td><td>10:21</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:21</td></tr> <tr><td>Control Test</td><td>0.196</td><td>10:22</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>10:23</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.1963</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.2941</td><td></td></tr> </tbody> </table> <p>Operator's Signature </p>	Test	g/210L	Time	Air Blank	0.000	10:19	Control Test	0.197	10:20	Air Blank	0.000	10:20	Control Test	0.196	10:21	Air Blank	0.000	10:21	Control Test	0.196	10:22	Air Blank	0.000	10:23	Control Test Stats			Average	0.1963		Std Dev	0.0006		Rel Std Dev(%)	0.2941		<p style="text-align: center;">DGS</p> <p>MICCOSUKEE PD Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-001657 11/08/2023 Software: 8100.27</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>09:40</td></tr> <tr><td>Control Test</td><td>0.073</td><td>09:40</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:40</td></tr> <tr><td>Control Test</td><td>0.071</td><td>09:41</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:41</td></tr> <tr><td>Control Test</td><td>0.073</td><td>09:42</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:42</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0723</td><td></td></tr> <tr><td>Std Dev</td><td>0.0012</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>1.5964</td><td></td></tr> </tbody> </table> <p>Operator's Signature </p>	Test	g/210L	Time	Air Blank	0.000	09:40	Control Test	0.073	09:40	Air Blank	0.000	09:40	Control Test	0.071	09:41	Air Blank	0.000	09:41	Control Test	0.073	09:42	Air Blank	0.000	09:42	Control Test Stats			Average	0.0723		Std Dev	0.0012		Rel Std Dev(%)	1.5964	
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	10:03																																																																																																																																																	
Control Test	0.049	10:03																																																																																																																																																	
Air Blank	0.000	10:04																																																																																																																																																	
Control Test	0.049	10:05																																																																																																																																																	
Air Blank	0.000	10:05																																																																																																																																																	
Control Test	0.050	10:06																																																																																																																																																	
Air Blank	0.000	10:06																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0493																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	1.1703																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	10:10																																																																																																																																																	
Control Test	0.078	10:10																																																																																																																																																	
Air Blank	0.000	10:11																																																																																																																																																	
Control Test	0.078	10:12																																																																																																																																																	
Air Blank	0.000	10:12																																																																																																																																																	
Control Test	0.079	10:13																																																																																																																																																	
Air Blank	0.000	10:13																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0783																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.7370																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	10:19																																																																																																																																																	
Control Test	0.197	10:20																																																																																																																																																	
Air Blank	0.000	10:20																																																																																																																																																	
Control Test	0.196	10:21																																																																																																																																																	
Air Blank	0.000	10:21																																																																																																																																																	
Control Test	0.196	10:22																																																																																																																																																	
Air Blank	0.000	10:23																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.1963																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.2941																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	09:40																																																																																																																																																	
Control Test	0.073	09:40																																																																																																																																																	
Air Blank	0.000	09:40																																																																																																																																																	
Control Test	0.071	09:41																																																																																																																																																	
Air Blank	0.000	09:41																																																																																																																																																	
Control Test	0.073	09:42																																																																																																																																																	
Air Blank	0.000	09:42																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0723																																																																																																																																																		
Std Dev	0.0012																																																																																																																																																		
Rel Std Dev(%)	1.5964																																																																																																																																																		


# Florida Department of Law Enforcement Alcohol Testing Program

---

## REGISTRATION OF EVIDENTIARY BREATH TEST INSTRUMENT

**MANUFACTURER:** CMI, Inc.  
**MODEL:** Intoxilyzer 8000  
**SERIAL NUMBER:** 80-001657  
**OWNER:** Miccosukee Police Department  
**DATE OF REGISTRATION:** March 10, 2006

The above instrument is hereby approved for evidentiary breath alcohol testing in the State of Florida pursuant to Chapter 11D-8, Florida Administrative Code. This instrument and related records are subject to inspection at any time by the Florida Department of Law Enforcement.

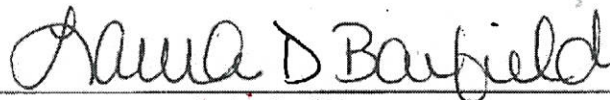

Authorized Representative  
Alcohol Testing Program  
Florida Department of Law Enforcement

**VOID**

EFFECTIVE  
12/19/23

