



INSTRUMENT PROCESSING SHEET

Agency Quincy Police DepartmentS/N 80-000965Florida Department of
Law EnforcementDate In 03-21-2023 DI Completion Date 6/21/2024☐ Ship ☒ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By IS	Quality Checks	By DA	Date 6/19/2024	Flow Calibration	By	Date																									
<input checked="" type="checkbox"/> Annual <input type="checkbox"/> Registration <input type="checkbox"/> Return from CMI / EE Visual Inspection: <input checked="" type="checkbox"/> Case <input checked="" type="checkbox"/> Handle <input checked="" type="checkbox"/> Keyboard <input checked="" type="checkbox"/> Dry Gas Shelf <input checked="" type="checkbox"/> Feet <input checked="" type="checkbox"/> Breath Tube <input checked="" type="checkbox"/> Ports <input checked="" type="checkbox"/> Screws Tight Other Equipment/ Accessories: <input type="checkbox"/> Power cord <input type="checkbox"/> Printer Cable <input type="checkbox"/> Static Bag <input type="checkbox"/> 12V DC Cable Notes: <u>Agency Inspector</u> <u>indicated that instrument's</u> <u>regulator is leaking dry gas.</u>		<input checked="" type="checkbox"/> Breath Tube Screen <input checked="" type="checkbox"/> Replace External O-Rings <input checked="" type="checkbox"/> Instrument Set Up Verified <input checked="" type="checkbox"/> R-Value <u>239</u> <input checked="" type="checkbox"/> Flow Verification (L/s) Flow Column # <u>ATP102</u> 32 mm <u>0.140</u> (.139 - .169) 36 mm <u>0.164</u> (.156 - .190) 53 mm <u>0.238</u> (.228 - .278) 103 mm <u>0.496</u> (.447 - .547) <input checked="" type="checkbox"/> Barometric Pressure Check Gauge ID # <u>28662</u> <input checked="" type="checkbox"/> Stability Checks			<input type="checkbox"/> Flow Column # _____ <input type="checkbox"/> 5L/min – 17mm <input type="checkbox"/> 15L/min – 53mm <input type="checkbox"/> 30L/min – 103mm <input type="checkbox"/> R-Value _____ <input type="checkbox"/> Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																											
		<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td>MP5088</td><td>202303K 03/29/2025</td></tr><tr><td>0.080</td><td>MP5089</td><td>202303L 03/29/2025</td></tr><tr><td>0.200</td><td>MP5090</td><td>202304C 04/05/2025</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG310901 04/19/2025</td></tr></tbody></table>			Simulator	Serial #	Lot #/Exp	0.050	MP5088	202303K 03/29/2025	0.080	MP5089	202303L 03/29/2025	0.200	MP5090	202304C 04/05/2025	0.080 DGS	N/A	AG310901 04/19/2025	<table border="1"><thead><tr><th colspan="2">Maintenance</th><th>By SP</th></tr></thead><tbody><tr><td colspan="2"><input type="checkbox"/> Battery Replacement <input checked="" type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other <u>Regulator replaced 6/6/24SP</u></td><td></td></tr></tbody></table>			Maintenance		By SP	<input type="checkbox"/> Battery Replacement <input checked="" type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other <u>Regulator replaced 6/6/24SP</u>						
Simulator	Serial #	Lot #/Exp																														
0.050	MP5088	202303K 03/29/2025																														
0.080	MP5089	202303L 03/29/2025																														
0.200	MP5090	202304C 04/05/2025																														
0.080 DGS	N/A	AG310901 04/19/2025																														
Maintenance		By SP																														
<input type="checkbox"/> Battery Replacement <input checked="" type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other <u>Regulator replaced 6/6/24SP</u>																																
Calibration Adjustment		Department Inspection																														
Barometric Pressure Gauge _____ ID # _____		Barometric Pressure ID# <u>28427</u>																														
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Gauge <u>1016</u> Instrument <u>1015</u> Mouth Alcohol Solution Lot # <u>2024-A</u> Acetone Stock Solution Lot # <u>2023-B</u>		
Simulator	Serial #	Lot #	Expiration																													
0.000		N/A	N/A																													
0.040																																
0.100																																
0.200																																
0.300																																
0.080 DGS	N/A																															
<input type="checkbox"/> Post Calibration Adjustment Stability Checks		<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td>MP5086</td></tr><tr><td>Interferent</td><td>MP5087</td></tr><tr><td>0.050</td><td>MP5088</td></tr><tr><td>0.080</td><td>MP5089</td></tr><tr><td>0.200</td><td>MP5090</td></tr></tbody></table>			Simulator	Serial Number	0.000	MP5086	Interferent	MP5087	0.050	MP5088	0.080	MP5089	0.200	MP5090																
Simulator	Serial Number																															
0.000	MP5086																															
Interferent	MP5087																															
0.050	MP5088																															
0.080	MP5089																															
0.200	MP5090																															
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>		Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			<table border="1"><thead><tr><th colspan="2">Attachments</th></tr></thead><tbody><tr><td><input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment</td><td><input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input checked="" type="checkbox"/> Form 40 <input type="checkbox"/> Other _____</td></tr></tbody></table>			Attachments		<input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input checked="" type="checkbox"/> Form 40 <input type="checkbox"/> Other _____				
Simulator	Serial #	Lot #	Expiration																													
0.050																																
0.080																																
0.200																																
0.080 DGS	N/A																															
Attachments																																
<input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Calibration Adjustment	<input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Calibration <input checked="" type="checkbox"/> Form 40 <input type="checkbox"/> Other _____																															
Notes/Suggested Service: <u>Instrument had incorrect military</u> <u>time so time was adjusted.</u> <u>Bypassed AI to operate instrument DA 6/19/2024</u> <u>It was observed that the date was off by a single day</u> <u>when inspection was initiated. This caused</u> <u>the date on the stability checks and Form 40</u> <u>to be inaccurate; these records were generated on</u> <u>6/19/2024, not 6/18/2024. PN 6/25/2024</u>		<input checked="" type="checkbox"/> Instrument Complies with Chapter 11D-8, FAC <input type="checkbox"/> Instrument Does Not Comply with Chapter 11D-8, FAC <input checked="" type="checkbox"/> Return to/Place into Evidentiary Use <input type="checkbox"/> Remain Out of Evidentiary Use <input checked="" type="checkbox"/> Conduct an Agency Inspection Before Evidentiary Use <div>Digitally signed by Taylor Gutschow Date: 2024.06.27 12:54:54 -04'00'</div> <div>Shayla Platt Date: 2024.06.27 15:17:45 -04'00'</div> <div>Tech Review / Date Admin Review / Date</div>																														

Tech: added date and initial to strike-through on Form
40. DA 6/27/24

Stability Checks

80-000965

06/19/24 DA

QUINCY PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000965
06/18/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	11:18
Control Test	0.050	11:19
Air Blank	0.000	11:20
Control Test	0.049	11:20
Air Blank	0.000	11:21
Control Test	0.049	11:22
Air Blank	0.000	11:22
Control Test Stats		
Average	0.0493	
Std Dev	0.0006	
Rel Std Dev(%)	1.1703	



Operator's Signature

QUINCY PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000965
06/18/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	11:24
Control Test	0.081	11:24
Air Blank	0.000	11:25
Control Test	0.080	11:26
Air Blank	0.000	11:26
Control Test	0.080	11:27
Air Blank	0.000	11:27
Control Test Stats		
Average	0.0803	
Std Dev	0.0006	
Rel Std Dev(%)	0.7187	



Operator's Signature

QUINCY PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000965
06/18/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	11:28
Control Test	0.199	11:29
Air Blank	0.000	11:30
Control Test	0.198	11:30
Air Blank	0.000	11:31
Control Test	0.196	11:31
Air Blank	0.000	11:32
Control Test Stats		
Average	0.1977	
Std Dev	0.0015	
Rel Std Dev(%)	0.7728	



Operator's Signature

QUINCY PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-000965
06/18/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	11:34
Control Test	0.079	11:34
Air Blank	0.000	11:35
Control Test	0.079	11:35
Air Blank	0.000	11:36
Control Test	0.079	11:36
Air Blank	0.000	11:36
Control Test Stats		
Average	0.0790	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

DGS



Operator's Signature

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: QUINCY PD

Time of Inspection: 10:10

Date of Inspection: 06/18/2024

Serial Number: 80-000965

Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: _____

Remarks:

BYPASS AI TO OPERATE INSTRUMENT COMPLIANCE NOT DETERMINED


NA - Compliance not determined

DA 6/19/24

Comment added 6/27/24 DA

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

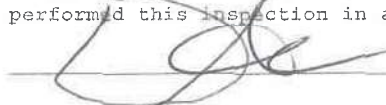

DESTINEE N ARMSTRONG

Signature and Printed Name

06/18/2024
Date

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: QUINCY PD

Time of Inspection: 13:03

Date of Inspection: 06/21/2024

Serial Number: 80-000965

Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted	Yes	
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202303K Exp: 03/29/2025	0.08g/210L Test (g/210L) Lot#:202303L Exp: 03/29/2025	0.20g/210L Test (g/210L) Lot#:202304C Exp: 04/05/2025	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:06723080A5 Exp: 04/05/2025
0.000	0.050	0.080	0.199	0.080
0.000	0.049	0.080	0.199	0.080
0.000	0.049	0.079	0.199	0.079
0.000	0.049	0.080	0.199	0.080
0.000	0.050	0.080	0.200	0.079
0.000	0.050	0.080	0.199	0.079
0.000	0.050	0.080	0.199	0.079
0.000	0.050	0.080	0.199	0.079
0.000	0.050	0.080	0.199	0.079
0.000	0.050	0.080	0.200	0.079
0.000	0.050	0.080	0.200	0.079
Standard Deviations	0.0004	0.0003	0.0004	0.0004

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0003 Number of Simulators Used: 5

Remarks:


Time-Date changed, INCORRECT DATE PRESENT WHEN DI STARTED

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

 PHIL NICODEMO
Signature and Printed Name

06/21/2024
Date

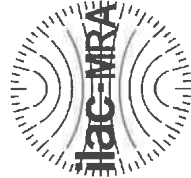

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2331 Phillips Road.
Suite B1032
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000965, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	80-000965	UNCERTAINTY* \pm	
Owning Agency:	QUINCY PD	0.050 g/ 210 L	0.004
Calibration Date:	06/21/2024	0.080 g/ 210 L	0.004
Calibration Time:	13:03	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

06/21/2024

Date

PHIL NICODEMO,

Department Inspector

FDLE/ATP Form 69 March 2022

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality