



INSTRUMENT PROCESSING SHEET

Agency Daytona Beach PDS/N 80-001135Florida Department of
Law EnforcementDate In 11/07/2024 DI Completion Date 12/10/2024☒ Ship ☐ P/U ☐ H/D ☐ CMI ☐ EE

Intake By <u>ALL</u> Date <u>11/07/2024</u>		Quality Checks By <u>ALL</u> Date <u>11/07/2024</u>		Flow Calibration By _____ Date _____																													
☒ Annual ☐ Registration ☒ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: _____ _____ _____ _____ _____ _____ _____ _____ _____ _____		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>245</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP-102</u> 32 mm <u>.164</u> (.139 - .169) 36 mm <u>.183</u> (.156 - .190) 53 mm <u>.257</u> (.228 - .278) 103 mm <u>.535</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>28421</u> ☒ Stability Checks		☐ Flow Column # _____ ☐ 5L/min – 17mm ☐ 15L/min – 53mm ☐ 30L/min – 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																													
		<table border="1" style="width:100%"><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr><tr><td>0.050</td><td>MP6291</td><td>202406K 06/19/2026</td></tr><tr><td>0.080</td><td>MP6292</td><td>202406L 06/19/2026</td></tr><tr><td>0.200</td><td>MP6293</td><td>202406N 06/20/2026</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG310901 04/19/2025</td></tr></table>		Simulator	Serial #	Lot #/Exp	0.050	MP6291	202406K 06/19/2026	0.080	MP6292	202406L 06/19/2026	0.200	MP6293	202406N 06/20/2026	0.080 DGS	N/A	AG310901 04/19/2025	Maintenance By _____ Date _____ ☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Breath Tube Replacement ☐ Other _____ _____ _____ _____ _____														
Simulator	Serial #	Lot #/Exp																															
0.050	MP6291	202406K 06/19/2026																															
0.080	MP6292	202406L 06/19/2026																															
0.200	MP6293	202406N 06/20/2026																															
0.080 DGS	N/A	AG310901 04/19/2025																															
Calibration Adjustment By _____				Department Inspection By <u>DA</u>																													
Barometric Pressure Gauge _____ ID # _____				Barometric Pressure ID# <u>28427</u>																													
<table border="1" style="width:100%"><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></table>				Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Gauge <u>1014</u> Instrument <u>1014</u> Mouth Alcohol Solution Lot # <u>2024-A</u> Acetone Stock Solution Lot # <u>2023-B</u>	
Simulator	Serial #	Lot #	Expiration																														
0.000		N/A	N/A																														
0.040																																	
0.100																																	
0.200																																	
0.300																																	
0.080 DGS	N/A																																
☐ Post Calibration Adjustment Stability Checks				<table border="1" style="width:100%"><tr><th>Simulator</th><th>Serial Number</th></tr><tr><td>0.000</td><td>MP5086</td></tr><tr><td>Interferent</td><td>MP5087</td></tr><tr><td>0.050</td><td>MP5088</td></tr><tr><td>0.080</td><td>MP5089</td></tr><tr><td>0.200</td><td>MP5090</td></tr></table>		Simulator	Serial Number	0.000	MP5086	Interferent	MP5087	0.050	MP5088	0.080	MP5089	0.200	MP5090																
Simulator	Serial Number																																
0.000	MP5086																																
Interferent	MP5087																																
0.050	MP5088																																
0.080	MP5089																																
0.200	MP5090																																
<table border="1" style="width:100%"><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></table>				Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Attachments ☒ Form 41 ☐ Post-Stability Checks ☒ Stability Checks ☐ Flow Calibration ☒ Calibration Certificate ☒ Form 40 ☐ Calibration Adjustment ☒ Other <u>DGS stabilities</u>									
Simulator	Serial #	Lot #	Expiration																														
0.050																																	
0.080																																	
0.200																																	
0.080 DGS	N/A																																
Notes/Suggested Service: <u>On first .080 DGS run the instrument produced one reading of all 0s, Ensured connections were secure and reran the stability with all 0s. 11/07/2024 ALL</u> <u>I performed 10 additional analyses of the DGS to assess instrument. Instrument produced values for all 10 analyses within nominal range. Repeated DGS stability check within nominal range. Lot number of DGS used was AG429602 expiring 10/22/2026. DA 12/10/24</u>				☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use by <u>Shayla Platt</u>																													
Taylor Gutschow Digitally signed by Taylor Gutschow Date: 2024.12.11 12:17:29 -05'00'				Platt Date: 2024.12.16 14:07:29 -05'00'																													
Tech Review / Date _____				Admin Review / Date _____																													

Stability checks

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
11/07/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	14:02
Control Test	0.049	14:03
Air Blank	0.000	14:03
Control Test	0.049	14:04
Air Blank	0.000	14:04
Control Test	0.049	14:05
Air Blank	0.000	14:05
Control Test Stats		
Average	0.0490	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

Operator's Signature 

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
11/07/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	14:08
Control Test	0.081	14:09
Air Blank	0.000	14:09
Control Test	0.081	14:10
Air Blank	0.000	14:10
Control Test	0.080	14:11
Air Blank	0.000	14:12
Control Test Stats		
Average	0.0807	
Std Dev	0.0006	
Rel Std Dev(%)	0.7157	

Wet

Operator's Signature 

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
11/07/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	14:16
Control Test	0.204	14:17
Air Blank	0.000	14:17
Control Test	0.203	14:18
Air Blank	0.000	14:18
Control Test	0.203	14:19
Air Blank	0.000	14:20
Control Test Stats		
Average	0.2033	
Std Dev	0.0006	
Rel Std Dev(%)	0.2839	

Operator's Signature 

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
11/07/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	14:22
Control Test	0.000	14:22
Air Blank	0.000	14:23
Control Test	0.079	14:23
Air Blank	0.000	14:24
Control Test	0.080	14:24
Air Blank	0.000	14:24
Control Test Stats		
Average	0.0530	
Std Dev	0.0459	
Rel Std Dev(%)	86.6077	

065

Operator's Signature 

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
11/07/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	14:25
Control Test	0.000	14:26
Air Blank	0.000	14:26
Control Test	0.000	14:27
Air Blank	0.000	14:28
Control Test	0.000	14:28
Air Blank	0.000	14:29
Control Test Stats		
Average	0.0000	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

065

Operator's Signature 

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: DAYTONA BEACH P.D.

Serial Number: 80-001135

Time of Inspection: 12:53

Date of Inspection: 11/07/2024

Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK	Yes	
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot #: Exp:

Number of Simulators Used: 0

Remarks:

BYPASS AI FOR INSPECTION COMPLIANCE NOT DETERMINED

The above instrument complies (☒) does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



ALFONSO L LOWRY

Signature and Printed Name

11/07/2024

Date

10 Additional Analyses of DGS 80-001135

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
12/10/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	10:02
Control Test	0.077	10:02
Air Blank	0.000	10:03
Control Test	0.078	10:03
Air Blank	0.000	10:04
Control Test	0.078	10:04
Air Blank	0.000	10:05
Control Test	0.077	10:05
Air Blank	0.000	10:05
Control Test	0.078	10:06
Air Blank	0.000	10:06
Control Test	0.078	10:07
Air Blank	0.000	10:07
Control Test	0.078	10:07
Air Blank	0.000	10:08
Control Test	0.077	10:08
Air Blank	0.000	10:09
Control Test	0.077	10:09
Air Blank	0.000	10:10
Control Test	0.077	10:10
Air Blank	0.000	10:10
Control Test Stats		
Average	0.0775	
Std Dev	0.0005	
Rel Std Dev(%)	0.6801	

DGS

DA

Operator's Signature

10 additional analyses of the dry gas standard.
All results within nominal range.

Lot #: AG429602

Expiration date: 10/22/26

DA 12/10/24

Repeat of DGS Stability Check 80-001135

DAYTONA BEACH PD
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
12/10/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	10:13
Control Test	0.078	10:13
Air Blank	0.000	10:14
Control Test	0.078	10:14
Air Blank	0.000	10:15
Control Test	0.078	10:15
Air Blank	0.000	10:15
Control Test Stats		
Average	0.0780	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

DGS

DA

Operator's Signature

LOT # : AG429602
Expiration date: 10/22/24
DA 12/10/24

Florida Department of Law Enforcement

Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: DAYTONA BEACH PD
Time of Inspection: 12:09

Date of Inspection: 12/10/2024

Serial Number: 80-001135
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202406K Exp: 06/19/2026	0.08g/210L Test (g/210L) Lot#:202406L Exp: 06/19/2026	0.20g/210L Test (g/210L) Lot#:202406N Exp: 06/20/2026	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG429602 Exp: 10/22/2026
0.000	0.049	0.080	0.203	0.078
0.000	0.050	0.080	0.203	0.077
0.000	0.049	0.080	0.203	0.078
0.000	0.049	0.080	0.203	0.078
0.000	0.050	0.080	0.204	0.078
0.000	0.050	0.081	0.203	0.078
0.000	0.050	0.080	0.203	0.078
0.000	0.050	0.080	0.203	0.078
0.000	0.050	0.080	0.204	0.078
0.000	0.050	0.080	0.204	0.078

Standard Deviations	0.0004	0.0003	0.0004	0.0003
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0003 Number of Simulators Used: 5

Remarks:

REPEATED MIN SAMPLE VOLUME DIDNT PROVIDE SAMPLE IN TIME

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.


I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



DESTINEE N ARMSTRONG

Signature and Printed Name

12/10/2024
Date

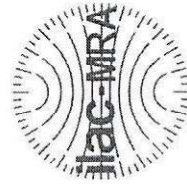

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2331 Phillips Road
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-001135, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-001135</u>	UNCERTAINTY* $\pm$	
Owning Agency:	<u>DAYTONA BEACH PD</u>	0.050 g/210 L	0.004
Calibration Date:	<u>12/10/2024</u>	0.080 g/210 L	0.004
Calibration Time:	<u>12:09</u>	0.200 g/210 L	0.007
		0.080 g/210 L Dry Gas Control	0.005

All results are reported in g/210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

12/10/2024

Date

DESTINEE N ARMSTRONG,

Department Inspector

FDLE/ATP Form 69 October 2024

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality



INSTRUMENT PROCESSING SHEET

Agency Daytona Beach PD

S/N 80-001135

Florida Department of
Law Enforcement

Date In 06/20/2024 DI Completion Date _____

☐ Ship ☐ P/U ☐ H/D ☒ CMI ☐ EE

Intake	By	ALL	Date	06/20/2024	Quality Checks	By	Date	Flow Calibration	By	Date																																			
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☐ Static Bag ☐ 12V DC Cable Notes: side paneling loose on inlet side					☐ Breath Tube Screen ☐ Replace External O-Rings ☐ Instrument Set Up Verified ☐ R-Value _____ ☐ Flow Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547) ☐ Barometric Pressure Check Gauge ID # _____ ☐ Stability Checks			Flow Column # _____ ☐ 5L/min – 17mm ☐ 15L/min – 53mm ☐ 30L/min – 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																																					
					<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td></tr></tbody></table>			Simulator	Serial #	Lot #/Exp	0.050			0.080			0.200			0.080 DGS	N/A		<table border="1"><thead><tr><th colspan="2">Maintenance</th><th>By</th><th>Date</th></tr></thead><tbody><tr><td>☐ Battery Replacement</td><td></td><td></td><td></td></tr><tr><td>☐ Dry Gas Regulator Replacement</td><td></td><td></td><td></td></tr><tr><td>☐ Breath Tube Replacement</td><td></td><td></td><td></td></tr><tr><td>☐ Other</td><td></td><td></td><td></td></tr></tbody></table>			Maintenance		By	Date	☐ Battery Replacement				☐ Dry Gas Regulator Replacement				☐ Breath Tube Replacement				☐ Other			
Simulator	Serial #	Lot #/Exp																																											
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
Maintenance		By	Date																																										
☐ Battery Replacement																																													
☐ Dry Gas Regulator Replacement																																													
☐ Breath Tube Replacement																																													
☐ Other																																													
Calibration Adjustment					Department Inspection																																								
Barometric Pressure Gauge _____ ID # _____					Barometric Pressure ID# _____																																								
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>					Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Gauge _____ Instrument _____ Mouth Alcohol Solution Lot # _____ Acetone Stock Solution Lot # _____												
Simulator	Serial #	Lot #	Expiration																																										
0.000		N/A	N/A																																										
0.040																																													
0.100																																													
0.200																																													
0.300																																													
0.080 DGS	N/A																																												
☐ Post Calibration Adjustment Stability Checks					<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td></td></tr><tr><td>Interferent</td><td></td></tr><tr><td>0.050</td><td></td></tr><tr><td>0.080</td><td></td></tr><tr><td>0.200</td><td></td></tr></tbody></table>					Simulator	Serial Number	0.000		Interferent		0.050		0.080		0.200																									
Simulator	Serial Number																																												
0.000																																													
Interferent																																													
0.050																																													
0.080																																													
0.200																																													
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>					Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Attachments <table border="1"><tbody><tr><td>☐ Form 41</td><td>☐ Post-Stability Checks</td></tr><tr><td>☐ Stability Checks</td><td>☐ Flow Calibration</td></tr><tr><td>☐ Calibration Certificate</td><td>☐ Form 40</td></tr><tr><td>☐ Calibration Adjustment</td><td>☒ Other <u>Form 51</u></td></tr></tbody></table>					☐ Form 41	☐ Post-Stability Checks	☐ Stability Checks	☐ Flow Calibration	☐ Calibration Certificate	☐ Form 40	☐ Calibration Adjustment	☒ Other <u>Form 51</u>								
Simulator	Serial #	Lot #	Expiration																																										
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
☐ Form 41	☐ Post-Stability Checks																																												
☐ Stability Checks	☐ Flow Calibration																																												
☐ Calibration Certificate	☐ Form 40																																												
☐ Calibration Adjustment	☒ Other <u>Form 51</u>																																												
Notes/Suggested Service: _____ Sending instrument to repair due to DSP fails- SP					☐ Instrument Complies with Chapter 11D-8, FAC ☒ Instrument Does Not Comply with Chapter 11D-8, FAC ☐ Return to/Place into Evidentiary Use ☒ Remain Out of Evidentiary Use ☐ Conduct an Agency Inspection Before Evidentiary Use																																								
					Tech Review / Date _____ Admin Review / Date _____																																								

Return Material Authorization

Ship to:

☒ CMI, Inc.

☐ Enforcement Electronics

Shipment to repair facility authorized by: Justin Dunne on 6/28/24

Items Returned: Instrument ☐ Supplies ☐ Other ☐ Describe: _____

Instrument Model: Intoxilyzer 8000 Serial Number: 80-001135

Bill To Address:

Daytona Beach PD

Ship to Address:

FDLE-Tallahassee

Reason for Return:

DSP Fails

Please choose one of the following options:

☐ 1. I _____, authorize all repairs.

☐ 2. I _____, authorize repairs up to \$_____.

☒ 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Justin Dunne

Phone #: _____ Email: DunneJustin@dbpd.us

ATP Contact Name: Shayla Platt ATP Email: _____



INSTRUMENT PROCESSING SHEET

Agency Daytona Beach PDS/N 80-001135Florida Department of
Law EnforcementDate In 4/16/2024 DI Completion Date 5/6/2024☒ Ship ☐ P/U ☐ H/D ☐ CMI ☐ EE

Intake	By <u>BS</u>	Date <u>4/16/2024</u>	Quality Checks	By <u>DA</u>	Date <u>5/2/2024</u>	Flow Calibration	By _____	Date _____																												
☒ Annual ☐ Registration ☐ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: <u>O-ring found in simulator return port.</u> <u>Bypassed AI to operate instrument. DA 5/2/24</u>			☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value <u>228</u> ☒ Flow Verification (L/s) Flow Column # <u>ATP105</u> 32 mm <u>0.156</u> (.139 - .169) 36 mm <u>0.175</u> (.156 - .190) 53 mm <u>0.246</u> (.228 - .278) 103 mm <u>0.511</u> (.447 - .547) ☒ Barometric Pressure Check Gauge ID # <u>28663</u> ☒ Stability Checks			Flow Column # _____ ☐ 5L/min – 17mm ☐ 15L/min – 53mm ☐ 30L/min – 103mm ☐ R-Value _____ ☐ Post Calibration Verification (L/s) Flow Column # _____ 32 mm _____ (.139 - .169) 36 mm _____ (.156 - .190) 53 mm _____ (.228 - .278) 103 mm _____ (.447 - .547)																														
			<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td>MP5088</td><td>202303K 03/29/2025</td></tr><tr><td>0.080</td><td>MP5089</td><td>202303L 03/29/2025</td></tr><tr><td>0.200</td><td>MP5090</td><td>202304C 04/05/2025</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG310901 04/19/2025</td></tr></tbody></table>	Simulator	Serial #	Lot #/Exp	0.050	MP5088	202303K 03/29/2025	0.080	MP5089	202303L 03/29/2025	0.200	MP5090	202304C 04/05/2025	0.080 DGS	N/A	AG310901 04/19/2025																		
Simulator	Serial #	Lot #/Exp																																		
0.050	MP5088	202303K 03/29/2025																																		
0.080	MP5089	202303L 03/29/2025																																		
0.200	MP5090	202304C 04/05/2025																																		
0.080 DGS	N/A	AG310901 04/19/2025																																		
Calibration Adjustment			By _____		Department Inspection By <u>PN</u>																															
Barometric Pressure Gauge _____ ID # _____					Barometric Pressure ID# <u>28421</u>																															
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>			Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A					Gauge <u>1014</u> Instrument <u>1013</u> Mouth Alcohol Solution Lot # <u>2023-A</u> Acetone Stock Solution Lot # <u>2023-B</u>			
Simulator	Serial #	Lot #	Expiration																																	
0.000		N/A	N/A																																	
0.040																																				
0.100																																				
0.200																																				
0.300																																				
0.080 DGS	N/A																																			
☐ Post Calibration Adjustment Stability Checks					<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td>MP6289</td></tr><tr><td>Interferent</td><td>MP6290</td></tr><tr><td>0.050</td><td>MP6291</td></tr><tr><td>0.080</td><td>MP6292</td></tr><tr><td>0.200</td><td>MP6293</td></tr></tbody></table>				Simulator	Serial Number	0.000	MP6289	Interferent	MP6290	0.050	MP6291	0.080	MP6292	0.200	MP6293																
Simulator	Serial Number																																			
0.000	MP6289																																			
Interferent	MP6290																																			
0.050	MP6291																																			
0.080	MP6292																																			
0.200	MP6293																																			
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>			Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A					Attachments ☒ Form 41 ☐ Post-Stability Checks ☒ Stability Checks ☐ Flow Calibration ☒ Calibration Certificate ☒ Form 40 ☐ Calibration Adjustment ☐ Other _____											
Simulator	Serial #	Lot #	Expiration																																	
0.050																																				
0.080																																				
0.200																																				
0.080 DGS	N/A																																			
Notes/Suggested Service: _____ <u>Instrument arrived with note explaining that a "Temp Reg Fail" occurred during a diagnostic check. Breath hose was removed, tested, and resealed on 4/19. Temp Reg Fail exception message was not produced and instrument was inspected. PN 5/6/2024</u>					☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use ☒ Conduct an Agency Inspection Before Evidentiary Use																															
During interferent test, the instrument produced an interferent detect exception message during an air blank; fan was turned on in the vicinity of the inspection and simulator connection was checked. Repeated test. PN 5/6/2024			Taylor Gutschow Digitally signed by Taylor Gutschow Date: 2024.05.15 15:39:48 -0400		Shayla Platt Digitally signed by Shayla Platt Date: 2024.05.16 10:51:13 -0400																															
			Tech Review / Date _____		Admin Review / Date _____																															

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: DAYTONA BEACH P.D.

Time of Inspection: 11:55

Date of Inspection: 05/02/2024

Serial Number: 80-001135

Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: _____

Remarks:

BYPASS AI TO OPERATE INSTRUMENT COMPLIANCE NOT DETERMINED

Didn't verify instrument compliance 5/2/24 DA

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



DESTINEE N ARMSTRONG

Signature and Printed Name


05/02/2024

Date

Stability Checks 80-001135 5/2/24 DA

DAYTONA BEACH P.D.
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
05/02/2024
Software: 8100.27


Test	g/210L	Time
Air Blank	0.000	12:05
Control Test	0.050	12:06
Air Blank	0.000	12:07
Control Test	0.049	12:07
Air Blank	0.000	12:08
Control Test	0.051	12:09
Air Blank	0.000	12:09
Control Test Stats		
Average	0.0500	
Std Dev	0.0010	
Rel Std Dev(%)	2.0000	

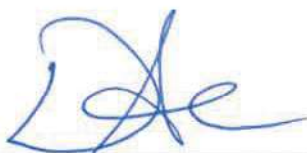

Operator's Signature

DAYTONA BEACH P.D.
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
05/02/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	12:12
Control Test	0.080	12:13
Air Blank	0.000	12:13
Control Test	0.080	12:14
Air Blank	0.000	12:15
Control Test	0.079	12:16
Air Blank	0.000	12:16
Control Test Stats		
Average	0.0797	
Std Dev	0.0006	
Rel Std Dev(%)	0.7247	

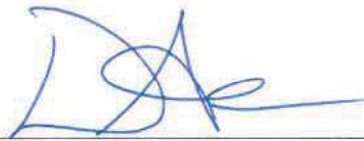

Operator's Signature

DAYTONA BEACH P.D.
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
05/02/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	12:18
Control Test	0.203	12:19
Air Blank	0.000	12:20
Control Test	0.202	12:20
Air Blank	0.000	12:21
Control Test	0.201	12:22
Air Blank	0.000	12:22
Control Test Stats		
Average	0.2020	
Std Dev	0.0010	
Rel Std Dev(%)	0.4950	




Operator's Signature

DGS

DAYTONA BEACH P.D.
Intoxilyzer - Alcohol Analyzer
Model 8000 SN 80-001135
05/02/2024
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	12:24
Control Test	0.079	12:24
Air Blank	0.000	12:25
Control Test	0.079	12:25
Air Blank	0.000	12:25
Control Test	0.079	12:26
Air Blank	0.000	12:26
Control Test Stats		
Average	0.0790	
Std Dev	0.0000	
Rel Std Dev(%)	0.0000	

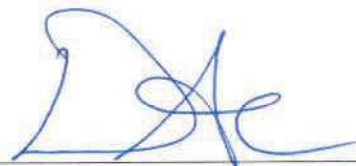

Operator's Signature

Florida Department of Law Enforcement

Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: DAYTONA BEACH P.D.

Serial Number: 80-001135

Time of Inspection: 14:50

Date of Inspection: 05/06/2024

Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: 202303K Exp: 03/29/2025	0.08g/210L Test (g/210L) Lot#: 202303L Exp: 03/29/2025	0.20g/210L Test (g/210L) Lot#: 202304C Exp: 04/05/2025	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: 06723080A5 Exp: 04/05/2025
0.000	0.050	0.080	0.203	0.079
0.000	0.048	0.081	0.203	0.079
0.000	0.050	0.080	0.201	0.080
0.000	0.050	0.081	0.203	0.079
0.000	0.051	0.081	0.203	0.077
0.000	0.049	0.081	0.202	0.080
0.000	0.050	0.081	0.202	0.079
0.000	0.050	0.081	0.203	0.079
0.000	0.050	0.080	0.203	0.080
0.000	0.050	0.081	0.202	0.080

Standard Deviations	0.0007	0.0004	0.0007	0.0009
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0006 Number of Simulators Used: 5

Remarks:

Int Det: CHECKED SIMULATOR CONNECTION AND REPEATED.

The above instrument complies { ☒ } does not comply () with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



PHIL NICODEMO

Signature and Printed Name

05/06/2024

Date



Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2331 Phillips Road.
Suite B1032
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-001135, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-001135</u>	UNCERTAINTY* $\pm$	
Owning Agency:	<u>DAYTONA BEACH P.D.</u>	0.050 g/ 210 L	0.004
Calibration Date:	<u>05/06/2024</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>14:50</u>	0.200 g/ 210 L	0.007
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.
This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

05/06/2024

Date


PHIL NICODEMO,
Department Inspector

FDLE/ATP Form 69 March 2022

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality