

Stability Checks

0.05g/210L	0.08g/210L	0.20g/210L	DGS 0.08g/210L																																																																																																																																				
0.047 to 0.053	0.077 to 0.083	0.194 to 0.206	0.077 to 0.083																																																																																																																																				
✓ PALM BEACH CSO Intoxilyzer - Alcohol Analyzer Model 8000 01/10/2024 SN 80-006476 Software: 8100.27 Test g/210L Time <table border="1"> <tr><td>Air Blank</td><td>0.000</td><td>14:28</td></tr> <tr><td>Control Test</td><td>0.049</td><td>14:29</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:29</td></tr> <tr><td>Control Test</td><td>0.050</td><td>14:30</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:31</td></tr> <tr><td>Control Test</td><td>0.050</td><td>14:31</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:32</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0497</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>1.1625</td><td></td></tr> </table> Operator's Signature 	Air Blank	0.000	14:28	Control Test	0.049	14:29	Air Blank	0.000	14:29	Control Test	0.050	14:30	Air Blank	0.000	14:31	Control Test	0.050	14:31	Air Blank	0.000	14:32	Control Test Stats			Average	0.0497		Std Dev	0.0006		Rel Std Dev(%)	1.1625		✓ PALM BEACH CSO Intoxilyzer - Alcohol Analyzer Model 8000 01/10/2024 SN 80-006476 Software: 8100.27 Test g/210L Time <table border="1"> <tr><td>Air Blank</td><td>0.000</td><td>14:35</td></tr> <tr><td>Control Test</td><td>0.080</td><td>14:35</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:36</td></tr> <tr><td>Control Test</td><td>0.079</td><td>14:37</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:37</td></tr> <tr><td>Control Test</td><td>0.080</td><td>14:38</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:39</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0797</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7247</td><td></td></tr> </table> Operator's Signature 	Air Blank	0.000	14:35	Control Test	0.080	14:35	Air Blank	0.000	14:36	Control Test	0.079	14:37	Air Blank	0.000	14:37	Control Test	0.080	14:38	Air Blank	0.000	14:39	Control Test Stats			Average	0.0797		Std Dev	0.0006		Rel Std Dev(%)	0.7247		✓ PALM BEACH CSO Intoxilyzer - Alcohol Analyzer Model 8000 01/10/2024 SN 80-006476 Software: 8100.27 Test g/210L Time <table border="1"> <tr><td>Air Blank</td><td>0.000</td><td>14:41</td></tr> <tr><td>Control Test</td><td>0.197</td><td>14:42</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:42</td></tr> <tr><td>Control Test</td><td>0.197</td><td>14:43</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:44</td></tr> <tr><td>Control Test</td><td>0.197</td><td>14:44</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:45</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.1970</td><td></td></tr> <tr><td>Std Dev</td><td>0.0000</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.0000</td><td></td></tr> </table> Operator's Signature 	Air Blank	0.000	14:41	Control Test	0.197	14:42	Air Blank	0.000	14:42	Control Test	0.197	14:43	Air Blank	0.000	14:44	Control Test	0.197	14:44	Air Blank	0.000	14:45	Control Test Stats			Average	0.1970		Std Dev	0.0000		Rel Std Dev(%)	0.0000		✓ PALM BEACH CSO Intoxilyzer - Alcohol Analyzer Model 8000 01/10/2024 SN 80-006476 Software: 8100.27 Test g/210L Time <table border="1"> <tr><td>Air Blank</td><td>0.000</td><td>14:46</td></tr> <tr><td>Control Test</td><td>0.080</td><td>14:46</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:47</td></tr> <tr><td>Control Test</td><td>0.079</td><td>14:47</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:48</td></tr> <tr><td>Control Test</td><td>0.079</td><td>14:48</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>14:49</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0793</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7277</td><td></td></tr> </table> Operator's Signature 	Air Blank	0.000	14:46	Control Test	0.080	14:46	Air Blank	0.000	14:47	Control Test	0.079	14:47	Air Blank	0.000	14:48	Control Test	0.079	14:48	Air Blank	0.000	14:49	Control Test Stats			Average	0.0793		Std Dev	0.0006		Rel Std Dev(%)	0.7277	
Air Blank	0.000	14:28																																																																																																																																					
Control Test	0.049	14:29																																																																																																																																					
Air Blank	0.000	14:29																																																																																																																																					
Control Test	0.050	14:30																																																																																																																																					
Air Blank	0.000	14:31																																																																																																																																					
Control Test	0.050	14:31																																																																																																																																					
Air Blank	0.000	14:32																																																																																																																																					
Control Test Stats																																																																																																																																							
Average	0.0497																																																																																																																																						
Std Dev	0.0006																																																																																																																																						
Rel Std Dev(%)	1.1625																																																																																																																																						
Air Blank	0.000	14:35																																																																																																																																					
Control Test	0.080	14:35																																																																																																																																					
Air Blank	0.000	14:36																																																																																																																																					
Control Test	0.079	14:37																																																																																																																																					
Air Blank	0.000	14:37																																																																																																																																					
Control Test	0.080	14:38																																																																																																																																					
Air Blank	0.000	14:39																																																																																																																																					
Control Test Stats																																																																																																																																							
Average	0.0797																																																																																																																																						
Std Dev	0.0006																																																																																																																																						
Rel Std Dev(%)	0.7247																																																																																																																																						
Air Blank	0.000	14:41																																																																																																																																					
Control Test	0.197	14:42																																																																																																																																					
Air Blank	0.000	14:42																																																																																																																																					
Control Test	0.197	14:43																																																																																																																																					
Air Blank	0.000	14:44																																																																																																																																					
Control Test	0.197	14:44																																																																																																																																					
Air Blank	0.000	14:45																																																																																																																																					
Control Test Stats																																																																																																																																							
Average	0.1970																																																																																																																																						
Std Dev	0.0000																																																																																																																																						
Rel Std Dev(%)	0.0000																																																																																																																																						
Air Blank	0.000	14:46																																																																																																																																					
Control Test	0.080	14:46																																																																																																																																					
Air Blank	0.000	14:47																																																																																																																																					
Control Test	0.079	14:47																																																																																																																																					
Air Blank	0.000	14:48																																																																																																																																					
Control Test	0.079	14:48																																																																																																																																					
Air Blank	0.000	14:49																																																																																																																																					
Control Test Stats																																																																																																																																							
Average	0.0793																																																																																																																																						
Std Dev	0.0006																																																																																																																																						
Rel Std Dev(%)	0.7277																																																																																																																																						

Florida Department of Law Enforcement

Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: PALM BEACH CSO
Time of Inspection: 11:28

Date of Inspection: 01/11/2024

Serial Number: 80-006476
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202303K Exp: 03/29/2025	0.08g/210L Test (g/210L) Lot#:202303L Exp: 03/29/2025	0.20g/210L Test (g/210L) Lot#:202304C Exp: 04/05/2025	0.08 g/210L Dry Gas Std Test* (g/210L) Lot#:01923080A3 Exp: 02/05/2025
0.000	0.049	0.080	0.198	0.080
0.000	0.050	0.080	0.197	0.080
0.000	0.049	0.080	0.197	0.080
0.000	0.049	0.080	0.198	0.080
0.000	0.050	0.080	0.198	0.080
0.000	0.050	0.080	0.197	0.081
0.000	0.050	0.081	0.197	0.080
0.000	0.050	0.080	0.198	0.080
0.000	0.050	0.080	0.198	0.080
0.000	0.050	0.081	0.198	0.080

Standard Deviations	0.0004	0.0004	0.0005	0.0003
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5


Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

Taylor D Gutschow TAYLOR D GUTSCHOW
Signature and Printed Name

01/11/2024
Date

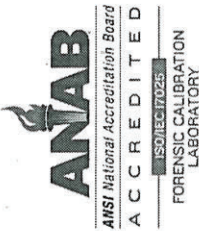

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
4700 Terminal Drive, Suite 1
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-006476, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	80-006476	UNCERTAINTY* $\pm$
Owning Agency:	PALM BEACH CSO	0.050 g/ 210 L 0.004
Calibration Date:	01/11/2024	0.080 g/ 210 L 0.004
Calibration Time:	11:28	0.200 g/ 210 L 0.007
		0.080 g/ 210 L Dry Gas Control 0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

01/11/2024

Date

TAYLOR D GUTSCHOW,
Department Inspector

FDLE/ATP Form 69 December 2021

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality