



INSTRUMENT PROCESSING SHEET

Agency Hillsborough County Sheriff's Office

S/N 80-000830

Florida Department of
Law Enforcement

Date In 6/9/2025

DI Completion Date 06/13/2025

☐ Ship ☐ P/U ☐ H/D ☒ CMI ☐ EE

Intake	By SLH	Date 6/9/2025	Quality Checks	By SLH	Date 6/10/2025	Flow Calibration	By	Date																											
☒ Annual SLH 7/18/25 ☐ Registration ☒ Return from CMI / EE Visual Inspection: ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/ Accessories: ☐ Power cord ☐ Printer Cable ☒ Static Bag ☐ 12V DC Cable Notes: CMI paperwork left in shipping box. SLH			☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value 207 ☒ Flow Verification (L/s) Flow Column # ATP 105 32 mm 0.164 (.139 - .169) 36 mm 0.179 (.156 - .190) 53 mm 0.242 (.228 - .278) 103 mm 0.503 (.447 - .547) ☒ Barometric Pressure Check Gauge ID # 28662 ☒ Stability Checks			Flow Column # ☐ 5L/min - 17mm ☐ 15L/min - 53mm ☐ 30L/min - 103mm ☐ R-Value ☐ Post Calibration Verification (L/s) Flow Column # 32 mm (.139 - .169) 36 mm (.156 - .190) 53 mm (.228 - .278) 103 mm (.447 - .547)																													
			<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #/Exp</th></tr></thead><tbody><tr><td>0.050</td><td>MP5088</td><td>202406K 06/19/2026</td></tr><tr><td>0.080</td><td>MP5089</td><td>202406L 06/19/2026</td></tr><tr><td>0.200</td><td>MP5090</td><td>202406N 06/20/2026</td></tr><tr><td>0.080 DGS</td><td>N/A</td><td>AG429602 10/22/2026</td></tr></tbody></table>	Simulator	Serial #	Lot #/Exp	0.050	MP5088	202406K 06/19/2026	0.080	MP5089	202406L 06/19/2026	0.200	MP5090	202406N 06/20/2026	0.080 DGS	N/A	AG429602 10/22/2026																	
Simulator	Serial #	Lot #/Exp																																	
0.050	MP5088	202406K 06/19/2026																																	
0.080	MP5089	202406L 06/19/2026																																	
0.200	MP5090	202406N 06/20/2026																																	
0.080 DGS	N/A	AG429602 10/22/2026																																	
Calibration Adjustment			By		Department Inspection By SLH																														
Barometric Pressure Gauge ID #			Barometric Pressure ID# 28427																																
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.000</td><td></td><td>N/A</td><td>N/A</td></tr><tr><td>0.040</td><td></td><td></td><td></td></tr><tr><td>0.100</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.300</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>			Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Gauge 1013 Instrument 1015 Mouth Alcohol Solution Lot # 2025-A Acetone Stock Solution Lot # 2024-B				
Simulator	Serial #	Lot #	Expiration																																
0.000		N/A	N/A																																
0.040																																			
0.100																																			
0.200																																			
0.300																																			
0.080 DGS	N/A																																		
☐ Post Calibration Adjustment Stability Checks			<table border="1"><thead><tr><th>Simulator</th><th>Serial Number</th></tr></thead><tbody><tr><td>0.000</td><td>MP6294</td></tr><tr><td>Interferent</td><td>MP5087</td></tr><tr><td>0.050</td><td>MP5088</td></tr><tr><td>0.080</td><td>MP5089</td></tr><tr><td>0.200</td><td>MP5090</td></tr></tbody></table>					Simulator	Serial Number	0.000	MP6294	Interferent	MP5087	0.050	MP5088	0.080	MP5089	0.200	MP5090																
Simulator	Serial Number																																		
0.000	MP6294																																		
Interferent	MP5087																																		
0.050	MP5088																																		
0.080	MP5089																																		
0.200	MP5090																																		
<table border="1"><thead><tr><th>Simulator</th><th>Serial #</th><th>Lot #</th><th>Expiration</th></tr></thead><tbody><tr><td>0.050</td><td></td><td></td><td></td></tr><tr><td>0.080</td><td></td><td></td><td></td></tr><tr><td>0.200</td><td></td><td></td><td></td></tr><tr><td>0.080 DGS</td><td>N/A</td><td></td><td></td></tr></tbody></table>			Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			Attachments ☒ Form 41 ☐ Post-Stability Checks ☒ Stability Checks ☐ Flow Calibration ☒ Calibration Certificate ☒ Form 40 ☐ Calibration Adjustment ☒ Other Form 51												
Simulator	Serial #	Lot #	Expiration																																
0.050																																			
0.080																																			
0.200																																			
0.080 DGS	N/A																																		
Notes/Suggested Service: Return to CMI to fix the broken modem port. It had come from CMI repair for the same issue. SLH 6/17/2025 Tech review-added check to box for annual inspection. SLH 7/18/25			☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC ☐ Return to/Place into Evidentiary Use ☒ Remain Out of Evidentiary Use ☐ Conduct an Agency Inspection Before Evidentiary Use																																
			Phil Nicodemo Digitally signed by Phil Nicodemo Date: 2025.07.18 14:33:26 +04'00'																																
			Shayla Platt Digitally signed by Shayla Platt Date: 2025.07.21 13:56:26 -04'00'																																
			Tech Review / Date Admin Review / Date																																

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: HILLSBOROUGH CO SO
Time of Inspection: 10:34

Date of Inspection: 06/10/2025

Serial Number: 80-000830
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: Exp:	0.08g/210L Test (g/210L) Lot#: Exp:	0.20g/210L Test (g/210L) Lot#: Exp:	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: Exp:

Number of Simulators Used: _____

Remarks:

BYPASS AGENCY INSPECTION, COMPLIANCE UNDETERMINED

The above instrument complies (X) does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



LEANDRA HIGGINBOTHAM

Signature and Printed Name

06/10/2025

Date

Stability Checks

Sat 6/10/2025
80-000830

0.050 g/210L	0.080 g/210L	0.200 g/210L	DGS 0.080 g/210L
0.047 to 0.053 g/210L	0.077 to 0.083 g/210L	0.194 to 0.206 g/210L	0.077 to 0.083 g/210L 50.003 g/210L of Wet
☒	☒	☒	☒
Performed Root Case Analysis	Performed Root Case Analysis	Performed Root Case Analysis	Performed Root Case Analysis
HILLSBOROUGH CO SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000830 06/10/2025 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:16 Control Test 0.049 11:17 Air Blank 0.000 11:17 Control Test 0.048 11:18 Air Blank 0.000 11:19 Control Test 0.049 11:19 Air Blank 0.000 11:20 Control Test Stats Average 0.0487 Std Dev 0.0006 Rel Std Dev(%) 1.1863	HILLSBOROUGH CO SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000830 06/10/2025 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:10 Control Test 0.079 11:11 Air Blank 0.000 11:11 Control Test 0.079 11:12 Air Blank 0.000 11:12 Control Test 0.079 11:13 Air Blank 0.000 11:14 Control Test Stats Average 0.0790 Std Dev 0.0000 Rel Std Dev(%) 0.0000	HILLSBOROUGH CO SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000830 06/10/2025 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:02 Control Test 0.198 11:03 Air Blank 0.000 11:03 Control Test 0.197 11:04 Air Blank 0.000 11:05 Control Test 0.197 11:05 Air Blank 0.000 11:06 Control Test Stats Average 0.1973 Std Dev 0.0005 Rel Std Dev(%) 0.2925	HILLSBOROUGH CO SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000830 06/10/2025 Software: 8100.27 Test g/210L Time Air Blank 0.000 11:30 Control Test 0.078 11:31 Air Blank 0.000 11:31 Control Test 0.078 11:31 Air Blank 0.000 11:32 Control Test 0.078 11:32 Air Blank 0.000 11:33 Control Test Stats Average 0.0780 Std Dev 0.0000 Rel Std Dev(%) 0.0000 DGS
Operator's Signature <i>M. S. Cole</i>	Operator's Signature <i>M. S. Cole</i>	Operator's Signature <i>M. S. Cole</i>	Operator's Signature <i>M. S. Cole</i>

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: HILLSBOROUGH CO SO
Time of Inspection: 14:47

Date of Inspection: 06/13/2025

Serial Number: 80-000830
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202406K Exp: 06/19/2026	0.08g/210L Test (g/210L) Lot#:202406L Exp: 06/19/2026	0.20g/210L Test (g/210L) Lot#:202406N Exp: 06/20/2026	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG429602 Exp: 10/22/2026
0.000	0.049	0.080	0.199	0.078
0.000	0.049	0.079	0.199	0.078
0.000	0.049	0.079	0.200	0.078
0.000	0.048	0.079	0.200	0.078
0.000	0.049	0.080	0.200	0.078
0.000	0.049	0.079	0.199	0.078
0.000	0.049	0.079	0.199	0.078
0.000	0.049	0.079	0.200	0.078
0.000	0.049	0.079	0.200	0.077
0.000	0.049	0.079	0.200	0.077


Standard Deviations	0.0003	0.0004	0.0005	0.0004
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5


Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.


LEANDRA HIGGINBOTHAM
Signature and Printed Name

06/13/2025
Date

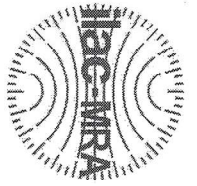

ANSI National Accreditation Board
ACCREDITED
ISO/IEC 17025
FORENSIC CALIBRATION
LABORATORY

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2331 Phillips Road
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000830, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000830</u>	UNCERTAINTY * $\pm$	
Owning Agency:	<u>HILLSBOROUGH CO SO</u>	0.050 g/210 L	0.004
Calibration Date:	<u>06/13/2025</u>	0.080 g/210 L	0.004
Calibration Time:	<u>14:47</u>	0.200 g/210 L	0.007
		0.080 g/210 L Dry Gas Control	0.005

All results are reported in g/210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration. *Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACSI). ACSI prepared and certified these CRMs in accordance with ISO 17034 and ISO/IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

Date 06/13/2025


LEANDRA HIGGINBOTHAM,
Department Inspector

Return Material Authorization

Ship to:

☒ CMI, Inc.

☐ Enforcement Electronics

Shipment to repair facility authorized by: Jenny Hammond on 06/23/2025

Items Returned: Instrument ☒ Supplies ☐ Other ☐ Describe: _____

Instrument Model: Intoxilyzer 8000 Serial Number: 80-000830

Bill To Address:
Hillsborough County Sheriff's Office

Ship to Address:
FDLE-Tallahassee

Reason for Return:

This instrument was returned from your repair relating to the modem port broken.

After our inspection, upload was attempted to perform, but again the modem port is pushed in and the square bracket piece fell off. I am returning to have issue resolved, 1st repair appears unsuccessful.

Please choose one of the following options:

- ☐ 1. I _____, authorize all repairs.
- ☐ 2. I _____, authorize repairs up to \$_____.
- ☒ 3. I require an estimate **BEFORE** any repairs will be authorized and/ or conducted.

Please contact: Name: Jenny Hammond

Phone #: 813-247-8361 Email: jjhammond@teamhcsso.com

ATP Contact Name: LeAndra Higginbotham ATP Email: leandrahigginbotham@fdle.state.fl.us