

Alcohol Testing Program - Instrument Processing Sheet

Agency: PASCO COUNTY SO Instrument Serial Number: 80-001081
 Date In: 1/29/2026 DI Completion Date: 2/5/2026 Ship P/U H/D CMI EE

Intake By: <u>KTS</u> Date: <u>1/29/2026</u>	Quality Checks By: <u>KTS</u> Date: <u>2/4/2026</u>	Flow Adjustment By: _____
<input checked="" type="checkbox"/> Annual <input type="checkbox"/> Dropped Off <input type="checkbox"/> Registration <input type="checkbox"/> Return from CMI / EE <input type="checkbox"/> Training Instrument Visual Inspection <input checked="" type="checkbox"/> Case <input checked="" type="checkbox"/> Handle <input checked="" type="checkbox"/> Keyboard <input checked="" type="checkbox"/> Dry Gas Shelf <input checked="" type="checkbox"/> Feet <input checked="" type="checkbox"/> Breath Tube <input checked="" type="checkbox"/> Ports <input checked="" type="checkbox"/> Screws Tight Other Equipment/Accessories <input type="checkbox"/> Power Cord <input type="checkbox"/> Printer Cable <input type="checkbox"/> Static Bag <input type="checkbox"/> 12V DC Cable Notes:	<input checked="" type="checkbox"/> Breath Tube Screen <input checked="" type="checkbox"/> Replace External O-Rings <input checked="" type="checkbox"/> Instrument Set Up Verified <input checked="" type="checkbox"/> R-Value: <u>232</u> <input checked="" type="checkbox"/> Flow Verification (L/s) Flow Column #: <u>ATP103</u> 32 mm <u>0.144</u> (.139-.169) 36 mm <u>0.160</u> (.156-.190) 53 mm <u>0.230</u> (.228-.278) 103 mm <u>0.500</u> (.447-.547) <input checked="" type="checkbox"/> Barometric Pressure Check Gauge ID #: <u>28421</u> Gauge: <u>1019</u> Instrument: <u>1017</u> <input checked="" type="checkbox"/> Stability Checks	Flow Column #: _____ <input type="checkbox"/> 5L/min – 17mm <input type="checkbox"/> 15L/min – 53mm <input type="checkbox"/> 30L/min – 103mm <input type="checkbox"/> R-Value: _____ <input type="checkbox"/> Post Adjustment Verification (L/S) Flow Column #: _____ 32 mm _____ (.139-.169) 36 mm _____ (.156-.190) 53 mm _____ (.228-.278) 103 mm _____ (.447-.547)

Simulator	Serial #	Lot#/Exp
0.050	MP6291	202406K 6/19/2026
0.080	MP6292	202406L 6/19/2026
0.200	MP6293	202406N 6/20/2026
0.080 DGS	N/A	AG510701 4/17/2027

Maintenance By: _____	Date: _____
<input type="checkbox"/> Battery Replacement <input type="checkbox"/> Dry Gas Regulator Replacement <input type="checkbox"/> Tank Sensor Tare <input type="checkbox"/> Breath Tube Replacement <input type="checkbox"/> Other: _____	

Optical Bench Adjustment By: _____	Department Inspection By: <u>KTS</u>
---	---

Barometric Pressure Gauge: _____ ID#: _____	Barometric Pressure ID#: <u>28421</u>
Gauge: <u>1016</u> Instrument: <u>1014</u>	Mouth Alcohol Solution Lot #: <u>2025-D</u> Exp: <u>9/25/2027</u>
	Acetone Stock Solution Lot #: <u>2025-B</u> Exp: <u>9/22/2027</u>

Simulator	Serial #	Lot #	Expiration	Simulator	Serial Number
0.000		N/A	N/A	0.000	MP5086
0.040				Interferent	MP5087
0.100				0.050	MP5088
0.200				0.080	MP5089
0.300				0.200	MP5090
0.080 DGS	N/A				

<input type="checkbox"/> Post Optical Bench Adjustment Stability Checks Simulator Serial # Lot # Expiration 0.050 0.080 0.200 0.080 DGS N/A	<input checked="" type="checkbox"/> Form 41 <input checked="" type="checkbox"/> Stability Checks <input checked="" type="checkbox"/> Calibration Certificate <input type="checkbox"/> Optical Bench Adjustment <input type="checkbox"/> Post-Stability Checks <input type="checkbox"/> Flow Adjustment <input checked="" type="checkbox"/> Form 40 <input checked="" type="checkbox"/> Other: <u>AI note KTS 1/29/26</u>
--	---

Notes/Suggested Service: Disabled mode- Error code 012 displayed. Called CMI to fix. KTS 1/30/26
 Added electrical tape to breath hose connection. KTS 2/4/26
 Reprinted Forms 40 and 41 due to printer issues. KTS 2/5/26
 Tech Correction: Crossed out AI note attachment. KTS 2/10/26

Instrument Complies with Chapter 11D-8, FAC
 Instrument Does Not Comply with Chapter 11D-8, FAC
 Return to/Place into Evidentiary Use
 Remain Out of Evidentiary Use
 Conduct an Agency Inspection Before Evidentiary Use

Taylor Gutschow <small>Digitally signed by Taylor Gutschow Date: 2026.02.10 10:09:59 -05'00'</small>	LeAndra Higginbotham <small>Digitally signed by LeAndra Higginbotham Date: 2026.02.10 13:39:09 -05'00'</small>
Tech Review	Admin Review

Florida Department of Law Enforcement Alcohol Testing Program

AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: PASCO COUNTY SO
Time of Inspection: 08:41

Date of Inspection: 02/04/2026

Serial Number: 80-001081
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08g/210L Test (g/210L) Lot#: _____ Exp: _____	0.20g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08 g/210L Dry Gas Std Test (g/210L) Lot #: _____ Exp: _____


Number of Simulators Used: _____

Remarks:

BYPASSED TO OPERATE INSTRUMENT. COMPLIANCE NOT DETERMINED.

The above instrument complies (X) does not comply () with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

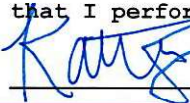

KATIE T SPEARIN

Signature and Printed Name

02/04/2026

Date

Stability Checks

0.050 g/210L 0.047 to 0.053 g/210L	0.080 g/210L 0.077 to 0.083 g/210L	0.200 g/210L 0.194 to 0.206 g/210L	DGS 0.080 g/210L 0.077 to 0.083 g/210L S0.003 g/210L of Wet																																																																																																																																																
<p>PRISCO COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 12/04/2026 Software: 8100.27</p> <p>SN: 80-001361</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>09:01</td></tr> <tr><td>Control Test</td><td>0.049</td><td>09:02</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:02</td></tr> <tr><td>Control Test</td><td>0.048</td><td>09:03</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:04</td></tr> <tr><td>Control Test</td><td>0.047</td><td>09:04</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:05</td></tr> <tr><td>Control Test</td><td>0.048</td><td>09:05</td></tr> <tr><td>Average</td><td>0.048</td><td></td></tr> <tr><td>Std Dev</td><td>0.001</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>2.0833</td><td></td></tr> </tbody> </table> <p><i>Katys</i> Operator's Signature</p>	Test	g/210L	Time	Air Blank	0.000	09:01	Control Test	0.049	09:02	Air Blank	0.000	09:02	Control Test	0.048	09:03	Air Blank	0.000	09:04	Control Test	0.047	09:04	Air Blank	0.000	09:05	Control Test	0.048	09:05	Average	0.048		Std Dev	0.001		Rel. Std Dev(%)	2.0833		<p>PRISCO COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 12/04/2026 Software: 8100.27</p> <p>SN: 80-001361</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>09:16</td></tr> <tr><td>Control Test</td><td>0.079</td><td>09:16</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:17</td></tr> <tr><td>Control Test</td><td>0.078</td><td>09:18</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:18</td></tr> <tr><td>Control Test</td><td>0.078</td><td>09:19</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:19</td></tr> <tr><td>Control Test</td><td>0.078</td><td>09:19</td></tr> <tr><td>Average</td><td>0.078</td><td></td></tr> <tr><td>Std Dev</td><td>0.000</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>0.7370</td><td></td></tr> </tbody> </table> <p><i>Katys</i> Operator's Signature</p>	Test	g/210L	Time	Air Blank	0.000	09:16	Control Test	0.079	09:16	Air Blank	0.000	09:17	Control Test	0.078	09:18	Air Blank	0.000	09:18	Control Test	0.078	09:19	Air Blank	0.000	09:19	Control Test	0.078	09:19	Average	0.078		Std Dev	0.000		Rel. Std Dev(%)	0.7370		<p>PRISCO COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 12/04/2026 Software: 8100.27</p> <p>SN: 80-001081</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>09:11</td></tr> <tr><td>Control Test</td><td>0.198</td><td>09:12</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:13</td></tr> <tr><td>Control Test</td><td>0.196</td><td>09:13</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:14</td></tr> <tr><td>Control Test</td><td>0.196</td><td>09:15</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>09:15</td></tr> <tr><td>Control Test</td><td>0.196</td><td>09:15</td></tr> <tr><td>Average</td><td>0.196</td><td></td></tr> <tr><td>Std Dev</td><td>0.001</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>0.5871</td><td></td></tr> </tbody> </table> <p><i>Katys</i> Operator's Signature</p>	Test	g/210L	Time	Air Blank	0.000	09:11	Control Test	0.198	09:12	Air Blank	0.000	09:13	Control Test	0.196	09:13	Air Blank	0.000	09:14	Control Test	0.196	09:15	Air Blank	0.000	09:15	Control Test	0.196	09:15	Average	0.196		Std Dev	0.001		Rel. Std Dev(%)	0.5871		<p>PRISCO COUNTY SO Intoxilyzer - Alcohol Analyzer Model: 8000 12/04/2026 Software: 8100.27</p> <p>SN: 80-001361</p> <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>08:57</td></tr> <tr><td>Control Test</td><td>0.080</td><td>08:57</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>08:58</td></tr> <tr><td>Control Test</td><td>0.080</td><td>08:58</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>08:59</td></tr> <tr><td>Control Test</td><td>0.081</td><td>08:59</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>08:59</td></tr> <tr><td>Control Test</td><td>0.080</td><td>08:59</td></tr> <tr><td>Average</td><td>0.080</td><td></td></tr> <tr><td>Std Dev</td><td>0.000</td><td></td></tr> <tr><td>Rel. Std Dev(%)</td><td>0.7187</td><td></td></tr> </tbody> </table> <p><i>Katys</i> Operator's Signature</p>	Test	g/210L	Time	Air Blank	0.000	08:57	Control Test	0.080	08:57	Air Blank	0.000	08:58	Control Test	0.080	08:58	Air Blank	0.000	08:59	Control Test	0.081	08:59	Air Blank	0.000	08:59	Control Test	0.080	08:59	Average	0.080		Std Dev	0.000		Rel. Std Dev(%)	0.7187	
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	09:01																																																																																																																																																	
Control Test	0.049	09:02																																																																																																																																																	
Air Blank	0.000	09:02																																																																																																																																																	
Control Test	0.048	09:03																																																																																																																																																	
Air Blank	0.000	09:04																																																																																																																																																	
Control Test	0.047	09:04																																																																																																																																																	
Air Blank	0.000	09:05																																																																																																																																																	
Control Test	0.048	09:05																																																																																																																																																	
Average	0.048																																																																																																																																																		
Std Dev	0.001																																																																																																																																																		
Rel. Std Dev(%)	2.0833																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	09:16																																																																																																																																																	
Control Test	0.079	09:16																																																																																																																																																	
Air Blank	0.000	09:17																																																																																																																																																	
Control Test	0.078	09:18																																																																																																																																																	
Air Blank	0.000	09:18																																																																																																																																																	
Control Test	0.078	09:19																																																																																																																																																	
Air Blank	0.000	09:19																																																																																																																																																	
Control Test	0.078	09:19																																																																																																																																																	
Average	0.078																																																																																																																																																		
Std Dev	0.000																																																																																																																																																		
Rel. Std Dev(%)	0.7370																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	09:11																																																																																																																																																	
Control Test	0.198	09:12																																																																																																																																																	
Air Blank	0.000	09:13																																																																																																																																																	
Control Test	0.196	09:13																																																																																																																																																	
Air Blank	0.000	09:14																																																																																																																																																	
Control Test	0.196	09:15																																																																																																																																																	
Air Blank	0.000	09:15																																																																																																																																																	
Control Test	0.196	09:15																																																																																																																																																	
Average	0.196																																																																																																																																																		
Std Dev	0.001																																																																																																																																																		
Rel. Std Dev(%)	0.5871																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	08:57																																																																																																																																																	
Control Test	0.080	08:57																																																																																																																																																	
Air Blank	0.000	08:58																																																																																																																																																	
Control Test	0.080	08:58																																																																																																																																																	
Air Blank	0.000	08:59																																																																																																																																																	
Control Test	0.081	08:59																																																																																																																																																	
Air Blank	0.000	08:59																																																																																																																																																	
Control Test	0.080	08:59																																																																																																																																																	
Average	0.080																																																																																																																																																		
Std Dev	0.000																																																																																																																																																		
Rel. Std Dev(%)	0.7187																																																																																																																																																		

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: PASCO COUNTY SO
Time of Inspection: 12:11

Date of Inspection: 02/05/2026

Serial Number: 80-001081
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: 202406K Exp: 06/19/2026	0.08g/210L Test (g/210L) Lot#: 202406L Exp: 06/19/2026	0.20g/210L Test (g/210L) Lot#: 202406N Exp: 06/20/2026	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: AG510701 Exp: 04/17/2027
0.000	0.050	0.080	0.200	0.080
0.000	0.049	0.079	0.201	0.080
0.000	0.050	0.080	0.201	0.080
0.000	0.050	0.079	0.201	0.079
0.000	0.049	0.079	0.201	0.080
0.000	0.050	0.080	0.200	0.080
0.000	0.050	0.079	0.201	0.079
0.000	0.050	0.080	0.201	0.080
0.000	0.050	0.080	0.200	0.079
0.000	0.050	0.080	0.200	0.080
Standard Deviations	0.0004	0.0005	0.0005	0.0004

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5

Remarks:

The above instrument complies () does not comply () with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

KATIE T SPEARIN

Signature and Printed Name

02/05/2026

Date



Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2331 Phillips Road
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-001081, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-001081</u>	UNCERTAINTY* \pm	
Owning Agency:	<u>PASCO COUNTY SO</u>	0.050 g/ 210 L	0.004
Calibration Date:	<u>02/05/2026</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>12:11</u>	0.200 g/ 210 L	0.008
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence (k=3).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

02/05/2026

Date

KATIE T SPEARIN,
Department Inspector

FDLE/ATP Form 69 January 2026
Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality