

Alcohol Testing Program - Instrument Processing Sheet

Agency: SUWANNEE COUNTY SO Instrument Serial Number: 80-000780

Date In: 5/20/2026 DI Completion Date: 5/27/2026 ☐ Ship ☒ P/U ☐ H/D ☐ CMI ☐ EE

Intake By: <u>WKP</u> Date: <u>5/20/2026</u>		Quality Checks By: <u>IAS</u> Date: <u>5/22/2026</u>		Flow Adjustment By: _____																																									
☒ Annual ☒ Dropped Off ☐ Registration ☐ Return from CMI / EE ☐ Training Instrument Visual Inspection ☒ Case ☒ Handle ☒ Keyboard ☒ Dry Gas Shelf ☒ Feet ☒ Breath Tube ☒ Ports ☒ Screws Tight Other Equipment/Accessories ☐ Power Cord ☐ Printer Cable ☐ Static Bag ☐ 12V DC Cable Notes:		☒ Breath Tube Screen ☒ Replace External O-Rings ☒ Instrument Set Up Verified ☒ R-Value: <u>103</u> ☒ Flow Verification (L/s) Flow Column #: <u>ATP105</u> 32 mm <u>.144</u> (.139-.169) 36 mm <u>.167</u> (.156-.190) 53 mm <u>.242</u> (.228-.278) 103 mm <u>.507</u> (.447-.547) ☒ Barometric Pressure Check Gauge ID #: <u>28427</u> Gauge: <u>1011</u> Instrument: <u>1013</u> ☒ Stability Checks		Flow Column #: _____ ☐ 5L/min – 17mm ☐ 15L/min – 53mm ☐ 30L/min – 103mm ☐ R-Value: _____ ☐ Post Adjustment Verification (L/S) Flow Column #: _____ 32 mm _____ (.139-.169) 36 mm _____ (.156-.190) 53 mm _____ (.228-.278) 103 mm _____ (.447-.547)																																									
						<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Simulator</th> <th style="width: 20%;">Serial #</th> <th style="width: 25%;">Lot#/Exp</th> <th style="width: 40%;">Maintenance By: _____ Date: _____</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0.050</td> <td rowspan="2">MP5088</td> <td>202603A</td> <td rowspan="2">☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:</td> </tr> <tr> <td>3/3/2028</td> </tr> <tr> <td rowspan="2">0.080</td> <td rowspan="2">MP5089</td> <td>202603B</td> <td rowspan="2">☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:</td> </tr> <tr> <td>3/3/2028</td> </tr> <tr> <td rowspan="2">0.200</td> <td rowspan="2">MP5090</td> <td>202603D</td> <td rowspan="2">☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:</td> </tr> <tr> <td>3/4/2028</td> </tr> <tr> <td rowspan="2">0.080 DGS</td> <td rowspan="2">N/A</td> <td>23725080A1</td> <td rowspan="2">☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:</td> </tr> <tr> <td>10/5/2027</td> </tr> </tbody> </table>		Simulator	Serial #	Lot#/Exp	Maintenance By: _____ Date: _____	0.050	MP5088	202603A	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:	3/3/2028	0.080	MP5089	202603B	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:	3/3/2028	0.200	MP5090	202603D	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:	3/4/2028	0.080 DGS	N/A	23725080A1	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:	10/5/2027														
						Simulator	Serial #	Lot#/Exp	Maintenance By: _____ Date: _____																																				
						0.050	MP5088	202603A	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:																																				
								3/3/2028																																					
0.080	MP5089	202603B	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:																																										
		3/3/2028																																											
0.200	MP5090	202603D	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:																																										
		3/4/2028																																											
0.080 DGS	N/A	23725080A1	☐ Battery Replacement ☐ Dry Gas Regulator Replacement ☐ Tank Sensor Tare ☐ Breath Tube Replacement ☐ Other:																																										
		10/5/2027																																											
Optical Bench Adjustment By: _____ Department Inspection By: <u>SLH</u>																																													
Barometric Pressure Gauge: _____ ID#: _____		Barometric Pressure ID#: <u>28427</u>																																											
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Simulator</th> <th style="width: 20%;">Serial #</th> <th style="width: 25%;">Lot #</th> <th style="width: 40%;">Expiration</th> </tr> </thead> <tbody> <tr> <td>0.000</td> <td></td> <td>N/A</td> <td>N/A</td> </tr> <tr> <td>0.040</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.100</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.200</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.300</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td></td> <td></td> </tr> </tbody> </table>		Simulator	Serial #	Lot #	Expiration	0.000		N/A	N/A	0.040				0.100				0.200				0.300				0.080 DGS	N/A			Gauge: <u>1012</u> Instrument: <u>1013</u> Mouth Alcohol Solution Lot #: <u>2025-D</u> Exp: <u>09/25/2027</u> Acetone Stock Solution Lot #: <u>2025-B</u> Exp: <u>09/22/2027</u>															
Simulator	Serial #	Lot #	Expiration																																										
0.000		N/A	N/A																																										
0.040																																													
0.100																																													
0.200																																													
0.300																																													
0.080 DGS	N/A																																												
☐ Post Optical Bench Adjustment Stability Checks		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Simulator</th> <th style="width: 20%;">Serial #</th> <th style="width: 25%;">Lot #</th> <th style="width: 40%;">Expiration</th> </tr> </thead> <tbody> <tr> <td>0.050</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.200</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td></td> <td></td> </tr> </tbody> </table>		Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A			<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Simulator</th> <th style="width: 20%;">Serial #</th> <th style="width: 25%;">Lot #</th> <th style="width: 40%;">Expiration</th> </tr> </thead> <tbody> <tr> <td>0.050</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.200</td> <td></td> <td></td> <td></td> </tr> <tr> <td>0.080 DGS</td> <td>N/A</td> <td></td> <td></td> </tr> </tbody> </table>		Simulator	Serial #	Lot #	Expiration	0.050				0.080				0.200				0.080 DGS	N/A		
Simulator	Serial #	Lot #	Expiration																																										
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
Simulator	Serial #	Lot #	Expiration																																										
0.050																																													
0.080																																													
0.200																																													
0.080 DGS	N/A																																												
Gauge ID #: _____ Gauge: _____ Instrument: _____		☐ Optical Bench Adjustment																																											
Notes/Suggested Service: Instrument was able to read the pressure of the connected DGS. SLH 5/27/2026		☒ Form 41 ☒ Stability Checks ☒ Calibration Certificate ☐ Post-Stability Checks ☐ Flow Adjustment ☐ Form 40 ☐ Other:																																											
		☒ Instrument Complies with Chapter 11D-8, FAC ☐ Instrument Does Not Comply with Chapter 11D-8, FAC																																											
		☒ Return to/Place into Evidentiary Use ☐ Remain Out of Evidentiary Use																																											
		☒ Conduct an Agency Inspection Before Evidentiary Use																																											
Taylor Gutschow Digitally signed by Taylor Gutschow Date: 2026.06.01 13:45:34 -04'00'		Kaitlyn Spearin Digitally signed by Kaitlyn Spearin Date: 2026.06.04 08:25:08 -04'00'																																											
Tech Review		Admin Review																																											

Stability Checks

0.050 g/210L	0.080 g/210L	0.200 g/210L	DGS 0.080 g/210L																																																																																																																																																
0.047 to 0.053 g/210L	0.077 to 0.083 g/210L	0.194 to 0.206 g/210L	0.077 to 0.083 g/210L ≤0.003 g/210L of Wet																																																																																																																																																
SUWANNEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000780 05/22/2026 Software: 8100.27 <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>13:21</td></tr> <tr><td>Control Test</td><td>0.050</td><td>13:21</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:22</td></tr> <tr><td>Control Test</td><td>0.051</td><td>13:23</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:23</td></tr> <tr><td>Control Test</td><td>0.051</td><td>13:24</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:24</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0507</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>1.1395</td><td></td></tr> </tbody> </table> <i>Isabella Smykowski</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	13:21	Control Test	0.050	13:21	Air Blank	0.000	13:22	Control Test	0.051	13:23	Air Blank	0.000	13:23	Control Test	0.051	13:24	Air Blank	0.000	13:24	Control Test Stats			Average	0.0507		Std Dev	0.0006		Rel Std Dev(%)	1.1395		SUWANNEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000780 05/22/2026 Software: 8100.27 <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>13:16</td></tr> <tr><td>Control Test</td><td>0.080</td><td>13:16</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:17</td></tr> <tr><td>Control Test</td><td>0.079</td><td>13:18</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:18</td></tr> <tr><td>Control Test</td><td>0.080</td><td>13:19</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:19</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0797</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7247</td><td></td></tr> </tbody> </table> <i>Isabella Smykowski</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	13:16	Control Test	0.080	13:16	Air Blank	0.000	13:17	Control Test	0.079	13:18	Air Blank	0.000	13:18	Control Test	0.080	13:19	Air Blank	0.000	13:19	Control Test Stats			Average	0.0797		Std Dev	0.0006		Rel Std Dev(%)	0.7247		SUWANNEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000780 05/22/2026 Software: 8100.27 <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>13:35</td></tr> <tr><td>Control Test</td><td>0.198</td><td>13:35</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:36</td></tr> <tr><td>Control Test</td><td>0.198</td><td>13:37</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:38</td></tr> <tr><td>Control Test</td><td>0.198</td><td>13:38</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:39</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.1980</td><td></td></tr> <tr><td>Std Dev</td><td>0.0000</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.0000</td><td></td></tr> </tbody> </table> <i>Isabella Smykowski</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	13:35	Control Test	0.198	13:35	Air Blank	0.000	13:36	Control Test	0.198	13:37	Air Blank	0.000	13:38	Control Test	0.198	13:38	Air Blank	0.000	13:39	Control Test Stats			Average	0.1980		Std Dev	0.0000		Rel Std Dev(%)	0.0000		SUWANNEE COUNTY SO Intoxilyzer - Alcohol Analyzer Model 8000 SN 80-000780 05/22/2026 Software: 8100.27 <table border="1"> <thead> <tr> <th>Test</th> <th>g/210L</th> <th>Time</th> </tr> </thead> <tbody> <tr><td>Air Blank</td><td>0.000</td><td>13:57</td></tr> <tr><td>Control Test</td><td>0.082</td><td>13:57</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:57</td></tr> <tr><td>Control Test</td><td>0.082</td><td>13:58</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:58</td></tr> <tr><td>Control Test</td><td>0.081</td><td>13:59</td></tr> <tr><td>Air Blank</td><td>0.000</td><td>13:59</td></tr> <tr><td>Control Test Stats</td><td></td><td></td></tr> <tr><td>Average</td><td>0.0817</td><td></td></tr> <tr><td>Std Dev</td><td>0.0006</td><td></td></tr> <tr><td>Rel Std Dev(%)</td><td>0.7070</td><td></td></tr> </tbody> </table> <i>Isabella Smykowski</i> Operator's Signature	Test	g/210L	Time	Air Blank	0.000	13:57	Control Test	0.082	13:57	Air Blank	0.000	13:57	Control Test	0.082	13:58	Air Blank	0.000	13:58	Control Test	0.081	13:59	Air Blank	0.000	13:59	Control Test Stats			Average	0.0817		Std Dev	0.0006		Rel Std Dev(%)	0.7070	
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	13:21																																																																																																																																																	
Control Test	0.050	13:21																																																																																																																																																	
Air Blank	0.000	13:22																																																																																																																																																	
Control Test	0.051	13:23																																																																																																																																																	
Air Blank	0.000	13:23																																																																																																																																																	
Control Test	0.051	13:24																																																																																																																																																	
Air Blank	0.000	13:24																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0507																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	1.1395																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	13:16																																																																																																																																																	
Control Test	0.080	13:16																																																																																																																																																	
Air Blank	0.000	13:17																																																																																																																																																	
Control Test	0.079	13:18																																																																																																																																																	
Air Blank	0.000	13:18																																																																																																																																																	
Control Test	0.080	13:19																																																																																																																																																	
Air Blank	0.000	13:19																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0797																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.7247																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	13:35																																																																																																																																																	
Control Test	0.198	13:35																																																																																																																																																	
Air Blank	0.000	13:36																																																																																																																																																	
Control Test	0.198	13:37																																																																																																																																																	
Air Blank	0.000	13:38																																																																																																																																																	
Control Test	0.198	13:38																																																																																																																																																	
Air Blank	0.000	13:39																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.1980																																																																																																																																																		
Std Dev	0.0000																																																																																																																																																		
Rel Std Dev(%)	0.0000																																																																																																																																																		
Test	g/210L	Time																																																																																																																																																	
Air Blank	0.000	13:57																																																																																																																																																	
Control Test	0.082	13:57																																																																																																																																																	
Air Blank	0.000	13:57																																																																																																																																																	
Control Test	0.082	13:58																																																																																																																																																	
Air Blank	0.000	13:58																																																																																																																																																	
Control Test	0.081	13:59																																																																																																																																																	
Air Blank	0.000	13:59																																																																																																																																																	
Control Test Stats																																																																																																																																																			
Average	0.0817																																																																																																																																																		
Std Dev	0.0006																																																																																																																																																		
Rel Std Dev(%)	0.7070																																																																																																																																																		

Florida Department of Law Enforcement Alcohol Testing Program

DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: SUWANNEE COUNTY SO
Time of Inspection: 13:51

Date of Inspection: 05/27/2026

Serial Number: 80-000780
Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202603A Exp: 03/03/2028	0.08g/210L Test (g/210L) Lot#:202603B Exp: 03/03/2028	0.20g/210L Test (g/210L) Lot#:202603D Exp: 03/04/2028	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:23825080A1 Exp: 10/05/2027
0.000	0.049	0.078	0.196	0.082
0.000	0.049	0.079	0.196	0.082
0.000	0.050	0.079	0.196	0.082
0.000	0.049	0.079	0.196	0.082
0.000	0.049	0.079	0.197	0.082
0.000	0.049	0.080	0.196	0.081
0.000	0.048	0.079	0.197	0.082
0.000	0.048	0.080	0.197	0.081
0.000	0.049	0.080	0.197	0.082
0.000	0.049	0.079	0.196	0.082


Standard Deviations	0.0005	0.0006	0.0005	0.0004
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0005 Number of Simulators Used: 5

Remarks:

The above instrument complies (☒) does not comply (☐) with Chapter 11D-8, FAC.


I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.



LEANDRA HIGGINBOTHAM

Signature and Printed Name

05/27/2026
Date

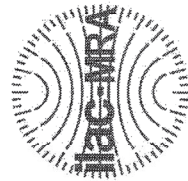

Calibration Certificate

Florida Department of Law Enforcement
Alcohol Testing Program
2331 Phillips Road
Tallahassee, FL 32308

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000780, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000780</u>	UNCERTAINTY* $\pm$	
Owning Agency:	<u>SUWANNEE COUNTY SO</u>	0.050 g/210 L	0.004
Calibration Date:	<u>05/27/2026</u>	0.080 g/210 L	0.004
Calibration Time:	<u>13:51</u>	0.200 g/210 L	0.008
		0.080 g/210 L Dry Gas Control	0.005

All results are reported in g/210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within ± 0.005 or 5%, whichever is greater, of the target alcohol concentration.

*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence ($k=3$).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/IEC 17025 standards.

This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

05/27/2026

Date


LEANDRA MCGINBOTHAM,

Department Inspector

FDLE/ATP Form 69 January 2026

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality