



# Florida Department of Law Enforcement Alcohol Testing Program

## AGENCY INSPECTION REPORT - INTOXILYZER 8000

Agency: PINECREST PD  
Time of Inspection: 11:46

Date of Inspection: 02/11/2026

Serial Number: 80-000909  
Software: 8100.27

Check or Test	YES	NO
Date and/or Time Adjusted		No
Diagnostic Check (Pre-Inspection): OK		No
Alcohol Free Subject Test: 0.000		No
Mouth Alcohol Test: Slope Not Met		No
Interferent Detect Test: Interferent Detect		No
Diagnostic Check (Post-Inspection): OK		No

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08g/210L Test (g/210L) Lot#: _____ Exp: _____	0.20g/210L Test (g/210L) Lot#: _____ Exp: _____	0.08 g/210L Dry Gas Std Test (g/210L) Lot#: _____ Exp: _____


Number of Simulators Used: \_\_\_\_\_

**Remarks:**

AI NOT CONDUCTED. COMPLIANCE NOT DETERMINED.

The above instrument complies (  ) does not comply (  ) with Chapter 11D-8, FAC.

I certify that I hold a valid Florida Department of Law Enforcement Agency Inspector Permit and that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

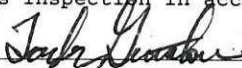

TAYLOR D GUTSCHOW

Signature and Printed Name

02/11/2026  
Date

PINECREST PD  
Intoxilyzer - Alcohol Analyzer  
Model 8000 SN 80-000909  
02/11/2026  
Software: 8100.27

Flow Rate Calibration\*\*\*\*\*

1: Rate (Liters/min) = 5  
SQRT(Diff) ) = 6.324  
2: Rate (Liters/min) = 15  
SQRT(Diff) ) = 11.574  
3: Rate (Liters/min) = 30  
SQRT(Diff) ) = 21.188  
Dependent Data Scale Factor = 100000 L/min  
Independent Data Scale Factor = 256  
Rounded Slope = 651  
Rounded Intercept = -505244  
Correlation = 0.99860

Flow Calibration, Adjustment  
ML

# Stability Checks

0.05g/210L 0.047 to 0.053	0.08g/210L 0.077 to 0.083	0.20g/210L 0.194 to 0.206	DGS 0.08g/210L 0.077 to 0.083	50.003 of Wet
<p>Printed to External Printer. Will attach.</p> <p>MC 2/11/26</p>	<p>0.08g/210L 0.077 to 0.083</p> <p>MC</p>	<p>0.20g/210L 0.194 to 0.206</p> <p>MC</p>	<p>DGS 0.08g/210L 0.077 to 0.083</p> <p>MC</p>	<p>50.003 of Wet</p>

PINECREST PD  
Intoxilyzer - Alcohol Analyzer  
Model 8000 SN 80-000909  
02/11/2026  
Software: 8100.27

Test	g/210L	Time
Air Blank	0.000	11:48
Control Test	0.050	11:48
Air Blank	0.000	11:49
Control Test	0.049	11:50
Air Blank	0.000	11:50
Control Test	0.049	11:51
Air Blank	0.000	11:51
Control Test Stats		
Average	0.0493	
Std Dev	0.0006	
Rel Std Dev(%)	1.1703	



---

Operator's Signature

# Florida Department of Law Enforcement Alcohol Testing Program

## DEPARTMENT INSPECTION REPORT - INTOXILYZER 8000

Agency: PINECREST PD

Time of Inspection: 15:30

Date of Inspection: 02/11/2026

Serial Number: 80-000909

Software: 8100.27

Check or Test	YES	NO	Check or Test	YES	NO
Diagnostic Check (Pre-Inspection): OK	Yes		Date and/or Time Adjusted		No
Minimum Sample Volume Check: OK	Yes		Barometric Pressure Sensor Check: OK	Yes	
Alcohol Free Subject Test: 0.000	Yes		Mouth Alcohol Test: Slope Not Met	Yes	
Interferent Detect Test: Interferent Detect	Yes		Diagnostic Check (Post-Inspection): OK	Yes	

Alcohol Free Test (g/210L)	0.05g/210L Test (g/210L) Lot#:202406K Exp: 06/19/2026	0.08g/210L Test (g/210L) Lot#:202406L Exp: 06/19/2026	0.20g/210L Test (g/210L) Lot#:202406N Exp: 06/20/2026	0.08 g/210L Dry Gas Std Test (g/210L) Lot#:AG526603 Exp: 09/23/2027
0.000	0.049	0.080	0.198	0.079
0.000	0.049	0.079	0.199	0.079
0.000	0.049	0.079	0.199	0.079
0.000	0.048	0.080	0.198	0.079
0.000	0.049	0.080	0.198	0.079
0.000	0.048	0.080	0.199	0.078
0.000	0.049	0.080	0.199	0.079
0.000	0.049	0.080	0.199	0.079
0.000	0.049	0.080	0.199	0.079
0.000	0.049	0.080	0.199	0.079
0.000	0.049	0.080	0.198	0.078


Standard Deviations	0.0004	0.0004	0.0005	0.0004
---------------------	--------	--------	--------	--------

Average Standard Deviation of 0.05, 0.08 and 0.20 g/210L Tests: 0.0004 Number of Simulators Used: 5

Remarks:

The above instrument complies (  ) does not comply (  ) with Chapter 11D-8, FAC.

I certify that I performed this inspection in accordance with the provisions of Chapter 11D-8, FAC.

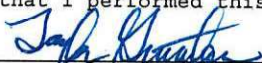

TAYLOR D GUTSCHOW

Signature and Printed Name

02/11/2026  
Date



# Calibration Certificate

Florida Department of Law Enforcement  
Alcohol Testing Program  
4700 Terminal Drive, Suite 1  
Ft. Myers, FL 33907

This is to certify the calibration of Intoxilyzer 8000 serial number 80-000909, manufactured by CMI, Inc. was calibrated in accordance with FDLE/ATP Form 36 - Department Inspection Procedures - Intoxilyzer 8000.

Serial Number:	<u>80-000909</u>	UNCERTAINTY* $\pm$	
Owning Agency:	<u>PINECREST PD</u>	0.050 g/ 210 L	0.004
Calibration Date:	<u>02/11/2026</u>	0.080 g/ 210 L	0.004
Calibration Time:	<u>15:30</u>	0.200 g/ 210 L	0.008
		0.080 g/ 210 L Dry Gas Control	0.005

All results are reported in g/ 210 L.

Bias is limited by calibration acceptance criteria. All calibration results must be within  $\pm 0.005$  or 5%, whichever is greater, of the target alcohol concentration.

\*Uncertainty is based on fleet-wide data and is expressed to a 99.73% level of confidence (k=3).

The instrument results before and after any adjustment are found in the associated pre and post stability checks.

## TRACEABILITY INFORMATION

This instrument was calibrated using solutions prepared by Alcohol Countermeasure Systems, Inc. (ACS). ACS prepared and certified these CRMs in accordance with ISO 17034 and ISO/ IEC 17025 Standards.

Simulator temperatures are traceable to NIST. Simulator temperatures are checked with NIST traceable digital thermometers calibrated by Precision Metrology in accordance with ISO/ IEC 17025 standards.

Dry gas control measurements are traceable to NIST through the use of CRMs supplied by an accredited CRM supplier. The supplier of dry gas standard controls prepared and certified the CRMs in accordance with ISO Guide 34 and ISO/ IEC 17025 standards. This document shall not be reproduced except in full, without written approval of the Florida Department of Law Enforcement Alcohol Testing Program.

Taylor  
Gutschow  
Digitally signed by Taylor Gutschow  
Date: 2026.02.11 16:01:15 -05'00'

02/11/2026

Gutschow

Date

TAYLOR D GUTSCHOW,

Department Inspector

FDLE/ATP Form 69 January 2026

Issuing Authority: Alcohol Testing Program

Service • Integrity • Respect • Quality